 


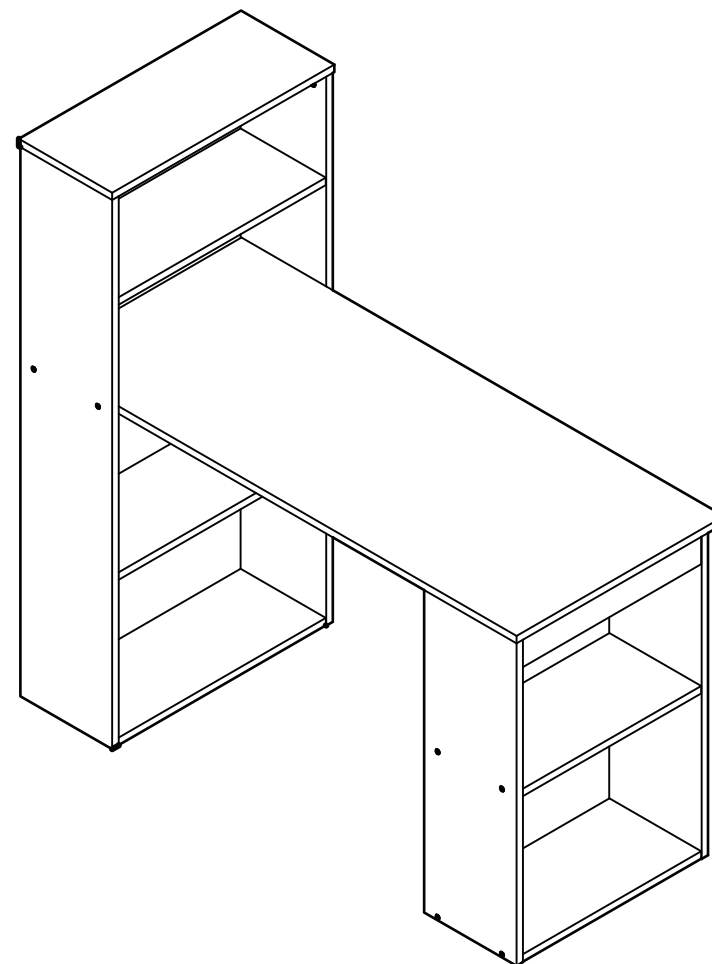

Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.










US: cs.us@costway.com
UK: cs.uk@costway.com

 
USER'S MANUAL

 
 
Computer Desk CB10301

 

 
 
 
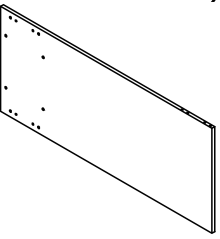 


 
 
 
 
 


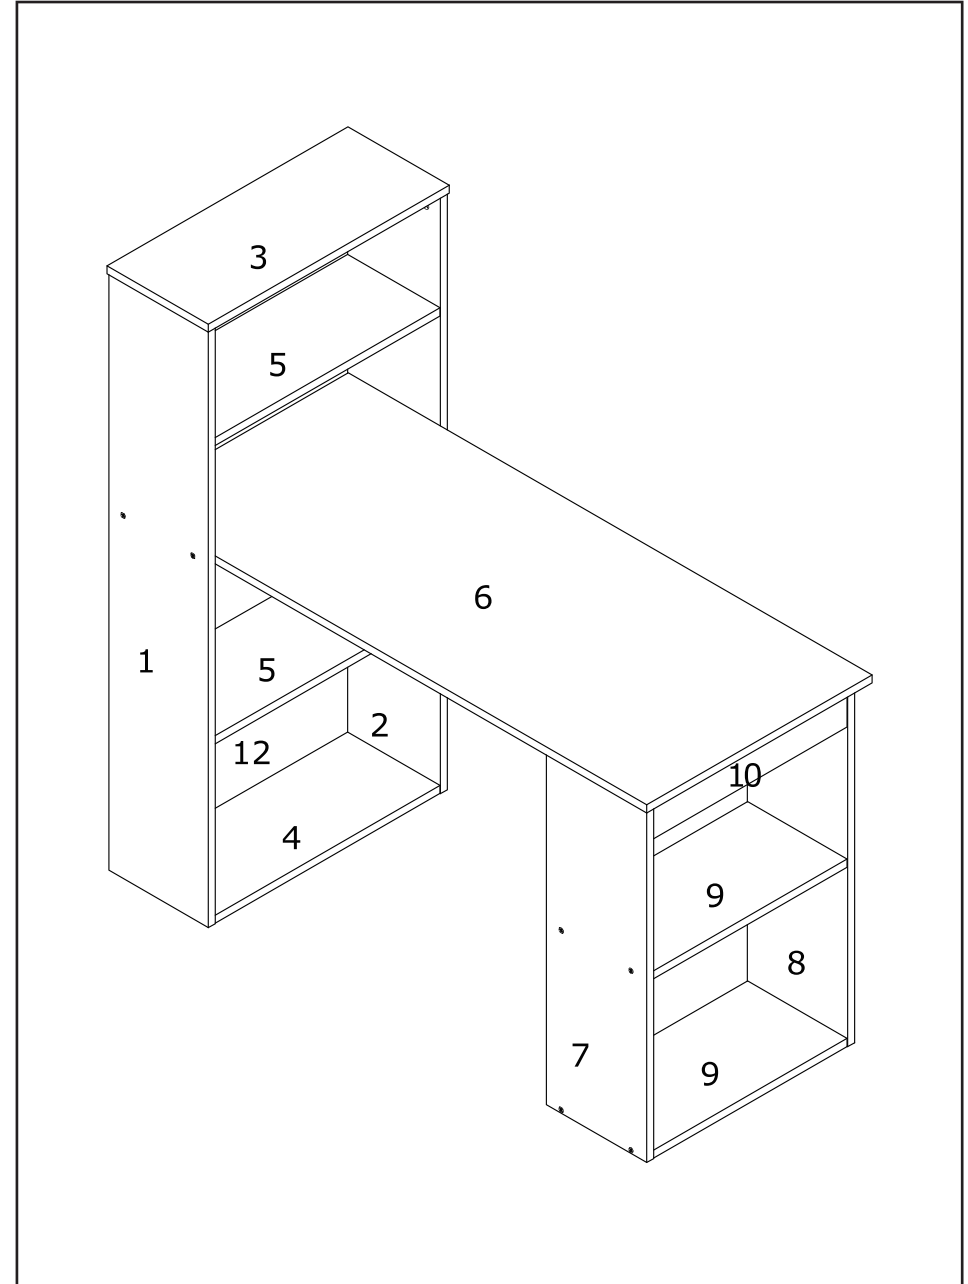 


 
 
 
 
 
Before You Start

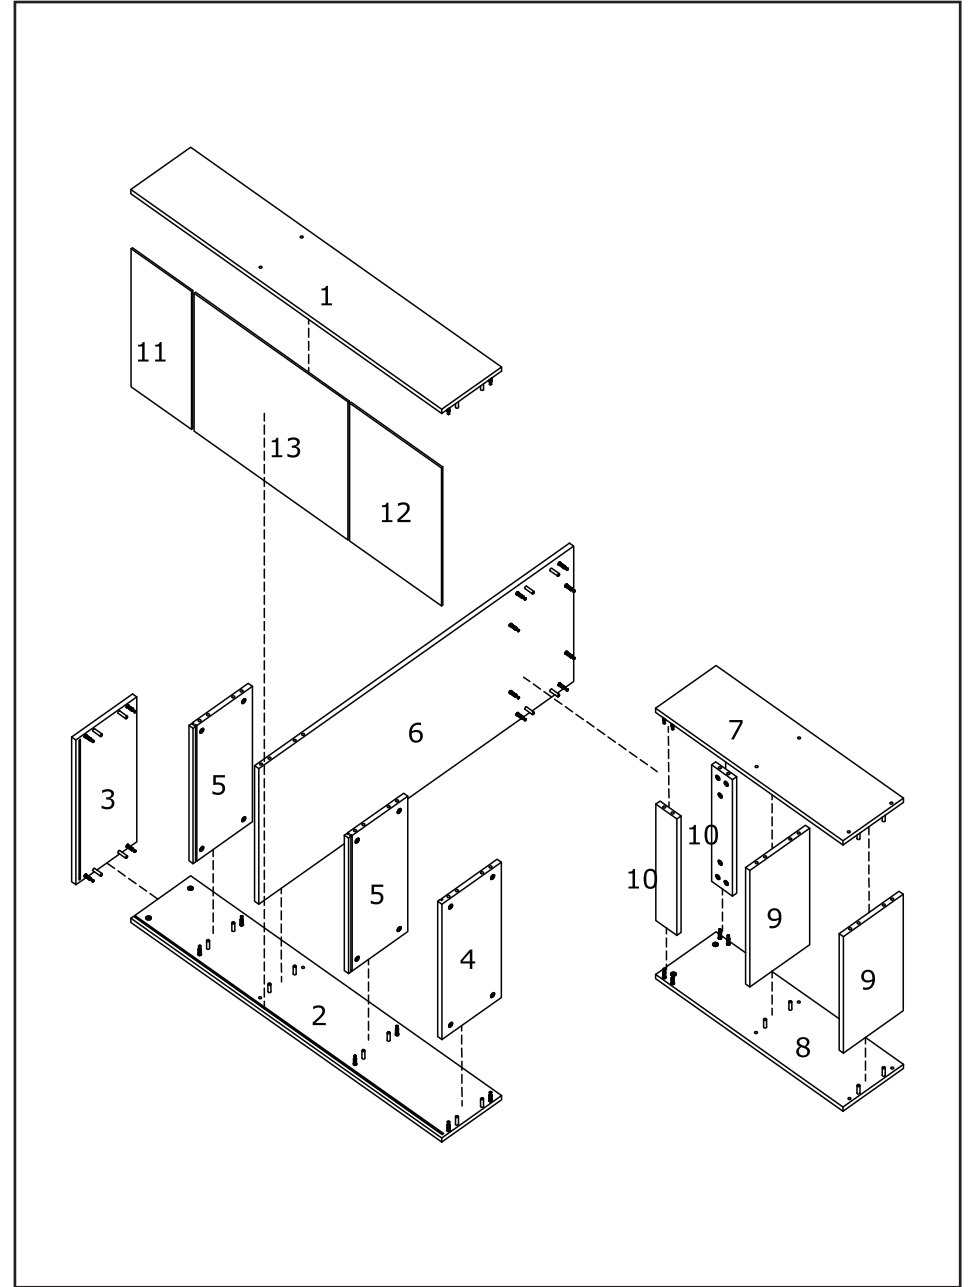 
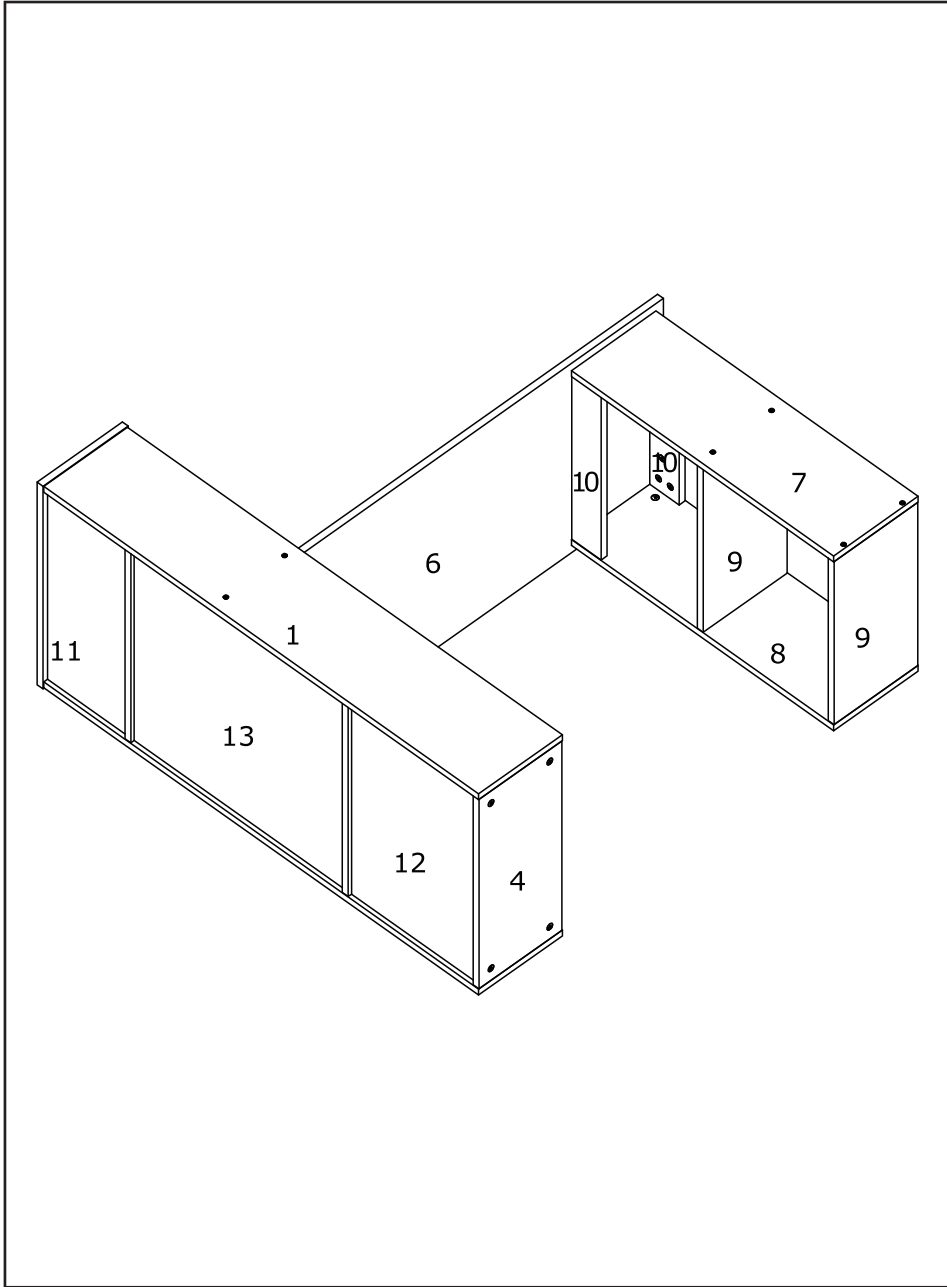 
-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

 
 


 
 


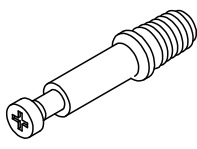1  x1	2  x1	3  x1	
4  x1	5  x2	6  x1	
7  x1	8  x1	9  x2	
10  x2	11  x1	12  x1	13  x1

A  x32	B  8*40mm x32	C  x32
D  Optional accessory x44	E  x2	F M7*38mm  x12
G  M3.5*14mm x12	H  x12	

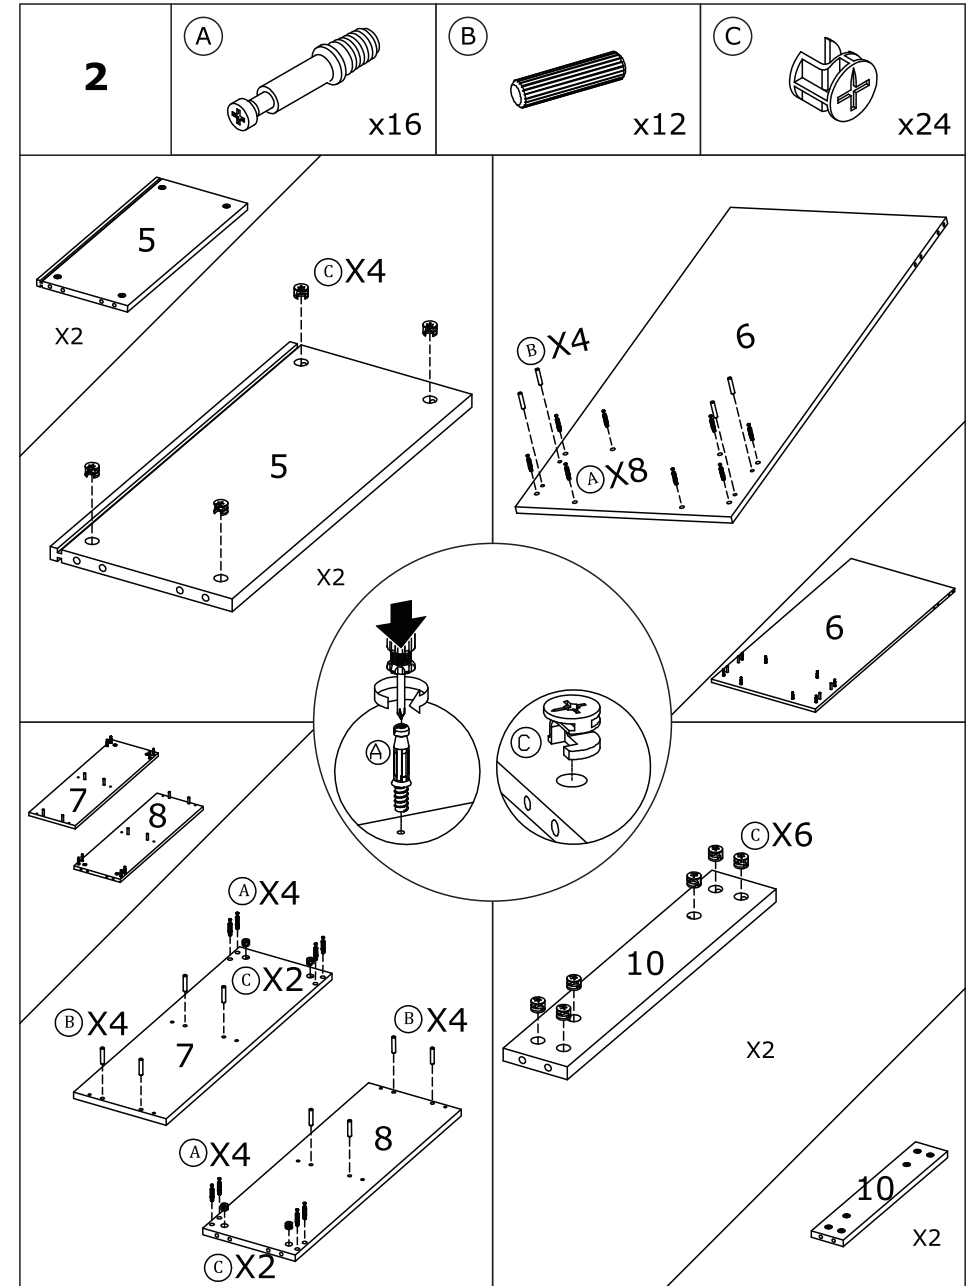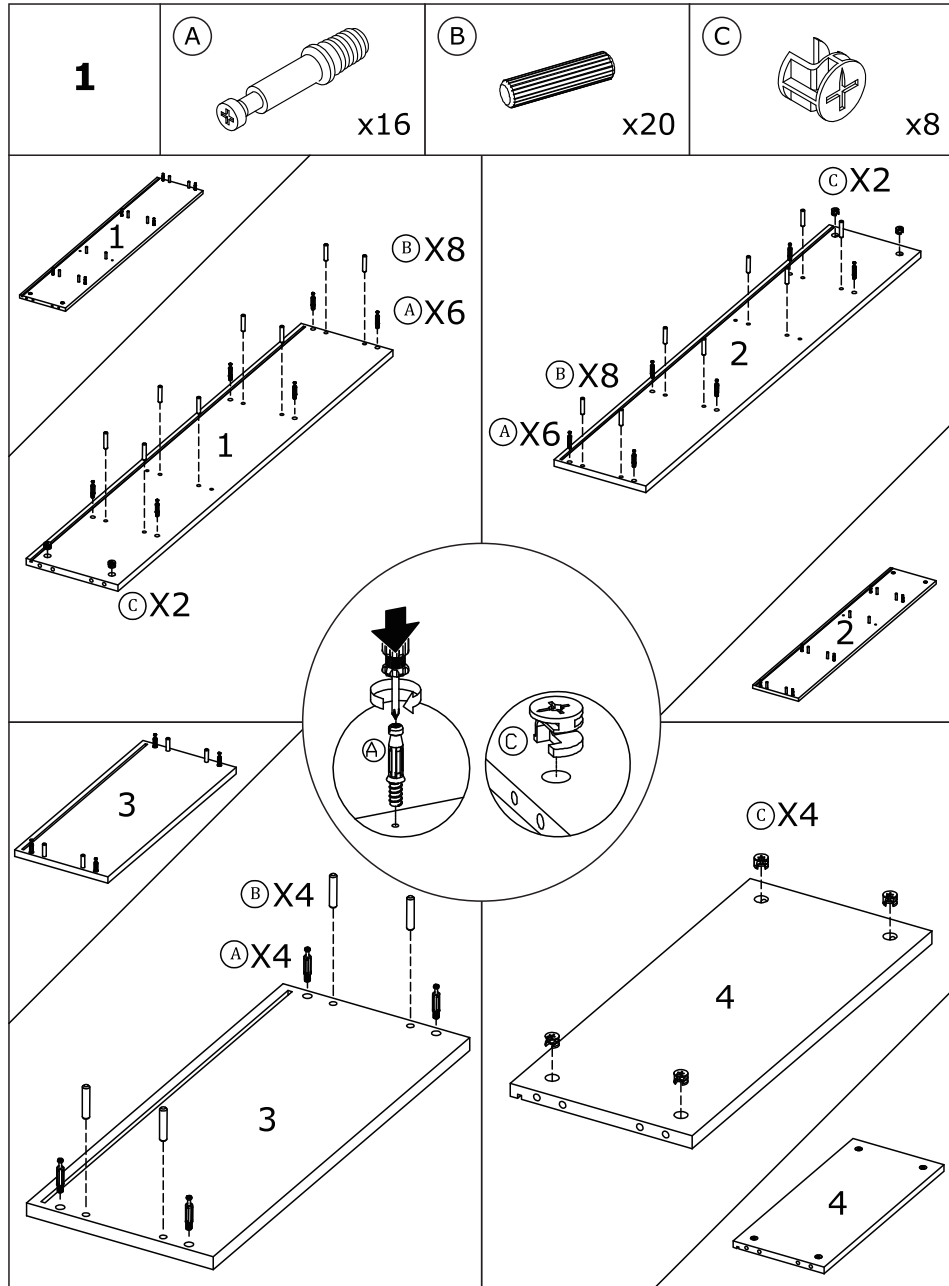 


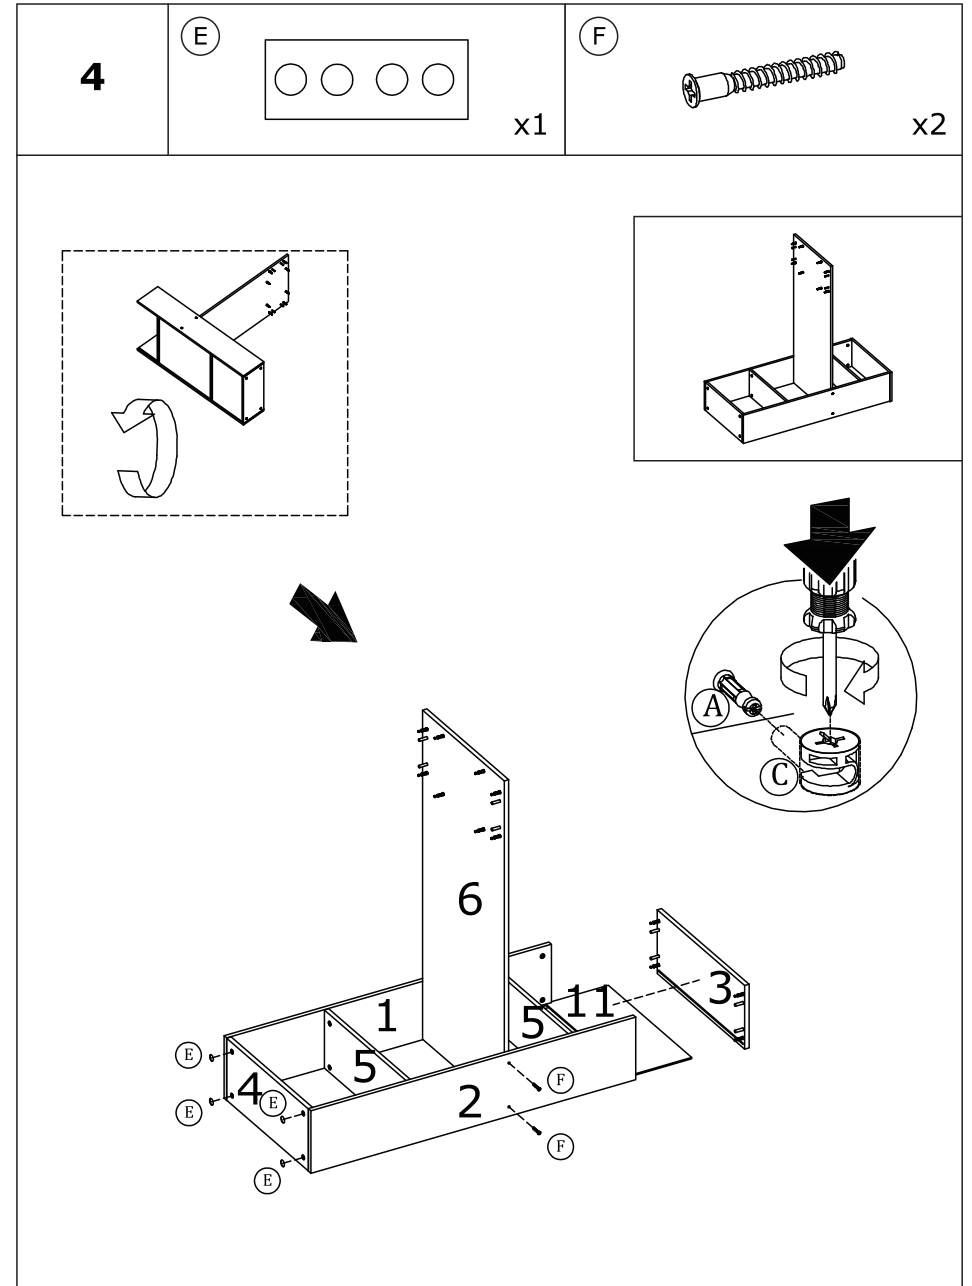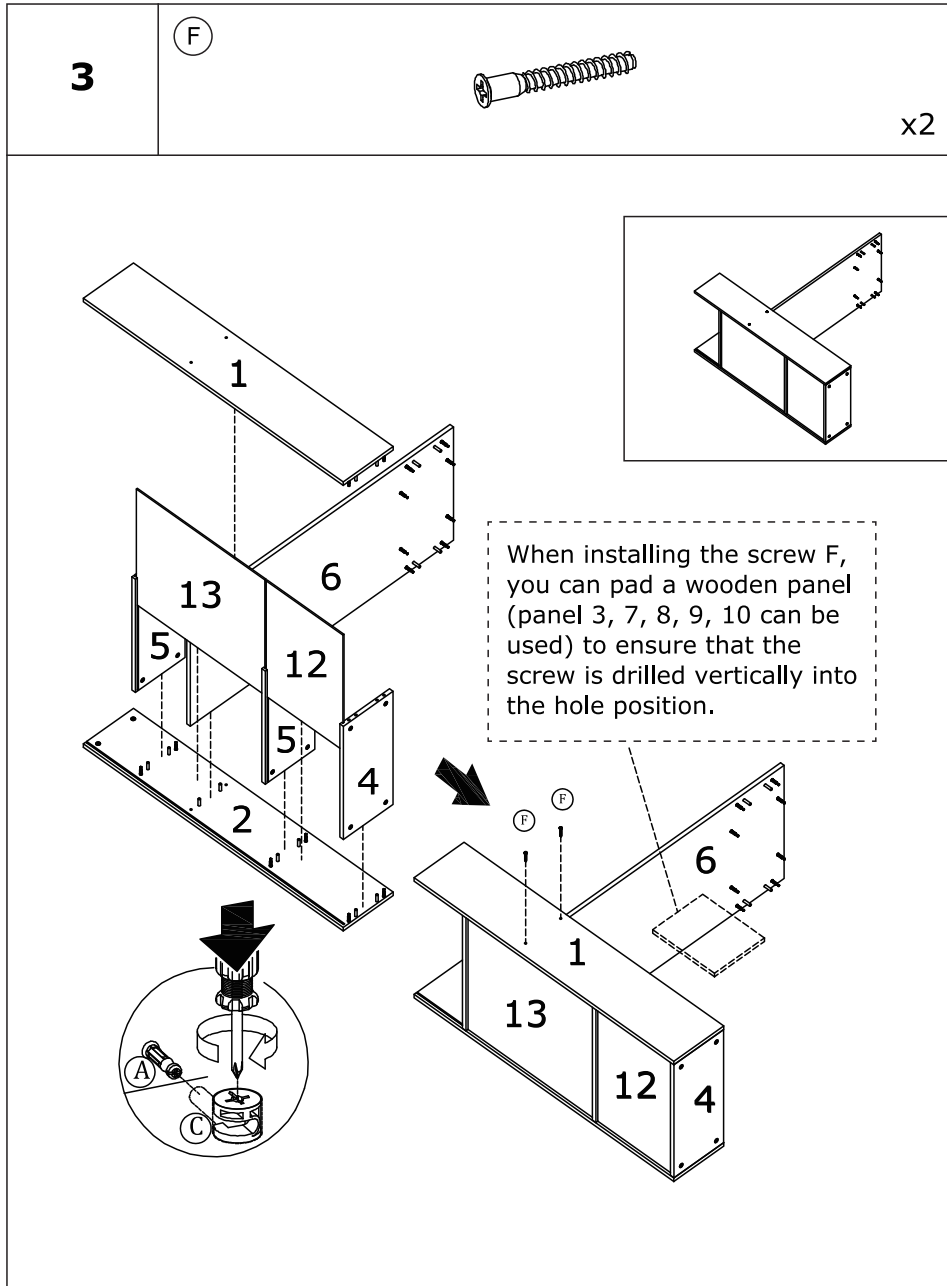

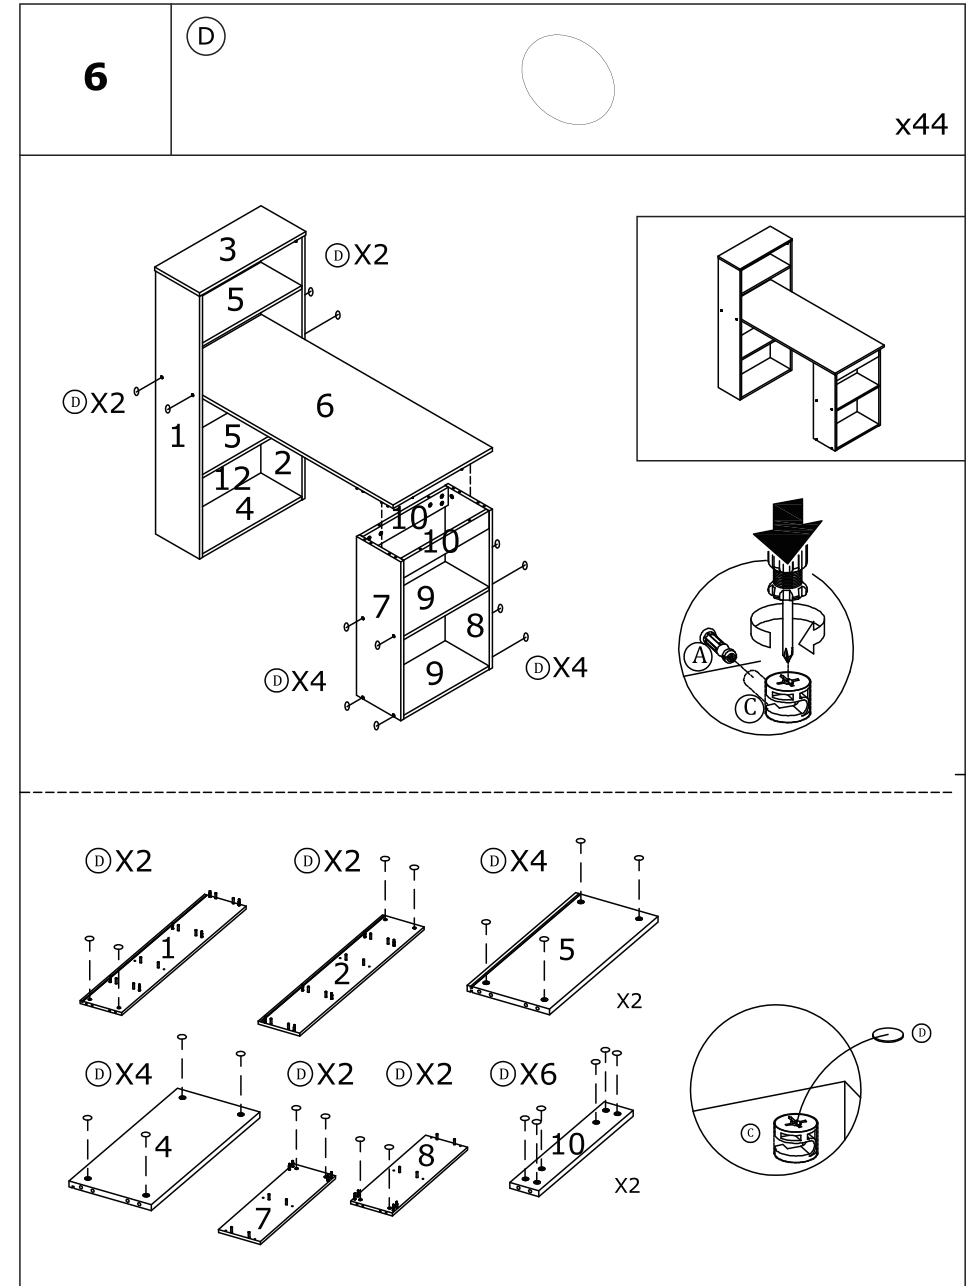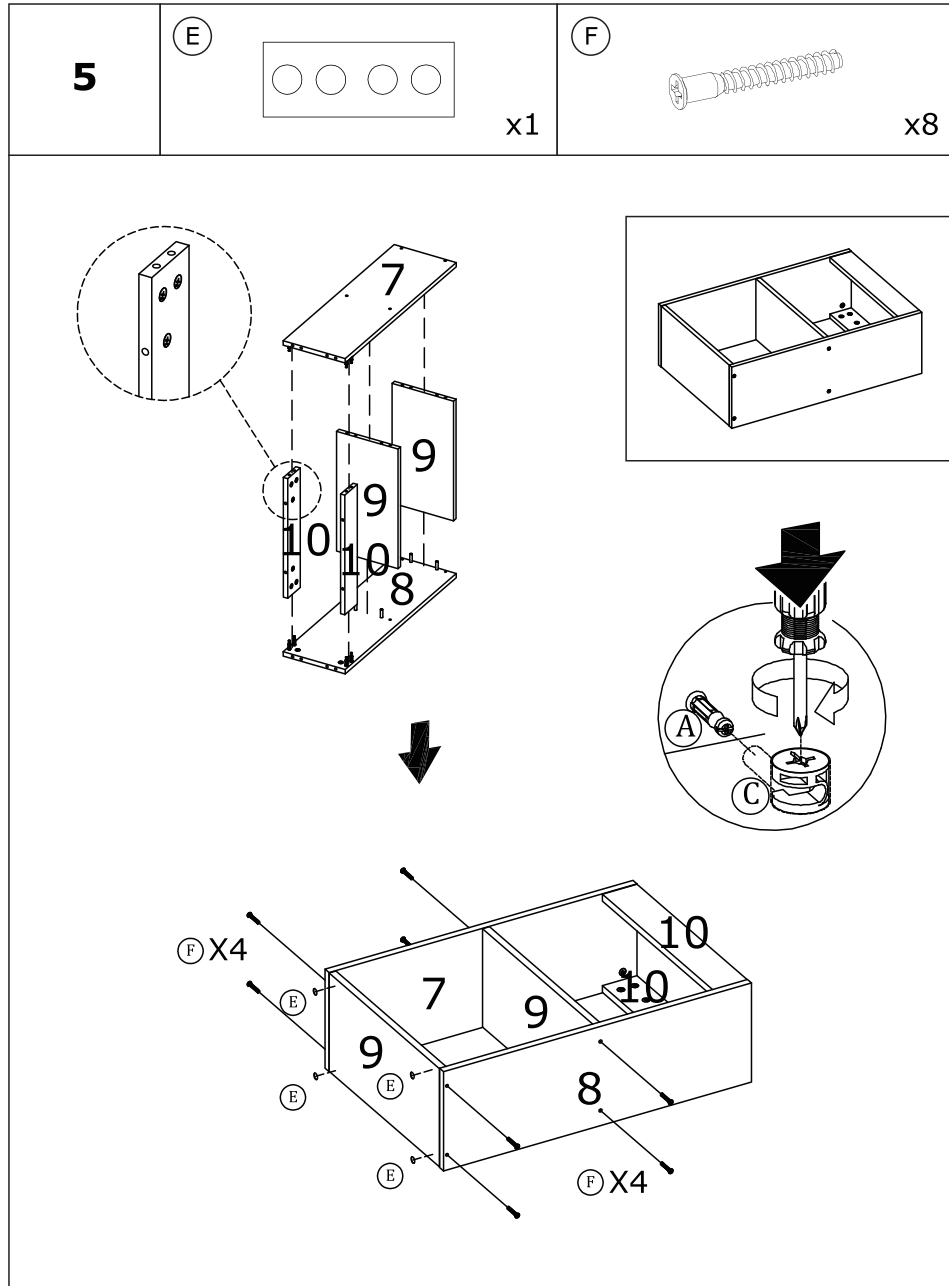

 
7

(G)



x12

(H)



x12

