



**USER'S MANUAL**  
**10'x10' Folding Canopy Tent**  
**OP70658**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway**

Visit us: [www.costway.com](http://www.costway.com)



# Contact Us!

**Do NOT return this item.**

Contact our friendly customer service department for help first.




## Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

## Replacement

Part	Description
A	Top Cap
B	Eave Assembly
C	Ceiling Assembly
D	Center Pole
E	Leg Assembly
F	Wheeled Storage Bag
G	Fabric Top
H	Stake
I	Guy Rope

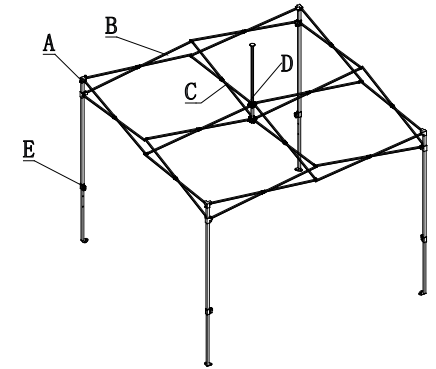

### IMPORTANT:

Carefully read and follow the instructions provided with this product.

### WARNING:


Keep all flame and heat sources away from this canopy top and sidewall fabric. This canopy top is made with flame resistant fabric which meets CPAI-84 specification. It is NOT FIRE PROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to this fabric may render the flame resistant properties ineffective.

### WARNING:


Do not set-up or leave the canopy unattended in the following conditions: gusty wind, rain, hail, sleet, snow, drizzle, or any other harsh weather conditions. Doing so may cause damage to the entire canopy and will void the warranty.

## Set Up The Canopy


1. Stand frame upright. Starting at the corners, with partner standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.

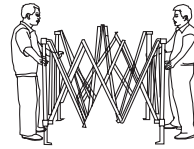


2. Place the Main Canopy over the top frame. Use the Velcro pads to secure each corner of the canopy to the frame under the plastic leg caps.

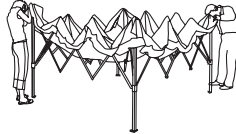

3. Each partner should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger or pull backward too hard as this may result in the bending of cross beams.

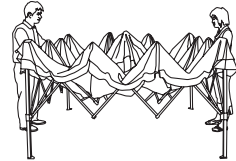


4. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand. Repeat this at the rest of corners.

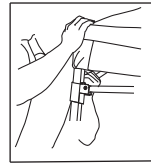


5. Lift two adjacent outer legs and pull out inner legs gently until spring loaded snap button pops in position. Repeat on the other two legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully depress the push button at knuckle and slowly pull out the inner leg until the snap button pops in next position. Repeat on the other legs. Be careful do not overpull the leg and exceed maximum height.



6. Stake down the gazebo by driving the 4 small anchors through one of the holes on each base foot. This will keep the leg from moving sideways in mild weather conditions.

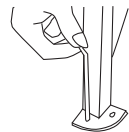

7. Measure out from the leg to a proper distance and secure the four big anchors to ground at a 45 degree angle. Tie up one end of each guy rope to the triangular shaped rope holder located on the outside fabric corners. Tie the other end of each rope to the anchor on the ground. Make sure the guy ropes have the proper tension.

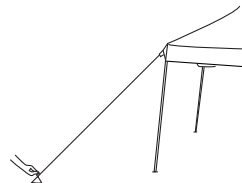


## Take Down The Canopy


1. Release each push button on each leg and shorten the frame to its original height prior to extending the legs during set-up.




2. **CRITICAL STEP TO AVOID FRAME DAMAGE!** Release sliders at all four corners by gently depressing the push button and pushing the sliders down a bit.

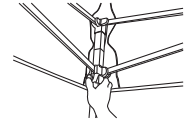

 
3. With partner on the opposite side, grasp the middle section of the frame and lift up slightly.



4. Walk forward slowly allowing for the frame to fold inward and close. Be careful not to pinch fingers or hands as you close the frame.

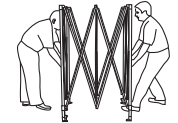


5. Completely close the frame with or without the canopy attached.

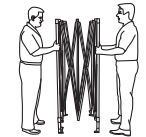

6. Place the frame into the storage bag slowly until gazebo fits comfortably. Zip the storage bag completely shut. Be sure the gazebo is completely dry before storage.



7. Wheel your gazebo to your desired storage area.

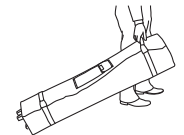

## Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!  
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you  
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

*5 Star Rating*



We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.

