

SV440_DOUBLE

SV450_DOUBLE

SV460_DOUBLE

POLTI Vaporetto®

MANUALE DI ISTRUZIONI

INSTRUCTION **MANUAL**
MANUEL D'INSTRUCTIONS

MANUAL DE INSTRUCCIONES
BEDIENUNGSANLEITUNG

MANUAL DE INSTRUÇÕES

REGISTRA IL TUO PRODOTTO
REGISTER YOUR PRODUCT
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO
www.polti.com

 **POLTI®**
NATURAL HOME FEELING

**POLTI VAPORETTO
SV440_DOUBLE**
**POLTI VAPORETTO
SV450_DOUBLE**



**POLTI VAPORETTO
SV460_DOUBLE**



TUBO FLESSIBILE VAPORE
FLEXIBLE STEAM HOSE
FLESIBILE VAPEUR
TUBO FLEXIBILE VAPOR
ANSCHLUSSSCHLAUCH
TUBO FLEXÍVEL DE VAPOR



ADATTATORE ACCESSORI
ACCESSORIES ADAPTER
RACCORD ACCESSOIRES
CONEXION ACCESORIOS
DAMPFDÜSENANSCHLUSS
ADAPTADOR DE ACESSÓRIOS



TELAIO PER TAPPETI E MOQUETTE
FRAME FOR CARPETS AND RUGS
CHÂSSIS POUR TAPIS ET MOQUETTE
CHASIS PARA ALFOMBRAS Y MOQUETAS
RAHMEN FÜR TEPPICHE UND TEPPICHBÖDEN
ESTRUTURA PARA TAPETES E ALCATIFAS



N. 4 Pz. only SV460_DOUBLE

N. 3 Pz. only SV450_DOUBLE

N. 2 Pz. only SV440_DOUBLE

PANNO PAVIMENTI
FLOOR CLOTH
SERPILLIÈRE POUR SOLS
PAÑO DE SUELOS
BODENREINIGUNGSTUCH
PANO PAVIMENTOS



SPAZZOLA PICCOLA CON TERGIVETRO
SMALL BRUSH WITH WINDOW CLEANER
PETITE BROSSSE AVEC RACLETTE
CEPILLO PEQUEÑO CON LIMPIACRISTALES
KLEINE BÜRSTE MIT FENSTERWISCHER
ESCOVA PEQUENA COM LIMPA-VIDROS



CONCENTRATORE VAPORE
STEAM CONCENTRATOR
CONCENTRATEUR VAPEUR
CONCENTRADOR VAPOR
DAMPFKONZENTRIERER
CONCENTRADOR DE VAPOR



SPAZZOLINO TONDO GRANDE CON SETOLE IN NYLON
LARGE ROUND BRUSH WITH NYLON BRISTLES
GRANDE BROSSSE RONDE AVEC POILS EN NYLON
CEPILLO REDONDO GRANDE CON CERDAS DE NYLON
GROBE RUNDBÜRSTE MIT NYLONBORSTEN
ESCOVA REDONDA GRANDE COM CERDAS DE NYLON



ACCESSORIO PER FUGHE
ACCESSORY FOR GROUTING
ACCESSOIRE POUR LES JOINTS
ACCESORIO PARA JUNTAS
FUGENZUBEHÖR
ACESSÓRIO PARA JUNTAS



SPAZZOLINO TONDO PICCOLO CON SETOLE IN NYLON
SMALL ROUND BRUSH WITH NYLON BRISTLES
PETITE BROSSSE RONDE AVEC POILS EN NYLON
CEPILLO REDONDO PEQUEÑO CON CERDAS DE NYLON
KLEINE RUNDBÜRSTE MIT NYLONBORSTEN
ESCOVINHA REDONDA PEQUENA COM CERDAS EM NYLON



LANCIA VAPORE
STEAM LANCE
LANCE VAPEUR
LANZA VAPOR
DAMPFDÜSE
LANÇA



only SV450_DOUBLE

only SV460_DOUBLE

SPAZZOLINO TONDO PICCOLO CON SETOLE IN OTTONE
SMALL ROUND BRUSH WITH BRASS BRISTLES
PETITE BROSSSE RONDE AVEC POILS EN LAITON
CEPILLO REDONDO PEQUEÑO CON CERDAS DE LATON
KLEINE RUNDBÜRSTE MIT MESSINGBORSTEN
ESCOVA REDONDA PEQUENA COM CERDAS DE LATÃO



N. 2 Pz. only SV460_DOUBLE

CUFFIA PER SPAZZOLA PICCOLA
SOCKETTE FOR SMALL BRUSH
BONNETTE POUR PETITE BROSSSE
FUNDA PARA CEPILLO PEQUEÑO
HAUBE FÜR KLEINE BÜRSTE
PROTEÇÃO PARA ESCOVA PEQUENA



 
only SV460_DOUBLE


SPAZZOLINO ROSSO TONDO PICCOLO CON SETOLE IN NYLON
SMALL RED ROUND BRUSH WITH NYLON BRISTLES
PETITE BROSSSE ROUGE RONDE AVEC POILS EN NYLON
CEPILLO ROJO REDONDO PEQUEÑO CON CERDAS DE NYLON
KLEINE ROTE RUNDBÜRSTE MIT NYLONBORSTEN
ESCOVINHA VERMELHAREDONDA PEQUENA COM CERDAS EM NYLON



only SV460_DOUBLE

FILTRO ANTICALCARE
LIMESCALE FILTER
FILTRES ANTI-CALCAIRE
FILTROS ANTICAL
KALKFILTER
FILTROS ANTICALCÁRIO



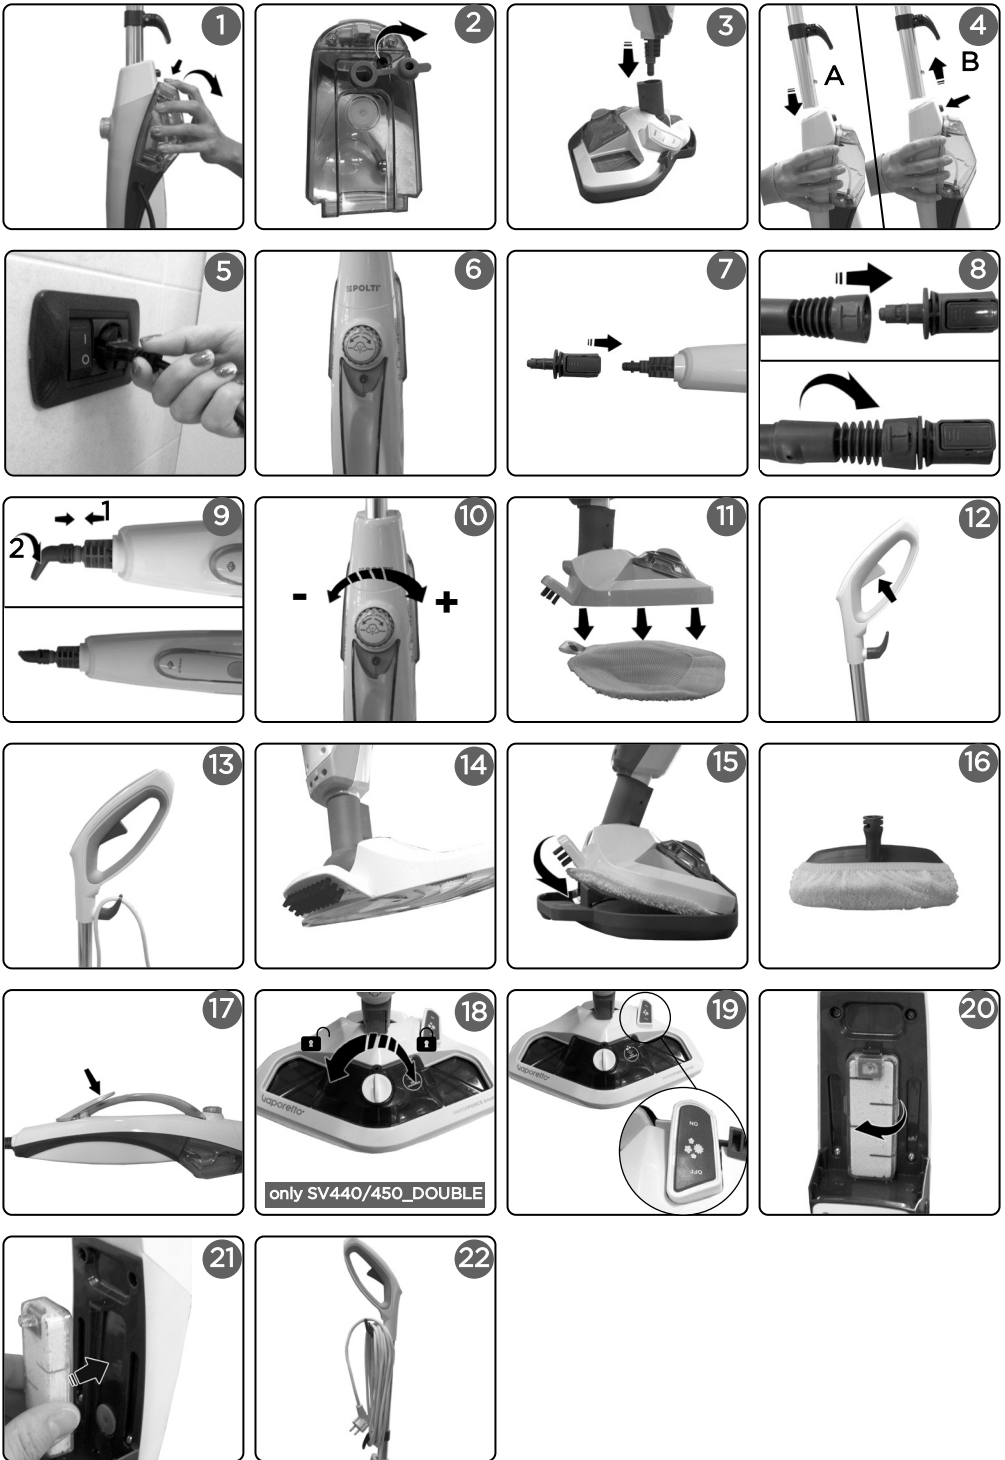

OPTIONAL

PAEU0282



KIT 6 CUFFIE
 KIT 6 SOCKETTES
 KIT 6 BONNETTES
 KIT 6 FUNDAS
 KIT 6 HAUBEN
 KIT 6 PROTEÇÕES

PAEU0285

only SV440/450_DOUBLE



FRESCOVAPOR

CONFEZIONE 2 FLACONI DEODORANTE (2 x 200 ml)
 PACK OF 2 BOTTLES DEODORISER (2 x 200 ml)
 PACK DE 2 BOUTEILLES DE DÉSODORISANT (2 x 200 ml)
 PACK DE 2 BOTELLAS DESODORIZANTES (2 x 200 ml)
 PACKUNG MIT 2 RAUMDUFTFLÄSCHEN (2 x 200 ml)
 EMBALAGEM COM 2 FRASCOS DESODORIZANTES (2 x 200 ml)

PAEU0332



KIT 2 PANNI IN MICROFIBRA
 KIT OF 2 MICROFIBRE CLOTHS
 KIT 2 SERPILLIÈRES MICROFIBRES
 KIT 2 PAÑOS DE MICROFIBRA
 SET 2 MIKROFASERTÜCHER
 KIT 2 PANOS EM MICROFIBRA

PAEU0336



KIT 2 FILTRI ANTICALCARE
 KIT OF 2 LIMESCALE FILTERS
 KIT 2 FILTRES ANTI-CALCAIRE
 KIT 2 FILTROS ANTICAL
 SET 2 KALKFILTER
 KIT 2 FILTROS ANTICALCÁRIO

PAEU0344



KIT 3 SPAZZOLINI ASSORTITI
 KIT OF 3 ASSORTED BRUSHES
 KIT 3 BROSSES ASSORTIE
 KIT 3 CEPILLOS SURTIDOS
 SET 3 VERSCHIEDENE BÜRSTEN
 KIT DE 3 ESCOVINHAS SORTIDAS

Gli accessori optional sono disponibili all'acquisto nei migliori negozi di elettrodomestici, nei Centri Assistenza autorizzati e sul sito www.polti.com.

The optional accessories are on sale at all the best domestic appliance retailers, an Authorised Polti Service Centre or online at www.polti.co.uk.

Les accessoires en option sont disponibles dans les meilleurs magasins d'appareils électroménagers, un SAV agréé ou sur le site www.polti.fr.

Los accesorios opcionales están en venta en las mejores tiendas de electrodomésticos, Centros de Asistencia Autorizadoo en la página web www.polti.com.

Die optionalen Zubehörteile sind in gut geführten Haushaltsgeschäften, bei den autorisierten Kundendienstcenter oder auf www.poltide.de erhältlich.

Os acessórios opcionais estão disponíveis para compra nas melhores lojas de eletrodomésticos, um dos Centros de Assistência Autorizados ou no site www.polti.com.

WELCOME TO THE WORLD OF POLTI VAPORETTO

POLTI'S 2 IN 1 STEAM MOP WITH INTEGRATED PORTABLE CLEANER
THEY ARE THE IDEAL SOLUTION FOR CLEANING AND SANITISING HOME SURFACES



ACCESSORIES FOR ALL NEEDS

On our web site www.polti.co.uk and in good appliance shops you will find a wide range of accessories to increase the performance and the practical applications of your appliances to make home cleaning even easier.

To check the compatibility of an accessory with your appliance, search the code PAEUXXXX listed next to each accessory on page 3.

If the accessory code you wish to buy is not listed in this manual, please contact our Customer Service team for more information.



REGISTER YOUR PRODUCT

Visit our website www.polti.co.uk or call our Customer Services department to register your product.

You can benefit from a special welcome offer, in participating countries, and keep up to date on all the latest Polti news, as well as buy accessories and consumables.

To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the label, located on the box and on the appliance.

To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.



OFFICIAL YOUTUBE CHANNEL

Want to know more? Visit our official channel:
www.youtube.com/poltispa.

We will demonstrate the effectiveness of the natural and ecological power of steam both for ironing and cleaning, with many videos of the Polti Vaporetto and all the other products from the world of Polti.

Sign up to the official channel to keep yourself updated about our video contents!

ATTENTION: The safety warnings are only indicated on this manual.

SAFETY WARNINGS

IMPORTANT PRECAUTIONS FOR USE



WARNING! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.



Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

Correct use of the product is only as detailed in this instruction manual.

Any use which does not comply with these instructions will invalidate the warranty.

SAFETY SYMBOLS:



WARNING: High temperature. Risk of scalding!
If shown on the product, do not touch as parts may be very hot.



WARNING: Steam.
Risk of scalding!

This appliance reaches very high temperatures. Incorrect use of the device can cause scalding.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a fault or malfunction, do not try to repair the appliance yourself. Incorrect use or a lack of respect for the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.
- This appliance must not be used if it has been dropped, if there are visible signs of damage or if it leaks.
- The plug must be removed from the socket before the tank/boiler is filled with water.
- The appliance has to be unplugged after use and before

carrying out user maintenance on the appliance.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must be supervised to ensure they do not play with the appliance.
- Keep the appliance out of reach of children when it is plugged in or cooling down.
- Keep all the parts of the packaging out of the reach of children; they are not toys. Keep the plastic bag out of the reach of children: danger of suffocation.
- The appliance should not be left unattended while it is connected to the supply mains.
- Steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- This appliance is intended exclusively for indoor domestic use.

In order to reduce the risk of accidents, including: fires, electrocution, personal injury and scalding, both during use and during preparation, maintenance and storage, always take the basic precautions listed in this manual.

RISKS CONNECTED TO THE POWER SUPPLY-ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances.
Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.

- Electrical extension leads that are unsuitable for the power rating or which are not compliant with law. They may overheat and possibly lead to short circuiting, fire, power outage or damage to the equipment. Only use extension leads which are certified, suitable for the power rating, supporting 16A and earthed.
- Always turn the appliance off and unplug it.
- To remove the plug from the socket, do not pull the power cable, but hold the plug itself to avoid damage to the plug and the cable.
- Fully unwind the cable from the cable winder (if present) before connecting the appliance to the mains and before use. Always use the product with the cable completely unwound
- Do not pull or jerk the cable or expose it to stresses (twisting, crushing or stretching). Keep the cable away from hot and/or sharp surfaces and elements. Avoid crushing the cables in doors and windows. Do not pull the cable tightly around corners. Avoid treading on the cable. Do not wind the power cable around the appliance, especially if the appliance is hot. Do not place the appliance on top of the power cable, this can be dangerous.
- Do not change the plug on the power cable.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid all possible hazards. Do not use the product if the power cable is damaged.
- Do not touch or use the appliance barefoot and/or with wet body or feet.
- Do not use in swimming pools containing water. Do not use the appliance near containers full of water, e.g. sinks, baths and swimming pools.
- Never immerse the cleaner in water or other fluid.

RISKS DURING USE OF THE PRODUCT - INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not pour toxic substances, acids, solvents, detergents, corrosive substances and/or explosives or perfumes into the tank.
- Only pour water or the water mix indicated in the Chapter “WHICH WATER TO USE” into the tank.
- Do not direct the steam jet onto toxic substances, acids, solvents, detergents or corrosive substances.
- Do not direct the steam jet onto explosive powders or liquids, hydrocarbons, open flames and or extremely hot objects.
- The handling and removal of dangerous substances must be carried out according to the indications of the manufacturers of these substances.
- Do not position the product near sources of heat such as fireplaces, stoves and ovens.
- Do not position the product near electromagnetic fields such as induction plates.
- Re-wind the cable when the appliance is not in use.
- Do not obstruct the openings and grills on the product.
- Do not direct the steam jet onto any part of the body of people or animals.
- Do not direct the steam jet onto clothes while they are being worn.
- Cloths, rugs and fabrics which have been subjected to a deep steam reach very high temperatures, above 100°C. Wait a few minutes and check that they have cooled before handling them. Therefore, avoid contact with the skin if they have just been steamed.

CORRECT USE OF THE PRODUCT

Polti Vaporetto SV440/450/460_DOUBLE is for internal home use to clean and sanitise hard floors, laminates, PVC, tiles, sealed marble, work surfaces and kitchen and bathroom surfaces and to clean and brighten fabrics, rugs and carpet. Please read these instructions carefully and keep them. This manual is also available on the website www.polti.co.uk.

Never leave the appliance exposed to weathering.

POLTI S.p.A. reserves the right to make the aesthetic, technical and construction changes it deems necessary, without prior notice.

Before leaving our factory all our products are rigorously tested. This is the reason why your Polti Vaporetto may contain some residual water in the tank.

Correct use of the product is only as detailed in this instruction manual. Any other use may damage the appliance and invalidate the warranty.

INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU.



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product must be disposed of separately from other waste. Therefore, at the end of its life, the user must hand over the appliance to an appropriate collection centre for electric and electronic waste or, according to the legislation in force in the country, leave the used appliance with the distributor when buying a new product to replace it. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health, and promotes recycling of the materials the product is made of. Unlawful disposal by the owner may result in the sanctions envisaged by current legislation.

WHICH WATER TO USE

Polti Vaporetto SV440/450/460_DOUBLE has been designed to function with normal medium tap water between 8°F and 20°F. If the tap water contains a lot of limescale use a mix composed of 50% tap water and 50% demineralised water which is widely available to purchase.

Warning: check the hardness of the water at the technical office at your local council or the local water supplier.

Periodically replace the limescale filter as shown in Section 14.

Never use distilled water, rain water or water containing additives (e.g. starch, perfumes), or water produced by other domestic appliances, by water softeners or filter jugs.

Do not add chemical, natural, detergent, or limescale removing substances, etc.

SV440/450/460_DOUBLE: 2 PRODUCTS IN 1

Polti Vaporetto SV440/450/460_DOUBLE is a practical appliance which includes two products in one, because it can be used as a steam mop/floor cleaner and as portable steam cleaner.

It can perform multiple cleaning functions and treat up to 15 different surfaces: floors with different finishes (tiles, stoneware, marble, parquet), rugs and carpets, kitchen work surfaces, filter hood, bathrooms, taps, grouting, windows and mirrors, upholstery (sofas, armchairs, mattresses, cushions, car interiors), interior doors and cupboard doors, radiators and rolling shutters, curtains and clothes, green plants.

1. PREPARATION OF THE PORTABLE STEAM CLEANER APPLIANCE

1.1 Remove the appliance from the packaging, checking that the product is intact and that all the parts are included.

1.2 Remove the water tank from the appliance, pressing the upper button and pulling it outward (1).

Open the cap of the tank by pulling it outward (2), then fill the tank with water.

Do not add other substances or additives to the tank.

Close the cap of the tank and reattach it to the appliance.

This operation must always be carried out with the power cable disconnected from the

mains.

1.3 The appliance is ready in Portable Steam Cleaner mode.

2. PREPARATION FOR STEAM MOP USE

2.1 Connect the Portable Steam Cleaner to the brush, matching the pin on the mop with the hole on the appliance (3).

2.2 Insert the tube with the handle into the specific opening on the appliance (4A), making sure that the pin on the tube lines up with the hole on the appliance. To remove it, press the button located on the tank (4B) and pull upward.

2.3 **Polti Vaporetto SV440 / 450_Double** models are equipped with a built in dispenser, located behind the floor brush, to be used exclusively with Frescovapor, the natural deodorant that, besides leaving a pleasant fragrance, also captures bad smells. Frescovapor is not included and is sold separately. To use Frescovapor, proceed as described in Section 12.

2.4 Unwind the power cable completely and connect it to an appropriate socket (5) that is earthed.

Always use the product with the cable completely unwound.

The power indicator light will come on (red) located around the steam adjustment knob (6). Wait until the "steam ready" indicator light comes on (around 15 sec., green). At this point the appliance is ready.

Before starting to steam clean, it is good practice to have previously swept or vacuumed the floor or the surface to be cleaned.

3. CONNECTION OF ACCESSORIES

The accessories can be connected directly to the Portable Steam Cleaner or to the flexible hose for greater freedom of movement.

3.1 To connect the accessories directly to the Portable Steam Cleaner just insert them on the point and turn them until they lock (9).

3.2 FLEXIBLE HOSE

To connect the flexible hose to the portable cleaner, first connect the adapter to the cleaner (7), after which connect the flexible hose to the adapter and turn it clockwise until a click is heard (8). To remove the flexible hose from the adapter, pull the lever located on the connection of the hose and rotate it in the opposite direction.

To connect the various accessories to the flexible hose, first attach the lance to the tube.

4. STEAM ADJUSTMENT

You can optimise the steam flow by means of the steam adjustment knob (10). You can increase the steam flow by turning the control knob in a clockwise direction. Turning it in an anti-clockwise direction reduces the steam flow. Here are some suggestions for the choice of steam flow level:

- **Maximum level:** to remove scaling, stains, grease;
- **Medium level:** to clean windows, floors and clean and brighten rugs and carpets;
- **Minimum level:** to clean parquet and laminate, delicate fabrics, upholstery, sofas and mattresses, etc. and to steam plants.

5. CLEANING FLOORS

Before using the appliance on delicate surfaces, ensure that the area in contact with the surface is free from foreign bodies that could cause scratches.

Before starting to steam clean, it is good practice to have previously swept or vacuumed the floor.

Ensure that the points in Sections 1 and 2 have been followed.

5.1 Attach the supplied cloth to the floor brush. To make it easier to attach, the cloth has an easy lock/release system to avoid having to bend over and use your hands. Just place the cleaning side of the cloth on the floor and rest the brush on top (11).

5.2 Adjust the intensity of the steam by turning the adjustment knob (10); for this type of surface we recommend **Medium level** steam.

5.3 Release the appliance brush by tilting it backward and using a foot, then press the steam button (12) on the handle, and begin cleaning moving the broom back and forth. To stop the steam flow, release the steam button.

5.4 The brush has a flexible joint that makes it easy to clean corners and edges of furniture and walls.

During cleaning, it is possible to insert the power cable into the upper hook, to avoid it possibly getting in the way (13).

The brush has bristles built into the rear side (14) ideal for removing the most stubborn dirt. To use, return the handle to the vertical

position locking the brush, then tilt until the brushes are touching the floor and scrape off the dirt.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool. Then rest a foot on the symbol relative to the tab of the cloth and pull the steam mop upwards.

WARNING: Do not use the appliance without the cloth.

WARNING: For additional safety, test steam delivery prior to use on a hidden part, leave the steamed part to dry to ensure that no changes in colour or deformation have occurred.

6. CLEANING CARPETS AND RUGS

WARNING: Before cleaning fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden area or on a sample of the material. Allow the steamed area to dry to make sure that no changes in colour or deformations have occurred.


Ensure that the points in Sections 1 and 2 have been followed.

6.1 Insert the brush with the cloth attached into the special frame so that it can slide on the surface (15).

6.2 Adjust the intensity of the steam by turning the adjustment knob (10); for this type of surface we recommend **Medium level** of steam.

6.3 Release the appliance brush by tilting it backward and using a foot, then press the steam button (12) on the handle, and begin cleaning moving the broom back and forth. To stop the steam flow, release the steam button.

During cleaning, it is possible to insert the power cable into the upper hook, to avoid it possibly getting in the way (13).

6.4 To remove the frame, just rest a foot on the relative symbol  and pull the steam mop upwards.

7. CLEANING WINDOWS, MIRRORS AND TILED WALLS

WARNING: To clean glass surfaces during cold weather, preheat the windows starting to steam from a distance of about 50 cm from the surface.

Use only the Portable Steam Cleaner.

Ensure that Section 1 has been followed.

Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Section 3.

7.1 To clean windows and mirrors, steam the surface thoroughly to dissolve the dirt. Connect the small window-cleaning brush to the Portable Cleaner or the lance (the lance can be connected to the flexible hose for difficult-to-reach areas) and go back over the surface to eliminate the dirt, without dispensing steam.

7.2 Adjust the intensity of the steam by turning the adjustment knob (10); for this type of surface we recommend **Medium level** of steam.

7.3 To clean tiles, attach the cap to the small window-cleaning brush (16) and pass over the surface, dispensing steam (17), by pressing the steam button of the Portable Cleaner, in order to eliminate the dirt.

8. CLEANING UPHOLSTERY, ARMCHAIRS, CUSHIONS (mattresses, sofas, car interiors, etc.)

WARNING: Before cleaning leather or fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden area or on a sample of the material. Allow the steamed area to dry to make sure that no changes in colour or deformations have occurred.

Use only the Portable Steam Cleaner.

Ensure that Section 1 has been followed.

Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Section 3.

8.1 Connect the small window-cleaning brush to the Portable Cleaner or the lance (the lance can be connected to the flexible hose for difficult-to-reach areas).

8.2 Attach the cap to the small brush (16).

8.3 Adjust the intensity of the steam by turning the adjustment knob (10); for this type of surface we recommend **Minimum level** of steam.

8.4 Hold the steam button down (17) on the handle and pass over the surface.

9. CLEANING BATHROOM FIXTURES, GROUTING AND KITCHEN WORKTOPS, BARBECUE

Use only the Portable Steam Cleaner.

Ensure that Section 1 has been followed.

Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Section 3.

9.1 Connect the lance to the Portable Cleaner (the lance can be connected to the flexible hose for difficult-to-reach areas).

9.2 Connect the most suitable accessory depending on the need:

- lance or concentrator for difficult-to-reach areas.
- round brushes to remove encrusted dirt.

For the Polti Vaporetto SV460_Double model only, the different coloured small round brushes allow for a different colour to be used for each surface or environment.

- round brush with brass bristles (included only with model **Polti Vaporetto SV450/460_Double**) to remove the most stubborn dried-on grease and dirt (barbecue, car or motorbike wheels, etc.)

- grout accessory to clean between tiles or to remove dirt from very narrow surfaces.

9.3 Adjust the intensity of the steam by turning the adjustment knob (10); for this type of surface we recommend **Maximum level** of steam.

9.4 Hold the steam button down (17) on the handle and pass over the surface.

10. CLEANING FURNITURE AND DELICATE SURFACES

WARNING: Before cleaning fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden area or on a sample of the material.

Use only the Portable Steam Cleaner.

Ensure that Section 1 has been followed.

Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Section 3.

10.1 Connect the lance to the Portable Cleaner.

10.2 Adjust the intensity of the steam by turning the adjustment knob (10); for this type of surface we recommend **Medium level** of steam.

10.3 Press and hold the steam button on the handle (17) and direct the jet onto a cloth.

WARNING: Do not direct the steam jet directly onto surfaces.

10.4 Use the cloth previously steamed to clean the surface, avoiding prolonged use on the same spot.

11. OTHER GENERAL USES

WARNING: Before cleaning the surface, always do a test on a hidden part and see how it reacts to the application of steam.

11.1 BRIGHTENING UP CURTAINS AND DRAPES

Mites and dust can be removed from curtains and drapes by steaming the fabric directly from the Portable Cleaner. The steam is able to remove odours and brighten up colours, allowing the fabric to be washed less frequently.

For this surface, set the steam to **Minimum level**.

11.2 REMOVING STAINS FROM CARPETS AND UPHOLSTERY



WARNING: Steam.
Risk of scalding!

Direct the steam directly onto the stain with the greatest angle possible (never vertically with respect to the surface to be cleaned) and place a cloth beyond the stain to collect the dirt that has been "blown" away by the steam pressure.

For this surface, set the steam to **Minimum level**.

11.3 TAKING CARE OF PLANTS AND HUMIDIFYING ROOMS

To care for your house plants, remove the dust from the leaves using the steam. Use the Portable Steam Cleaner with the flexible hose attached to easily direct the jet (to attach it see Section 3). Steam the surface at a minimum distance of 50 cm, adjust the steam to the **Minimum level**.

Plants breathe better and will be cleaner and brighter. You can also use the steam to refresh spaces, especially those frequented by smokers.

12. FRESCOVAPOR

(product not included and sold separately) only for the Polti Vaporetto SV440/450_DOUBLE models

WARNING: Never put Frescovapor into the water tank.

Frescovapor is an air freshener that contains natural substances. Designed to mix with

steam it releases a fresh perfume in every space and, thanks to its special composition, it is able to eliminate bad odours.

To use Frescovapor, proceed as follows:

- Unscrew the deodorant dispenser cap located on the floor brush and fill it with Frescovapor (18).

- Tighten the cap (18).

- To start dispensing the deodorant, press the selector located on the brush to the "ON" position to release the deodorant. Press the selector back to the "OFF" position to stop it (19).

During dispensing of the deodorant, the surfaces may feel slightly damper, since Frescovapor mixes with the steam being dispensed. To stop dispensing FrescoVapor, move the selector located on the brush to the OFF position.

The selector only controls dispensing of the deodorant that mixes with the steam. It does not regulate the quantity of steam. To adjust the quantity of steam, you must use the steam-adjustment dial (10).

Contents of the Frescovapor bottle 200 ml
Frescovapor is on sale at household appliance stores, at Polti authorised service centres or on the site www.polti.co.uk.

WARNING: Before using Frescovapor on upholstery, leather, special fabrics and wood surfaces, consult the manufacturer's instructions and always carry out a test on a hidden area or sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.

13. OUT OF WATER

The water level is always visible thanks to the transparent tank.

When the water inside the tank has been used up, steam will stop being released.

To restart operations just fill the water tank again as described in Section 1.

WARNING: This operation must always be done after having disconnected the appliance from the mains.

14. REPLACEMENT OF THE LIMESCALE FILTER

Polti Vaporetto SV440/450/460_DOUBLE has a filter containing special resins capable of stopping the limescale and extending the life of your product.

We recommend that the filter be changed 3 times per year.

14.1 Unplug from the mains electricity.

14.2 Remove the water tank from the appliance, pressing the upper button and pulling it outward (1).

14.3 Gently lift the hook tab and remove the old filter (20).

14.4 Position the new filter, push gently and make sure that it is perfectly inserted (21), then reposition the water tank.

The limescale filters are on sale at all leading domestic-appliance retailers, at Authorised Service Centres and online at www.polti.com.

15. GENERAL MAINTENANCE

Ensure that the appliance is switched off and disconnected from the mains.

To clean the outside of the appliance, use only a damp cloth and tap water.

All accessories can be cleaned using running water, ensuring they are completely dry before the next use. After using the brushes, we recommend letting the bristles cool down in their natural position, in order to avoid any deformation.

Do not use detergents of any type.

The cloths provided can be washed by following the instructions included on the label.

16. STORAGE


16.1 Turn off the appliance and unplug it from the mains electricity.

16.2 Completely empty the water tank to avoid leaks.

16.3 Before detaching the cloth from the brush, wait a few minutes to allow it to cool.

16.4 Wind the power cable around the special cable-winder hooks (22).

Before using the appliance again, remember to unwind the power cable completely. The upper hook rotates 360°. To unwind the power cable, pull the hook and rotate it.

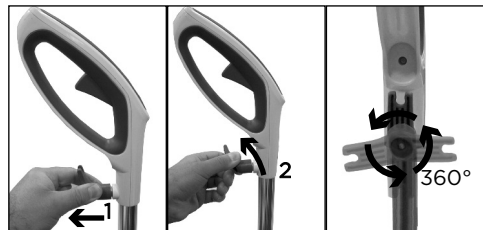

WARNING: Do not keep the appliance connected to the power supply with the cable wound up.

17. TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not turn on.	No power.	Check that the appliance has been connected to the mains, as indicated in Section 1.
No steam is coming out.	Out of water. Appliance turned off.	Disconnect the appliance from the mains, fill the water tank and wait about 15 seconds, after which use the appliance. Check that the appliance has been connected to the mains,
The appliance is on but releases little steam.	The steam is set to the Minimum level .	Turn the steam adjustment knob to increase the flow.
The appliance releases too much water on the floor.	Steam adjustment dial set to the maximum.	Reduce the flow of steam to the minimum. If necessary, momentarily stop the disbursement of steam, while continuing to brush the surface.
Frescovapor deodorant is not released when using steam. (only for the Polti Vaporetto SV440/450_DOUBLE).	Deodorant selector in OFF position. Out of Frescovapor.	Place the selector in the ON position. Fill the dispenser with Fresco-
Steam too damp using Frescovapor. (only for the Polti Vaporetto SV440/450_DOUBLE).	The steam is mixing with Frescovapor.	Stop the dispensing of Frescovapor as desired, to reduce the humidity of the steam.
If problems persist or are not listed above, please contact a Polti Authorised Service Centre (www.polti.co.uk for the updated list) or contact Customer Services.		

WARRANTY

This appliance is for domestic use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over; the date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold against to the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

WHAT THE WARRANTY COVERS

During the warranty, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the client is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To avail of the warranty, the customer should visit one of the Polti Authorised Service Centres or contact Customer Services with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relative date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty.

WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect.
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract.
- Any defect resulting from *force majeure* (fires, short circuits) or caused by third parties (tampering).
- Damage caused by the use of non-original Polti parts, and repairs or modifications performed by staff or service centres not authorised by Polti.
- Damage caused by the customer.
- Parts (filter, brush, hose, battery, etc.) damaged by use (consumable goods) or normal wear and tear.
- Any damage caused by limescale.
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions.
- Assembly of non-original Polti accessories or those that have been modified or which are not suitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti takes no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

To see the up-to-date list of the Polti Authorised Service Centres, visit the website www.polti.co.uk



POLTI®
NATURAL HOME FEELING

Scopri il mondo e l'offerta completa di Polti sul sito polti.com, iscriviti alla newsletter per restare sempre aggiornato su tutte le novità e le offerte.

Discover the world and the complete offering of Polti on polti.co.uk, sign up for the newsletter to stay up to date on all the news and offers.

Découvrez le monde et l'offre complète de Polti sur polti.fr, inscrivez-vous à la newsletter pour rester informé sur les nouveautés et offres.

Descubra el mundo y la oferta completa de Polti en el sitio web www.polti.com y suscríbese a la newsletter para estar al día de todas las novedades y ofertas.

Entdecken Sie die Welt und die Angebote von Polti auf www.poltide.de und abonnieren Sie unseren Newsletter, um immer über die Neuheiten und Angebote auf dem Laufenden zu bleiben.

Descubra o mundo e a oferta completa da Polti no site polti.com, assine a newsletter para se manter atualizado sobre todas as novidades e ofertas.

www.polti.com



REGISTRA IL TUO PRODOTTO
REGISTER YOUR PRODUCT
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO

SN:



CALL CENTER

ITALIA SERVIZIO CLIENTI	800 162 162
FRANCE SERVICE CLIENTS	04 78 66 42 12
ESPAÑA SERVICIO AL CLIENTE	900 53 53 28
PORTUGAL SERVIÇO AO CLIENTE	707 780 274
UK CUSTOMER CARE	0161 813 2765
DEUTSCHLAND KUNDENDIENST	03222 109 472 9

OTHER COUNTRIES, PLEASE VISIT WWW.POLTI.COM

POLTI VAPORETTO SV440/SV450/SV460 - MOS11612 - WIGS - 1V01



POLTI S.p.A. - Via Ferloni, 83
22070 Bulgarograsso (CO) - Italy
www.polti.com

Follow us:

