

SV660_STYLE

SV650_STYLE

SV620_STYLE

SV610_STYLE

POLTI Vaporetto®

MANUALE DI ISTRUZIONI

INSTRUCTION MANUAL MANUAL DE INSTRUCCIONES
MANUEL D'INSTRUCTIONS BEDIENUNGSANLEITUNG
MANUAL DE INSTRUÇÕES

REGISTRA IL TUO PRODOTTO
REGISTER YOUR PRODUCT
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTRE O SEU PRODUTO

www.polti.com

 **POLTI**®
NATURAL HOME FEELING

POLTI VAPORETTO

SV660_STYLE

SV650_STYLE

SV620_STYLE

SV610_STYLE



TUBO FLESSIBILE VAPORE
FLEXIBLE STEAM HOSE
FLEXIBLE VAPEUR
TUBO FLEXIBILE VAPOR
ANSCHLUSSSCHLAUCH
TUBO FLEXÍVEL DE VAPOR



PANNO PAVIMENTI
FLOOR CLOTH
SERPILLIÈRE POUR SOLS
PAÑO DE SUELOS
BODENREINIGUNGSTUCH
PANO PAVIMENTOS

2 x



ACCESSORIO TAPPETI E MOQUETTE
CARPET AND RUG ACCESSORY
ACCESSOIRE POUR TAPIS ET MOQUETTE
ACCESORIO PARA ALFOMBRAS Y MOQUETAS
ZUBEHÖR FÜR TEPPICHE UND TEPPICHBÖDEN
ACESSÓRIO PARA TAPETES E ALCATIFA



SPAZZOLA TRIANGOLARE
TRIANGULAR BRUSH
BROSSE TRIANGULAIRE
CEPILLO TRIANGULAR
DREIECKIGE BÜRSTE
ESCOVA TRIANGULAR

 
only SV660_650



PANNO PER SPAZZOLA TRIANGOLARE
CLOTH FOR TRIANGULAR BRUSH
SERPILLIÈRE POUR BROsse TRIANGULAIRE
PAÑO PARA CEPILLO TRIANGULAR
TUCH FÜR DREIECKIGE BÜRSTE
PANO PARA ESCOVA TRIANGULAR

2 x

only SV660_650



ACCESSORIO TERGIVETRO
WINDOW CLEANING ACCESSORY
ACCESSOIRE LAVE-VITRES
ACCESORIO LIMPIACRISTALES
FENSTERWISCHERAUFSATZ
ACESSÓRIO LIMPA-VIDROS



CUFFIA PER TERGIVETRO
SOCKETTE FOR WINDOW CLEANING ACCESSORY
HOUSSE POUR LAVE-VITRES
FUNDA PARA LIMPIACRISTALES
HAUBE FÜR FENSTERWISCHER
PROTEÇÃO PARA LIMPA-VIDROS



ACCESSORIO LANCIA PIATTA
FLAT LANCE ACCESSORY
ACCESSOIRE LANCE PLATE
ACCESORIO LANZA PLANA
ZUBEHÖR FLACHE DÜSE
ACESSÓRIO LANÇA PLANA



SPAZZOLINO TONDO GRANDE CON SETOLE ARROTONDATE
LARGE ROUND BRUSH WITH ROUNDED BRISTLES
BROSSE RONDE GRAND FORMAT À POILS ARRONDIS
CEPILLO REDONDO CON CERDAS REDONDEADAS
GROSSE RUNDBÜRSTE MIT ABGERUNDETEN BORSTEN
ESCOVA REDONDA GRANDE COM CERDAS ARREDONDADAS



CONCENTRATORE VAPORE
STEAM CONCENTRATOR
CONCENTRATEUR VAPEUR
CONCENTRADOR VAPOR
DAMPFKONZENTRIERER
CONCENTRADOR DE VAPOR



LANCIA VAPORE
STEAM LANCE
LANCE VAPEUR
LANZA VAPOR
DAMPFDÜSE
LANÇA



SPAZZOLINO TONDO PICCOLO CON SETOLE IN NYLON
SMALL ROUND BRUSH WITH NYLON BRISTLES
PETITE BROsse RONDE AVEC POILS EN NYLON
CEPILLO REDONDO PEQUEÑO CON CERDAS DE NYLON
KLEINE RUNDBÜRSTE MIT NYLONBORSTEN
ESCOVINHA REDONDA PEQUENA COM CERDAS EM NYLON



CUFFIA PER LANCIA PIATTA
SOCKETTE FOR FLAT LANCE
HOUSSE POUR LANCE PLATE
FUNDA PARA LANZA PLANA
HAUBE FÜR FLACHE DÜSE
PROTEÇÃO PARA LANÇA PLANA



SPAZZOLINO TRIANGOLARE CON SETOLE IN NYLON
TRIANGULAR BRUSH WITH NYLON BRISTLES
BROSSE TRIANGULAIRE PETIT FORMAT À POILS EN NYLON
CEPILLO TRIANGULAR CON CERDAS DE NYLON
DREIECKIGE BÜRSTE MIT NYLONBORSTEN
ESCOVA TRIANGULAR CON CERDAS DE NYLON



CLIP PARKING TUBO
HOSE CLIP
CLIP POUR TUBE
CLIP PARA COLOCACIÓN DE TUBO
ABLAGEHALTERUNGSCLIP FÜR ROHR
CLÍPE PARKING TUBO



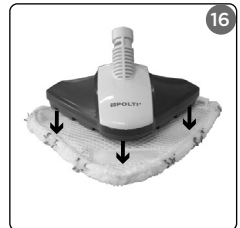
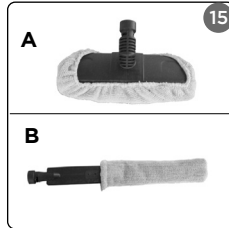
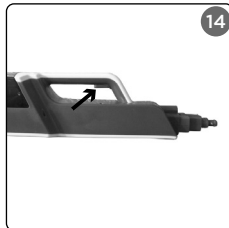
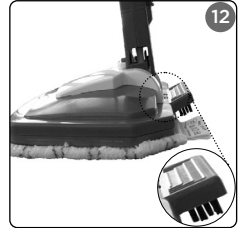
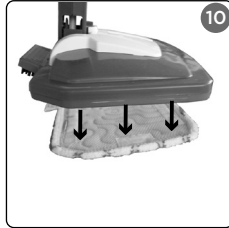
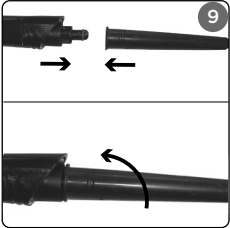
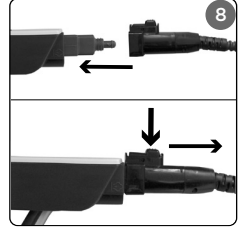
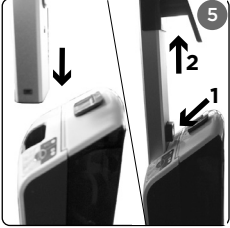
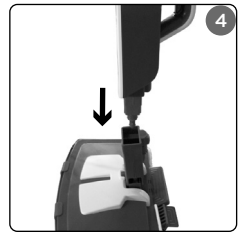
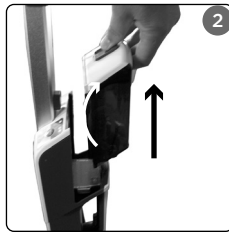
SPAZZOLINO RETTANGOLARE CON SETOLE IN NYLON
RECTANGULAR BRUSH WITH NYLON BRISTLES
BROSSE RECTANGULAIRE À POILS EN NYLON
CEPILLO RECTANGULAR CON CERDAS DE NYLON
RECHTECKIGE BÜRSTE MIT NYLONBORSTEN
ESCOVA RETANGULAR COM CERDAS DE NYLON




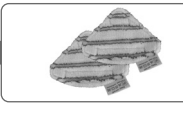


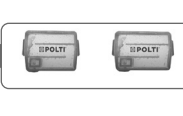


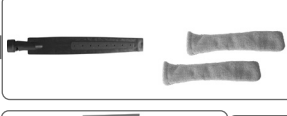

RICAMBIO FILTRO ANTICALCARE
REPLACEMENT ANTI-CALC FILTER
FILTRE ANTICALCAIRE DE RECHANGE
RECAMBIO FILTRO ANTI CAL
ERSATZ-KALKFILTER
FILTRO ANTI-CALCÁRIO DE SUBSTITUIÇÃO

only SV660_650





OPTIONAL

PAEU0394		KIT 2 PANNI PAVIMENTI KIT 2 FLOOR CLOTHS KIT 2 SERPILLIÈRES POUR SOLS KIT 2 PAÑOS PARA SUELOS SET MIT 2 BODENTÜCHERN KIT 2 PANOS PARA PAVIMENTOS
PAEU0395		KIT 2 PANNI PER SPAZZOLA TRIANGOLARE KIT 2 CLOTHS FOR TRIANGULAR BRUSH KIT 2 SERPILLIÈRES POUR BROSSSE TRIANGULAIRE KIT 2 PAÑOS PARA CEPILLO TRIANGULAR SET MIT 2 TÜCHERN FÜR DREIECKIGE BÜRSTE KIT 2 PANOS PARA ESCOVA TRIANGULAR
PAEU0396		KIT 4 CUFFIE PER TERGIVETRO KIT 4 SOCKETTES FOR WINDOW CLEANING ACCESSORY KIT 4 HOUSSES POUR LAVE-VITRES KIT 4 FUNDAS PARA LIMPIACRISTALES SET MIT 4 HAUBEN FÜR FENSTERWISCHER KIT 4 PROTEÇÕES PARA LIMPA-VIDROS
PAEU0397		KIT 4 CUFFIE PER LANCIA PIATTA KIT 4 SOCKETTES FOR FLAT LANCE KIT 4 HOUSSES POUR LANCE PLATE KIT 4 FUNDAS PARA LANZA PLANA SET MIT 4 HAUBEN FÜR FLACHE DÜSE KIT 4 PROTEÇÕES PARA LANÇA PLANA
PAEU0398		KIT 2 FILTRI ANTI-CALCARE KIT OF 2 LIMESCALE FILTERS KIT 2 FILTRES ANTI-CALCAIRE KIT 2 FILTROS ANTICAL SET 2 KALKFILTER KIT 2 FILTROS ANTICALCÁRIO
PAEU0399		KIT 4 SPAZZOLINI CON SETOLE IN NYLON KIT OF 4 BRUSHES WITH NYLON BRISTLES KIT 4 BROSSSES AVEC SOIES EN NYLON KIT 4 CEPILLOS CON CERDAS DE NYLON SET 4 BÜRSTEN MIT NYLONBORSTEN KIT DE 4 ESCOVINHAS COM CERDAS DE NYLON
PAEU0400		SPAZZOLA TRIANGOLARE CON 2 PANNI TRIANGULAR BRUSH WITH 2 CLOTHS BROSSSE TRIANGULAIRE AVEC 2 SERPILLIÈRES CEPILLO TRIANGULAR CON 2 PAÑOS DREIECKIGE BÜRSTE MIT 2 TÜCHERN ESCOVA TRIANGULAR COM 2 PANOS
PAEU0401		ACCESSORIO LANCIA PIATTA CON 2 CUFFIE FLAT LANCE ACCESSORY WITH 2 SOCKETTES ACCESSOIRE LANCE PLATE AVEC 2 HOUSSES ACCESSORIO LANZA PLANA CON 2 FUNDAS ZUBEHÖR FLACHE DÜSE MIT 2 HAUBEN ACESSÓRIO LANÇA PLANA COM 2 PROTEÇÕES
PAEU0285		CONFEZIONE 2 FLACONI DEODORANTE (2 x 200 ml) PACK OF 2 BOTTLES DEODORISER (2 x 200 ml) PACK DE 2 BOUTEILLES DE DÉSODORISANT (2 x 200 ml) PACK DE 2 BOTELLAS DESODORIZANTES (2 x 200 ml) PACKUNG MIT 2 RAUMDUFTFLÄSCHEN (2 x 200 ml) EMBALAGEM COM 2 FRASCOS DESODORIZANTES (2 x 200 ml)

Gli accessori optional sono disponibili all'acquisto nei migliori negozi di elettrodomestici, nei Centri Assistenza autorizzati e sul sito www.polti.com.

The optional accessories are on sale at all the best domestic appliance retailers, an Authorised Polti Service Centre or online at www.polti.com.

Les accessoires en option sont disponibles dans les meilleurs magasins d'appareils électroménagers, un SAV agréé ou sur le site www.polti.com.

Los accesorios opcionales están en venta en las mejores tiendas de electrodomésticos, Centros de Asistencia Autorizado en la página web www.polti.com.

Die optionalen Zubehörteile sind in gut geführten Haushaltsgeschäften, bei den autorisierten Kundendienstcenter oder auf www.polti.com erhältlich.

Os acessórios opcionais estão disponíveis para compra nas melhores lojas de eletrodomésticos, um dos Centros de Assistência Autorizados ou no site www.polti.com.

WELCOME TO THE WORLD OF POLTI VAPORETTO

POLTI'S 2-IN-1 STEAM MOP WITH INTEGRATED PORTABLE CLEANER IS THE IDEAL SOLUTION FOR CLEANING AND SANITISING ALL SURFACES IN YOUR HOME.



ACCESSORIES FOR ALL YOUR NEEDS

When you visit www.polti.com or any top household appliance store, you will find a vast range of accessories to enhance the performance and convenience of your appliance and make cleaning your home even simpler.

To check the compatibility of an accessory with your appliance, search the code PAEUXXXX listed next to each accessory on page 4. If the code of the accessory you want to buy is not listed in this manual, please contact our Customer Service team for more information.



REGISTER YOUR PRODUCT

Visit www.polti.com or call our Customer Services department to register your product. You can benefit from a special welcome offer, in participating countries, and keep up to date on all the latest Polti news, as well as buy accessories and consumables. To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the label, located on the box and on the appliance. To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.



OFFICIAL YOUTUBE CHANNEL

Do you want to know more? Visit our official channel: www.youtube.com/poltispa. We will demonstrate the effectiveness of the natural and ecological power of steam for ironing and cleaning, with many videos featuring the Polti Vaporetto and all the other products from the world of Polti.

Subscribe to the official channel to stay up to date on our video content!

ATTENTION: Safety warnings are found only in this manual.

SAFETY WARNINGS

IMPORTANT PRECAUTIONS FOR USE



ATTENTION! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.



Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

Only usage as detailed in this instruction manual constitutes correct usage.

Any use which does not comply with these instructions will invalidate the warranty.

SAFETY SYMBOLS:



WARNING: High temperature. Risk of scalding!
If shown on the product, do not touch as parts may be very hot.



WARNING: Steam.
Risk of scalding!

This appliance reaches very high temperatures. Incorrect use of the appliance can cause scalding.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a fault or malfunction, do not try and repair the appliance yourself. Incorrect use or non-observance of the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.
- This appliance must not be used if it has been dropped, if there are visible signs of damage or if it leaks.
- The plug must be removed from the socket before the tank/

boiler is filled with water.

- Always unplug the appliance when it is not in use and before any preparation, maintenance or cleaning.
- The appliance may be used by people with diminished physical, sensory or mental abilities, or by people with no experience or without the necessary knowledge, provided that they are supervised or after they have received instructions on the safe use of the appliance and on understanding the inherent dangers. Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance out of reach of children when it is on and until it has completely cooled down.
- Keep all the parts of the packaging out of the reach of children. They are not toys. Keep the plastic bag out of the reach of children: danger of suffocation.
- The appliance must not be left unattended if plugged in to the mains.
- The steam must not be directed towards appliances that contain electrical components, such as inside ovens.
- This appliance is intended exclusively for indoor household use.
- **In order to reduce the risk of accidents, including fires, electrocution, personal injury and scalding during use and during preparation, maintenance and storage, always take the fundamental precautions listed in this manual.**

RISKS RELATED TO POWER SUPPLY - ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your household system, guarantee safe use of electrical appliances. Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload the sockets with adaptors and/or transformers. Only connect the product to a single socket with current

that is compatible with the supplied plug.

- Electrical extension leads that are unsuitable for the power rating or which are not compliant with law may overheat and possibly lead to short-circuiting, fire, power outage or damage to the equipment. Only use certified extension leads of appropriate size which are earthed and support at least 16A.
- Always turn the appliance off and unplug it.
- To remove the plug from the socket, do not pull the power cord. Hold the plug itself to prevent damage to the plug and the cord.
- Fully unwind the cord from the cord winder (if present) before connecting the appliance to the mains and before use. Always use the product with the cord completely unwound.
- Do not pull or jerk the cord or expose it to tensions (twisting, crushing or stretching). Keep the cord away from hot and/or sharp surfaces and elements. Avoid crushing the cord in doors and windows. Do not pull the cord tight around corners. Avoid treading on the cord. Do not wind the power cord around the appliance, especially if the appliance is hot. Do not place the appliance on top of the power cord, this can be dangerous.
- Do not change the plug on the power cord.
- If the power cord is damaged, it must be replaced by the manufacturer or a service agent in order to prevent all possible hazards. Do not turn on or use the product if the power cord is damaged.
- Do not touch or use the appliance barefoot and/or with wet body or feet.
- Do not use in pools containing water. Do not use the appliance near containers full of water, e.g. sinks, baths and swimming pools.
- Do not immerse the appliance, including the power cord and plug, in water or other liquids.

RISKS WHILE USING THE PRODUCT - INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not pour toxic substances, acids, solvents, detergents, corrosive substances and/or explosives or perfumes into the tank.

- Only pour water or the water mix indicated in the “WHICH WATER TO USE” Chapter into the tank.
- Do not aim the steam jet at toxic substances, acids, solvents, detergents or corrosive substances.
- Do not aim the steam jet at explosive powders or liquids, hydrocarbons, flames and/or incandescent objects.
- Handle and remove dangerous substances according to the indications provided by their manufacturers.
- Do not position the product near sources of heat such as fireplaces, stoves and ovens.
- Do not position the product near electromagnetic fields such as the induction plate.
- Re-wind the cord when the appliance is not in use.
- Do not obstruct the openings and grills on the product.
- Do not attempt to use the steam jet on any part of a human or animal's body.
- Do not direct the steam jet on clothes while they are being worn.
- Cloths and rags and fabrics which have been subjected to a deep steam reach very high temperatures, above 100°C. Wait a few minutes and check that they have cooled before handling them. Therefore, avoid contact with the skin if they have just been steamed.
- Before steam treating surfaces (wood or laminate floors, carpets, rugs, leather and fabrics and any surfaces especially those that are delicate or treated), consult the surface manufacturer's or the supplier/installer's instructions and always perform a test on a section that is out of view or on a sample. Allow the steamed surface to dry to ensure that there is no deterioration, change of colour or deformation and that the surface stands up to the temperature of the steam.

CORRECT USE OF THE PRODUCT

Polti Vaporetto STYLE is a steam cleaner intended for indoor household use to clean and sanitise various surfaces. Please read these instructions carefully and keep them. If this manual is lost, it can be viewed and/or downloaded from www.polti.com.

POLTI S.p.A. reserves the right to make the aesthetic, technical and construction changes it deems necessary, without prior notice.

Before leaving our factory all our products are rigorously tested. Therefore, Polti Vaporetto may already contain some residual water in the tank.

Only usage as detailed in this instruction manual constitutes correct usage. Any other use may damage the appliance and invalidate the warranty.

INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product must be disposed of separately from other waste. Therefore, at the end of its life, the user should handover the appliance to an appropriate collection centre for electric and electronic waste or, in accordance with current national regulations, leave the used appliance with the distributor when buying a new product to replace it. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health and promotes recycling of the materials the product is made of. Unlawful disposal by the owner involves the application of the administrative penalties as required by current legislation.

WHICH WATER TO USE

Polti Vaporetto STYLE was designed to function with normal medium-hardness tap water between 8° and 20°F. If the tap water contains a lot of calcium carbonate, use a mix composed of 50% tap water and 50% widely available demineralised water.

Warning: check the hardness of the water at the technical office of your local council or the local water supplier.

Periodically replace the limescale filter as shown in Chapter 18.

Never use distilled water, rain water or water containing additives (e.g. starch, perfumes), or water produced by other domestic appliances, water softeners and filter jugs.

Do not add chemicals, natural, detergent, or limescale removing substances, etc.

POLTI VAPORETTO STYLE:

2 PRODUCTS IN 1

Polti Vaporetto STYLE is a practical appliance which includes two products in one because it can be used as a steam mop/floor cleaner and as a portable steam cleaner.

It makes it possible to perform multiple cleaning functions and treat lots of different surfaces: floors with different finishes (tile, stoneware, marble, parquet), rugs and carpet, kitchen work surfaces, hood filters, bathrooms, taps, grout, windows and mirrors, upholstery (sofas, armchairs, mattresses, cushions, car interiors), interior doors and cabinet doors, radiators and rolling shutters, curtains and clothing, green plants.

1. PREPARATION OF THE PORTABLE STEAM CLEANER APPLIANCE

1.1 Remove the appliance from the packaging, checking that the product is intact and that all the parts are present.

1.2 Remove the water tank from the appliance by pressing the upper button and pulling it upwards (1-2).

Open the cap of the tank by pulling it outward (3), then fill the tank with water.

Do not add other substances or additives to the tank.

Close the cap on the tank and reattach the tank to the appliance.

Always do this with the power cord disconnected from the mains.

1.3 The appliance is ready in Portable Steam Cleaner mode.

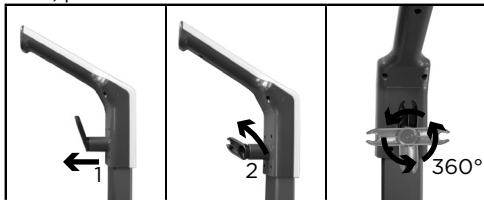
2. PREPARATION FOR STEAM BROOM USE

2.1 Connect the Portable Steam Cleaner to the brush by fitting the pin on the brush to the hole on the appliance (4).

2.2 Insert the metal tube with the handle into the rectangular opening on the appliance until you hear a click (5). To remove it, press the button on the back of the hose (5) and

pull upwards.


Before using the appliance again, remember to unwind the power cord completely. The upper hook rotates 360°. To unwind the power cord, pull the hook and turn it.



2.3 Polti Vaporetto SV660/650/620_STYLE has a dispenser located in the floor brush, to be used exclusively with Polti Frescovapor, the natural deodoriser that, besides leaving a pleasant fragrance, captures bad odours. Polti Frescovapor sold separately. To use Polti Frescovapor, proceed as described in Chapter 14.

2.4 Unwind the power cord completely and connect it to an appropriate socket (6) which is earthed.

Always use the product with the cord completely unwound.

The four LEDs on the control panel will light up alternately (7). Wait until the "steam ready" indicator light comes on  (around 20 sec., steady light). At this point, the appliance is ready.

Before starting the steam cleaning, it is good practice to have previously swept or vacuumed the floor or the surface to be cleaned.

WARNING: When the hose is extracted with the handle, the appliance automatically switches OFF.

3. USING THE ACCESSORIES

Accessories can be connected directly to the Portable Steam Cleaner or to the flexible hose for greater freedom of movement.

3.1 FLEXIBLE HOSE

To attach the flexible hose to the portable cleaner, just connect them together (8). To remove the flexible hose, press the unlock button and pull outwards (8).

3.2 To connect the accessories directly to the Portable Steam Cleaner or to the flexible hose, just insert them on the point and turn them until they lock (9).

4. STEAM ADJUSTMENT

There are 3 pre-set steam flow programs available. Simply press the central Steam Regulation button on the control panel (7) until the corresponding indicator light for the de-

sired program lights up.

- **MIN (lowest level):** to clean parquet and laminate, delicate fabrics, upholstery, sofas and mattresses, etc. and to steam plants.
- **MED (medium level):** to clean windows and ceramic or porcelain tile floors, and to clean and refresh rugs and carpets;
- **MAX (highest level):** to remove build-up, stains, grease and to clean marble floors;

5. CLEANING FLOORS

WARNING: Before steam treating surfaces (wood or laminate floors, carpets, rugs, leather and fabrics and any surfaces especially those that are delicate or treated), consult the surface manufacturer's or the supplier/installer's instructions and always perform a test on a section that is out of view or on a sample. Allow the steamed surface to dry to ensure that there is no deterioration, change of colour or deformation and that the surface stands up to the temperature of the steam.


Before using the appliance on delicate surfaces, ensure that the part in contact with the surface is free from foreign bodies that could cause scratches.

It is good practice to sweep or vacuum the floor first before steam cleaning it.

Ensure that the points in Chapters 1 and 2 have been performed.

5.1 Attach the cloth provided to the floor brush. To make it easier to attach, the cloth has an easy lock/release system to avoid having to bend over and use your hands. Just place the cleaning side of the cloth on the floor and set the brush on top (10).

5.2 Unlock the appliance brush by tilting it backward and using your foot.

5.3 Select the program type (7). For this type of surface, we recommend medium (**MED**). The appliance will start producing steam (the tank will light up to indicate that the appliance is producing steam). It is then possible to start cleaning by moving the mop back and forth. To stop producing steam, press the central Steam Regulation button several times on the control panel (7) until the light turns on  or hold it down for more than 2 seconds.

5.4 The brush has a flexible joint that makes it easy to also clean corners and edges of furniture and walls.

During cleaning, it is possible to insert the power cord into the upper hook to prevent it possibly getting in the way (11).

The brush has bristles built into the rear side (12), ideal for removing the most stubborn dirt. To use, return the handle to the vertical position, locking the brush, then tilt until the brushes are touching the floor and scrape off the dirt.

5.5 When you have finished cleaning, turn off the appliance and remove the cloth.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool. After which, rest a foot on the relative symbol of the cloth tab and pull the steam mop upward.

WARNING: Do not use the brush without the cloth.

 
6. CLEANING RUGS AND CARPETS

WARNING: Before steam treating surfaces (wood or laminate floors, carpets, rugs, leather and fabrics and any surfaces especially those that are delicate or treated), consult the surface manufacturer's or the supplier/installer's instructions and always perform a test on a section that is out of view or on a sample. Allow the steamed surface to dry to ensure that there is no deterioration, change of colour or deformation and that the surface stands up to the temperature of the steam.


Be sure to first follow the steps in Chapters 1 and 2.

6.1 Insert the brush with the cloth attached into the special frame so that it can slide on the surface (13).

6.2 Release the appliance brush by tilting it backward and using your foot.

6.3 Select the type of program (7): for this type of surface we recommend the medium level (**MED**). The appliance will start producing steam (the tank will light up to indicate that the appliance is producing steam). It is then possible to start cleaning by moving the mop back and forth. To stop producing steam, press the central Steam Regulation button several times on the control panel (7) until the light turns on  or hold it down for more than 2 seconds.

During cleaning, it is possible to insert the power cord into the upper hook to prevent it possibly getting in the way (11).

6.4 To remove the frame, just rest a foot on the  symbol and pull the steam mop upward.

7. CLEANING GLASS AND WINDOWS

WARNING: To clean glass surfaces during cold weather, preheat the windows starting by vacuuming from a distance of about 50 cm from the surface.

Use only the Portable Steam Cleaner.

Ensure that Chapter 1 has been followed.

Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Chapter 3.

7.1 Adjust the intensity of the steam (7). For this type of surface, we recommend lowest level (**MIN**).

7.2 To produce steam, press and release the steam button located under the handle of the portable unit (14) (the tank will light up to indicate that the appliance is producing steam).

7.3 To clean windows and mirrors, connect the window cleaning accessory to the Portable Cleaner or to the flexible hose for hard-to-reach areas, steam the surface thoroughly to dissolve the dirt and then wipe the surface again without steam to remove the dirt. The brush has a sponge, ideal for removing dirt and absorbing excess moisture.

7.4 To stop producing steam, press and release the steam button located under the handle of the portable unit (14).

8. CLEANING TILED WALLS, INTERIOR DOORS AND CABINET DOORS

Use only the Portable Steam Cleaner.

Ensure that Chapter 1 has been followed.

Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Chapter 3.

8.1 Adjust the intensity of the steam (7) for this type of surface we recommend the medium level (**MED**).

8.2 To dispense steam, press and release the steam button located under the handle of the portable unit (14) (the tank will light up to indicate that the appliance is dispensing steam).

8.3 Connect the flexible steam hose to the portable cleaner and attach the triangular brush with the cloth on it (only for Polti Vaporetto SV660/650_STYLE models) and go over the surface, releasing the steam by pressing the steam button of the Portable cleaner, to remove the dirt. For the Polti Vaporetto SV620/610_STYLE models, it is possible to attach the window cleaning accessory with sockette (15A) to the portable hose and go

over the surface.

8.4 To stop dispensing steam, press and release the steam button located under the handle of the portable unit (14).

9. CLEANING SHUTTERS, RADIATORS AND REFRESHING FABRICS

Use only the Portable Steam Cleaner.

Ensure that Chapter 1 has been followed.

Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Chapter 3.

9.1 To refresh fabrics and clothing, attach the flexible hose to the portable cleaner and attach the flat lance with the special sockette (15B) or the window cleaning accessory with the sockette on it (15A).

9.2 To clean shutters, radiators or all narrow spaces, attach the flexible hose to the portable cleaner and attach the flat lance with the special sockette (15B).

9.3 Regulate the intensity of the steam (7). For fabrics, for shutters, radiators or narrow spaces, we recommend the medium level (**MED**).

9.4 To dispense steam, press and release the steam button located under the handle of the portable unit (14) (the tank will light up to indicate that the appliance is dispensing steam).

9.5 To stop dispensing steam, press and release the steam button located under the handle of the portable unit (14).

10. CLEANING UPHOLSTERY, ARMCHAIRS, CUSHIONS

WARNING: Before steam treating surfaces (wood or laminate floors, carpets, rugs, leather and fabrics and any surfaces especially those that are delicate or treated), consult the surface manufacturer's or the supplier/installer's instructions and always perform a test on a section that is out of view or on a sample. Allow the steamed surface to dry to ensure that there is no deterioration, change of colour or deformation and that the surface stands up to the temperature of the steam.

Use only the Portable Steam Cleaner.

Ensure that Chapter 1 has been followed.

Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Chapter 3.

10.1 Connect the window cleaning accessory to the Portable Cleaner or to the flexible hose for better freedom of movement.

10.2 Put the sockette on the accessory (15A).

10.3 Adjust the intensity of the steam (7) for this type of surface we recommend the lowest level (**MIN**).

10.4 To dispense steam, press and release the steam button located under the handle of the portable unit (14) (the tank will light up to indicate that the appliance is dispensing steam).

10.5 To stop dispensing steam, press and release the steam button located under the handle of the portable unit (14).

11. CLEANING BATHROOM FIXTURES, GROUT AND KITCHEN WORKTOPS, TAPS, BARBECUES

Use only the Portable Steam Cleaner.

Ensure that Chapter 1 has been followed.

Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Chapter 3.

11.1 Connect the accessory to the Portable Cleaner or to the flexible hose for hard-to-reach places or for greater convenience.

11.2 Connect the most appropriate accessory for the task:

- lance or concentrator for difficult-to-reach areas;
- small black round brush for removing encrusted dirt;
- round brush with rounded bristles suitable for cleaning rounded surfaces of sinks, bathtubs, bidets, drains;
- triangular brush with bristles for cleaning in corners and removing encrusted dirt;
- rectangular brush for cleaning the grout between the tiles.

11.3 Adjust the intensity of the steam (7). For this type of surface we recommend the highest level (**MAX**).

11.4 To produce steam, press the steam button located under the handle of the portable unit (14) (the tank will light up to indicate that the appliance is producing steam).

11.5 To stop dispensing steam, press and release the steam button located under the handle of the portable unit (14).

12. CLEANING FURNITURE AND DELICATE SURFACES

WARNING: Before steam treating surfaces (wood or laminate floors, carpets, rugs, leather and fabrics and any surfaces especially those that are delicate or treated), consult the surface manufacturer's or the supplier/installer's instructions and always perform a test on a section that is out of view or on a sample. Allow the steamed surface to dry to ensure that there is no deterioration, change of colour or deformation and that the surface stands up to the temperature of the steam.

Use only the Portable Steam Cleaner.

Ensure that Chapter 1 has been followed. Turn on the appliance following the instructions listed in Point 2.4 and connect the accessories as shown in Chapter 3.

12.1 Connect the flexible steam hose to the portable cleaner and attach the triangular brush with the cloth on it.

12.2 Adjust the intensity of the steam (7). For this type of surface we recommend the lowest level (**MIN**).

12.3 To produce steam, press the steam button located under the handle of the portable unit (14) (the tank will light up to indicate that the appliance is producing steam) and direct the jet onto a cloth.

WARNING: Do not direct the steam jet directly onto surfaces.

12.4 Use the cloth previously steamed to clean the surface, avoiding prolonged use on the same spot.

13. OTHER GENERAL USES

WARNING: Before cleaning the surface, always do a test on a hidden part and see how it reacts to the application of steam.

13.1 REFRESH CURTAINS AND DRAPES see Chapter 9.

Mites and dust can be removed from curtains and drapes by steaming the fabric directly from the Portable Cleaner. The steam is able to remove odours and brighten up colours, allowing the fabric to be washed less frequently. For this surface, set the steam to the lowest level (**MIN**).

13.2 REMOVING STAINS FROM CARPETS AND UPHOLSTERY



ATTENTION: Steam.
Risk of scalding!

Direct the steam directly onto the mark with the greatest possible angle (never vertically to the surface to be treated) and position a cloth beyond the stain, in order to collect up the dirt that has been "blown" away by the steam pressure.

For this surface, set the steam to the lowest level. (**MIN**).

13.3 TAKING CARE OF PLANTS AND HUMIDIFYING ROOMS

To care for your house plants, remove the dust from the leaves using the steam. Use the Portable Steam Cleaner with the flexible hose attached to easily direct the jet (to attach it see Chapter 3). Steam the surface at a minimum distance of 50 cm. Adjust the steam to the lowest level (**MIN**). Plants breathe better and will be cleaner and brighter. The steam can also be used to refresh spaces, especially those frequented by smokers: steam the room by directing the jet towards the ceiling and distributing evenly.

14. POLTI FRESCOVAPOR only for Polti Vaporetto SV660/650/620_ STYLE models

(product sold separately)

WARNING: Never put Polti Frescovapor into the water tank.

Politi Frescovapor is a deodoriser with natural substances. Designed to mix with steam it releases a fresh perfume in every space and, thanks to its special composition, it is able to eliminate bad odours.

To use Polti Frescovapor, proceed as follows:

- Push the selector located on the brush to the OFF position (18).
- Lift the Deo dispenser door on the floor brush and fill it with the Polti Frescovapor fragrance (17).
- Close the door carefully.
- Push the selector located on the brush again to bring it back to the start position.
- When steam is activated, the deodoriser will mix with the steam and will be released.
- To stop dispensing the fragrance, push the selector located on the brush to the OFF position (18).

When dispensing the deodoriser, the surfaces may feel slightly damper because Polti Frescovapor mixes with the steam being dispensed. To stop dispensing Polti Frescovapor, move the selector located on the brush to the OFF position.

The selector only controls dispensing of the deodoriser that mixes with the steam. It does not regulate the quantity of steam. To adjust the amount of steam, use the central steam regulation button - STEAM REGULATION (7).

Contains one 200-ml bottle of Polti Frescovapor e.

For more information on Polti Frescovapor visit www.polti.com.

WARNING: Before using Polti Frescovapor on upholstery, leather, special fabrics and wood surfaces, consult the manufacturer's instructions and always carry out a test on a hidden part or sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.

15. EXTRA STEAM FUNCTION

Use only the Portable Steam Cleaner.

The Extra steam function can be activated for quicker and easier cleaning. To activate, press the steam button for 3 seconds. You will produce more steam for 5 seconds. This function can be reactivated approximately one minute after the previous activation.

16. AUTOMATIC SHUT-DOWN FUNCTION

After 10 minutes of inactivity (calculated from the last operation carried out on the appliance in both modes: Steam Mop and Portable Steam Cleaner) the appliance will shut off automatically and the OFF light will flash. To reactivate the appliance, press the Steam Regulation button.

17. OUT OF WATER

The water level is always visible thanks to the transparent tank.

When the water inside the tank has been used up, steam will stop coming out. Just refill the water tank, as described in Chapter 1, to begin steaming again.

WARNING: This operation must always be done after having disconnected the appliance from the mains.

18. REPLACEMENT OF THE LIMESCALE FILTER

Polti Vaporetto STYLE has a filter containing special resins capable of stopping limescale and extending the life of your product.

We recommend changing the filter 3 times per year.

18.1 Unplug from the mains electricity.

18.2 Remove the water tank from the appliance by pressing the upper button and pulling it upwards (1-2).

18.3 Gently lift the hook tab and remove the old filter (19).

18.4 Position the new filter, push gently and make sure that it is perfectly inserted, then replace the water tank.

For more information on limescale filters visit www.polti.com.

The first time it is used or when replacing the limescale filter, it will be necessary to activate steam delivery and wait until the limescale filter fills with water and the product produces steam again.

19. GENERAL MAINTENANCE

Ensure that the appliance is switched off and disconnected from the mains.

To clean the outside of the appliance, use a damp cloth and tap water only.

All accessories can be cleaned using running water, ensuring they are completely dry before the next use. After using the brushes, let the bristles cool down in their natural position in order to prevent any deformation.

Do not use detergents of any kind.

The cloths provided can be washed by following the instructions included on the label.

20. STORAGE

20.1 Turn off the appliance and unplug it from the mains electricity.

20.2 Completely empty the water tank to avoid water leaks.

20.3 Before detaching the cloth from the brush, wait a few minutes to allow it to cool.

20.4 Polti Vaporetto STYLE can also be stored by inserting the hose with the parking clip into the portable unit. This way, the mop will take up less space.



20.5 Wind the power cord around the special cord-winder hooks (20).

Before using the appliance again, remember to unwind the power cord completely.

WARNING: Do not keep the appliance connected to the power supply with the cord wound up.

21. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The appliance does not turn on.	No power.	Check that Polti Vaporetto has been connected to the mains as shown in Chapter 1.
No steam is coming out.	Out of water. Appliance turned off.	Disconnect the appliance from the mains, fill the water tank and wait about 15 seconds, then use the appliance. Check that the appliance has been disconnected from the mains, as indicated in Section 1.
In steam mop setting the appliance doesn't work.	The metal tube is not properly in-serted.	Insert the metal tube into the rectangular opening until you hear the coupling "click".
The appliance releases too much water on the floor	Steam output control set to the maximum.	Reduce the steam intensity to the minimum. If necessary, momentarily stop the steam supply while continuing to rub the surface.
The metallic tube cannot be pulled out.	The power cord not unwound.	Check that the power cord has been unwound from the special cord-winder hooks.
Politi Frescovapor deodoriser is not released when using steam. (only for Politi Vaporetto SV660/650/620_STYLE models)	Deodoriser selector in OFF position. Deo Dispenser door open. Check the Politi Frescovapor level.	Push the selector. Carefully close the Deo Dispenser door. Fill the dispenser with Politi Frescovapor.
Steam too damp using Politi Frescovapor. (only for Politi Vaporetto SV660/650/620_STYLE models)	The steam is mixing with Politi Frescovapor.	Stop the Politi Frescovapor supply as desired to reduce the humidity of the steam.
Should the problem persist or if it is not in the table, contact an Authorised Politi Service Centre (see www.polti.com for the up-to-date list) or Customer Services.		

WARRANTY

This appliance is for household use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over. The date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold with respect to the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

WHAT THE WARRANTY COVERS

During the warranty, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the client is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To avail of the warranty, the customer should visit one of the Polti Authorised Service Centres with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relative date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty.

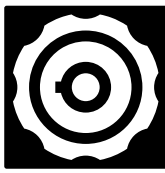
WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect;
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract;
- Any defect resulting from force majeure (fires, short circuits) or caused by third parties (tampering);
- Damage caused by the use of non-original Polti parts and repairs or modifications performed by staff or service centres not authorised by Polti;
- Damage caused by the customer;
- Parts (filters, brushes, hoses, etc.) damaged by use (consumable goods) or normal wear and tear;
- Any damage caused by limescale;
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions;
- Attachment of non-original Polti accessories or accessories which have been modified or are unsuitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti takes no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

To see the up-to-date list of the Polti Authorised Service Centres, visit www.polti.com.



POLTI®

NATURAL HOME FEELING

Scopri il mondo e l'offerta completa di Polti sul sito polti.com, iscriviti alla newsletter per restare sempre aggiornato su tutte le novità e le offerte.

Discover the world and the complete offering of Polti on polti.com, sign up for the newsletter to stay up to date on all the news and offers.

Découvrez le monde et l'offre complète de Polti sur polti.com, inscrivez-vous à la newsletter pour rester informé sur les nouveautés et offres.

Descubra el mundo y la oferta completa de Polti en el sitio web www.polti.com y suscribase a la newsletter para estar al día de todas las novedades y ofertas.

Entdecken Sie die Welt und die Angebote von Polti auf www.polti.com und abonnieren Sie unseren Newsletter, um immer über die Neuheiten und Angebote auf dem Laufenden zu bleiben.

Descubra o mundo e a oferta completa da Polti no site polti.com, assine a newsletter para se manter atualizado sobre todas as novidades e ofertas.

www.polti.com

