



 
**EN** Instruction manual



**PEDESTAL** Air Circulator

01.354555.02.001

PARTS DESCRIPTION

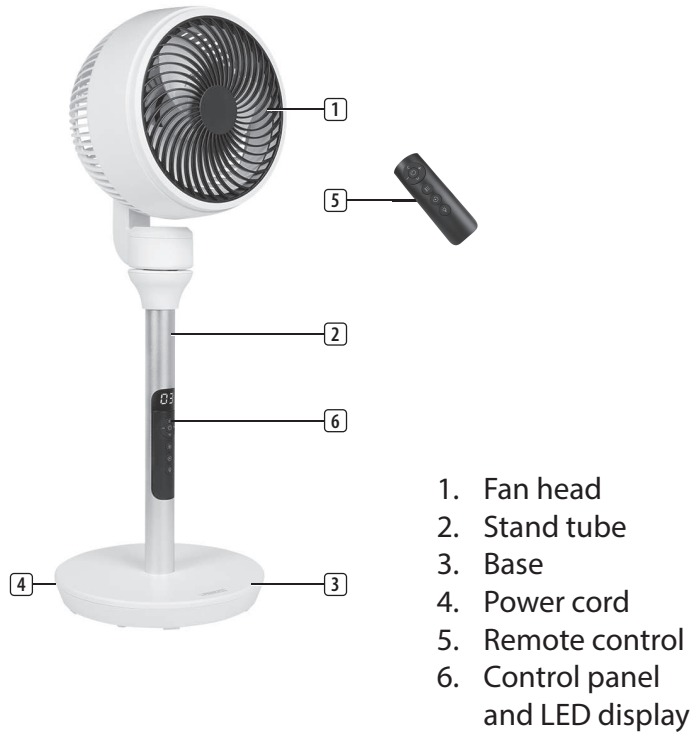

## IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using your product. By ignoring the safety instructions the manufacturer cannot be held responsible for the damage. When using an electrical appliance, basic safety precautions should always be observed, including the following:

**IMPORTANT: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**

### WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Never move the appliance by pulling the cord and make sure the cord does not become entangled. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.

- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance into water or any other liquid.
- To prevent fire or shock hazard do not expose this appliance to rain or moisture.

### Other safety considerations

- Never insert your fingers or any other object into the air outlet. Take special care to warn children of these dangers.
- Make sure the fan is disconnected from the power outlet before removing the protective guard.
- Unplug the power cord from the electrical power supply as soon as you stop using it and before cleaning and maintenance.
- Do not cover the product.
- **WARNING:** Do not block air vents inside the appliance.
- **CAUTION:** Assemble the fan completely before turning it on.

- Do not use the unit:
  - near a source of fire.
  - in an area exposed to direct sunlight.
  - in an area where water is likely to splash.
  - near a bath, a shower or a swimming pool.
- **WARNING:** Do not wrap the cable around the main body of the appliance during or after use.
- **WARNING:** Misuse of the appliance could cause personal injury.
- **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.
- This appliance is intended to be used in household and similar applications such as:
- Staff kitchen areas in shops, offices and other working environments.
- By clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.
- Farm houses.



This product complies with conformity requirements of the applicable European Regulations or Directives.



This product complies with conformity requirements of the applicable UK Regulations.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Lokal Authority or local store for recycling advise.

**FOR HOUSEHOLD USE ONLY  
SAVE THESE INSTRUCTIONS**

### **Cleaning and maintenance**

- Before cleaning, unplug the device.
- Surface cleaning: Wipe the surface with a soft, dry cloth, if extremely dirty clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pads, steel wool, rubbing alcohol or, other chemical solutions as they can cause damage to the housing and malfunction. Then wipe with a dry soft cloth.

- Air outlet: Use a soft brush or a vacuum cleaner to clean the dust at the air outlet. Make sure to clean it when there is less dust. Too much dust is not healthy and will reduce efficiency.
- Remote control: Gently wipe the surface of the remote control with a soft, dry cloth. Remove the batteries if the remote control will not be used for a long time.
- WARNING: Switch the product off and unplug it from the mains socket before each cleaning.
- WARNING: Do not remove the fan guards for cleaning or maintenance.
- WARNING: Allow the product to cool off before cleaning it.
- Do not allow water or other liquids to enter the engine unit as it can cause short circuits, fires, electric shocks, or other hazards.
- A vacuum cleaner can be used to remove dust and lint from the air vents and the fan guards.
- Store the product in a cool and dry place if it is not used for a long time.

### **Safety Batteries**

- Do not expose the battery to high temperatures or direct sunlight. Never throw batteries into the fire. There is a danger of explosion!
- Keep batteries away from children. Batteries are not a toy!
- Do not open the batteries by force.
- Avoid contact with metallic objects.(Rings, nails, screws et cetera) there is a danger of short-circuiting!
- As a result of a short-circuit batteries may heat up consider-ably or even catch fire. this may result in burns.
- For your safety the battery poles should be covered with adhesive strips during transport.
- Do not touch a ruptured and/or leaking battery. If the liquid from the battery gets into your eyes, rinse your eyes as soon as possible with clean water, without rubbing your eyes. Immediately go to the hospital. If it is not treated properly, it can cause eye problems.
- Do not ingest battery, Chemical Burn Hazard;

- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- The batteries contain materials, which are hazardous to the environment; they must be removed from the appliance before it is scrapped and they are disposed of safely

### Safety Coin cell



#### **BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN**

Store spare batteries securely. Dispose of used batteries immediately and safely. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- If the battery compartment does not close securely, stop using the product and keep it away from children.
- Be alert, there are no obvious symptoms if a child has swallowed a button or coin battery. If your child appears unwell and there are no

 
obvious symptoms, then check to make sure there are no batteries missing from any items they have been around. If you suspect they have swallowed a coin/button cell, then seek medical attention. Similarly, if they vomit bright red fresh blood seek immediate medical help.

- Always remain vigilant with discharged or spare button or coin batteries in the home and in products that contain them.




**PRODUCT CONTAINS A COIN/BUTTON CELL**

## PARTS DESCRIPTION

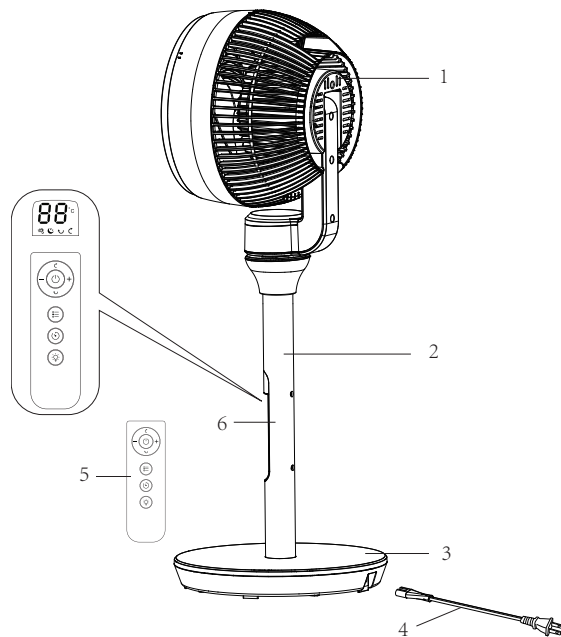

1. Fan head
2. Stand tube
3. Base
4. Power cord
5. Remote control
6. Control panel and LED display

## Remote control

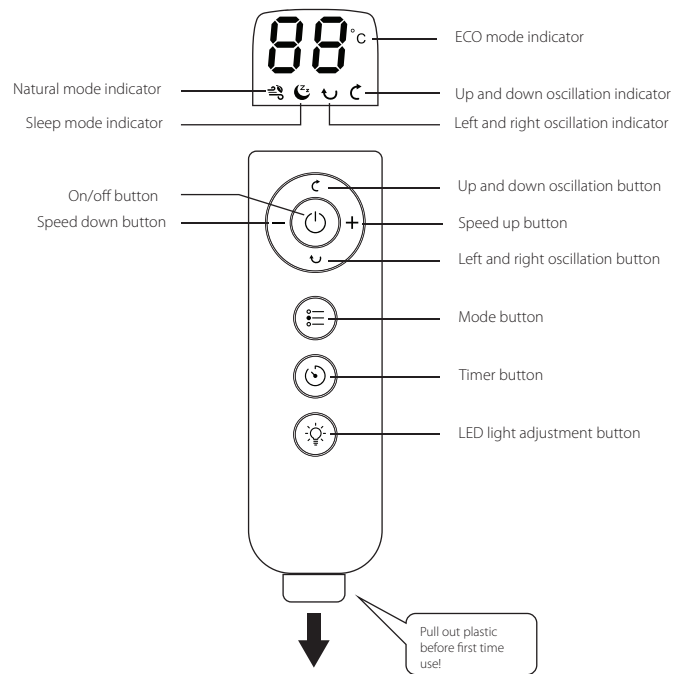 

## BEFORE THE FIRST USE

- Place the device on a flat stable surface and ensure a minimum of 100 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the appliance matches the local voltage before connecting the device. Voltage 220V-240V~ 50Hz).
- When the device will not be in use for a long time, please unplug the power cord.
- Warning: The below may sometimes occur due to the overlap of the remote-control frequencies. Please pay attention to this while using the remote control:
  1. This device may react when using a remote control for other appliances.
  2. When using the remote control of this device, other electrical appliances may react.

### Replacement of remote-control battery


- The remote control is powered by a CR2025 button cell. Replace the battery when the battery depletes.
- Find the battery compartment on the back of the remote control. Press and hold the tab (A) and simultaneously pull the battery tray out (as shown in the figure below), and place a new CR2025 battery in the battery tray with correct polarity indicated, then close the battery tray.



## USE

- Place the device on a firm level surface.

### Turn on/off

- Connect the supplied power cable to the mains socket on the fan base and the wall socket.
- To turn the device on or off, press  on the control panel or on the remote control.


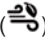 
### Note:


- When using the remote control, point the remote control at the IR sensor on the fan base, and make sure there is no obstacle between the remote control and the IR sensor.

### Set speed

- When the fan is on, press + / - on the control panel or the remote control to select the desired speed level (a total of 12-speed levels). The corresponding speed level indicator is displayed on the control panel.

### Set operating modes



- Press  on the control panel or the remote control to activate or deactivate the operating mode.
  - Normal mode (no indicator): The fan runs at the set speed.
  - Nature mode (): The fan automatically changes the speed at intervals according to the initially set fan speed, so that natural and pleasant air circulation can be generated.

- Sleep mode (): When this function is activated and the ambient temperature is detected above 24°C, the fan automatically changes fan speeds by detecting changes in the ambient temperature.



**Note:**

- If this function is activated and the ambient temperature is detected below or equal to 24°C, the fan will operate at speed 1.
- If the function is activated, the display on the control panel always shows the current ambient temperature indicated by the °C symbol. If the function is deactivated, no temperature is displayed.

 
**Set switch-on/off timer**

- When the fan is on, press  on the control panel (or the remote control) to set a timer (up to 8 hours can be set) to turn the device off. The set time blinks five times, the indicator shows “H” on the LED display. After that the current speed level is displayed on the control panel.
- When the fan is off, press  on the control panel (or the remote control) to set a timer (up to 8 hours can be set) to turn the device on. The timer is set after the set time blinks five times, the indicator shows “H” on the LED display. After that the current speed level is displayed on the control panel.

**Set oscillation**

- When the fan is on, press  on the control panel (or the remote control) to activate or deactivate left and right oscillation (60°/90°).
- When the fan is on, press  on the control panel (or the remote control) to activate or deactivate up and down oscillation (60°/90°).

**Set LED display brightness**

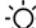- Press  on the control panel or the remote control to toggle the LED display on the control panel through high brightness, low brightness, and off.

## ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its life, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recycling.



The European directive for batteries (2006/66/EC) states that it is not permitted to throw batteries away with the household waste. They may contain substances which are harmful to the environment. Empty batteries can be handed over to a local, public collection point or a local recycling centre. To avoid overheating as a result of a short circuit, lithium batteries must be removed from the product and the poles must be protected using insulation tape or some other means against short-circuiting.

**FOR HOUSEHOLD USE ONLY  
SAVE THESE INSTRUCTIONS**

### Support

[www.princesshome.co.uk](http://www.princesshome.co.uk)





**smartwares<sup>®</sup> Europe**  
Swaardvenstraat 65 | 5048 AV | Tilburg  
The Netherlands | [www.princesshome.eu](http://www.princesshome.eu)



**smartwares<sup>®</sup> Safety and Lighting Ltd.**  
Meriden House | 6 Great Cornbow  
Halesowen | West Midlands | B63 3AB |  
United Kingdom | [www.princesshome.co.uk](http://www.princesshome.co.uk)