 





EN Instruction manual

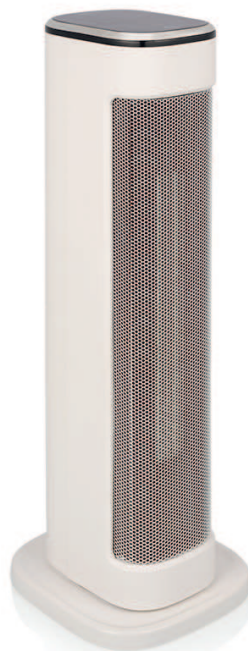

SMART CERAMIC HEATER

01.348575.02.001

 PARTS DESCRIPTION

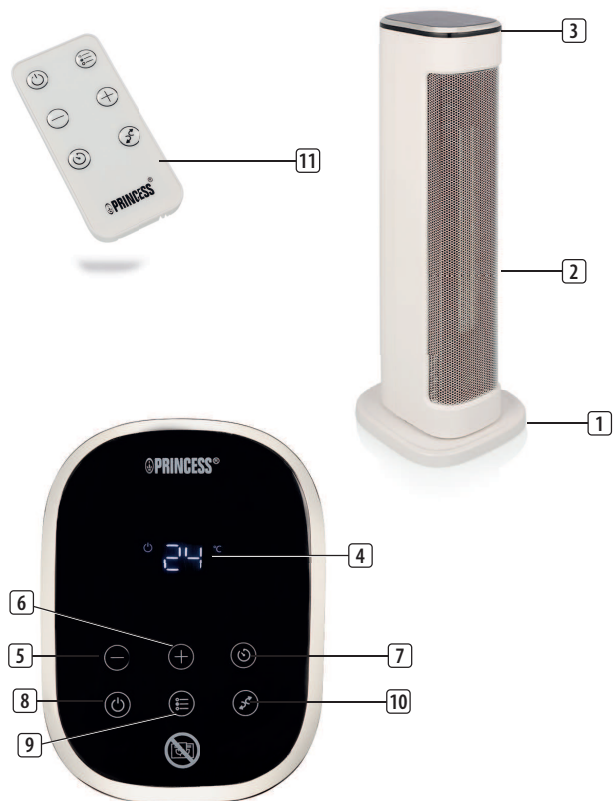

SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- **WARNING:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not use the appliance with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Please do not install the appliance close to curtains and other combustible materials. This could cause a fire.

- The heater must not be located immediately below a socket-outlet.
- The heater needs to be installed so that the switches and other controls cannot be touched by a person in the bath or shower.



This product complies with conformity requirements of the applicable European Regulations or Directives.



This product complies with conformity requirements of the applicable UK Regulations.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Lokal Authority or local store for recycling advise.



- **WARNING:** In order to avoid overheating, do not cover the heater.

PARTS DESCRIPTION

1. Base stand
2. Base
3. Control panel
4. Display
5. Minus button
6. Plus button
7. Timer button
8. On/Off button
9. Mode button
10. Oscillation button
11. Remote control

 
BEFORE THE FIRST USE

- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- When the device is turned on for the first time, a slight odour will occur. This is normal, ensure adequate ventilation. This odour is only temporary and will disappear soon.

Installation

Base installation instructions: (Please confirm whether the accessories are complete and the product is in good condition before use)

1. Take the base stand and screws(3pcs) out of the packing case.
2. Take out the base, align the limit column at the bottom of the device with the limit hole of the base stand, install it in place, and finally lock the screws clockwise. (as shown in the picture below)

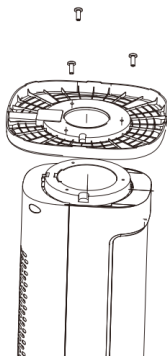

Note: When mounting the chassis, please stand the machine upside down on the packaging foam or other soft surface to avoid scratching the product surface.

Remote control

- Remove the battery cover and place the CR2025 battery for direct use.

- When using the remote control, the emitter of the front section of the remote control must be aligned with the receiving window on the product. (Note: The receiving window is located on the top part of the product)
- The remote control can be used normally at a distance of about 5 meters from the front of the product and within a range of 30 degrees.
- Avoid direct sunlight to the receiving window, so as not to affect the receiving effect.
- Please keep the remote control safely to avoid impact and falling.
- When you need to replace the battery, pay attention to the battery polarity when loading the battery.
- If the machine is not used for a long time, please take out the battery and seal it to avoid damage to the remote control and reduce battery running.

USE

- Place the appliance on a stable and flat surface.
- Plug the appliance in an earthed socket.
- Press the On/Off button on the display to turn the appliance on. The appliance will begin operating in Fan mode.

Note: The indicated temperature on the heater may deviate in standby mode but stabilizes once the appliance has been activated.

- Press the Mode button to select the desired mode - High-heating - Low-heating or to return to Fan mode.
- The appliance will start operating in the selected mode.

Low-heating mode

In Low-heating mode the appliance will blow warm air at a low speed.

- To activate the Low-heating mode, press the Mode button until the low-heating indicator appears in the display.

High-heating mode

In High-heating mode the appliance will blow warm air at a high speed.

- To activate the high-heating mode, press the Mode button until the High-heating indicator appears in the display.

Fan mode

In Fan mode the appliance will blow cool air.

- To activate the fan mode, press the mode button until the heating modes are deactivated and are no longer shown in the display.

Adjusting the temperature

- When using the heating modes, you can adjust the temperature between 10°C and 35°C using the Plus and Minus buttons. The set temperature will blink on the display for three seconds and the set temperature will be visible on the display after this.

Timer Off function

- Activate the desired operating mode.
- Press the Timer button, the timer indicator will show in the display.
- Use the timer button to set the desired time in hours for the appliance to shut down. After 5 seconds, the display will revert to showing the current room temperature.
- The Timer can be set between 00-24 hours.
- Press the Timer button continuously until the digital screen displays "00". When the digital screen stops flashing, the timing indicator light is off and the original setting timing function is cancelled.

Oscillation function

- To activate the oscillation function, while the appliance is in use, press the Oscillation button. The appliance will start oscillating.
- To deactivate the oscillation function, press the Oscillation button again.

To turn the appliance off

- To turn the appliance off press the On/Off button.

USING THE APPLIANCE WITH THE PRINCESS HOME APP

The item can be used manually with its built-in controls or you can use a smart phone or smart speaker to control it. Before you begin, ensure the Princess Home app is downloaded. The Princess Home app is available on Android and iOS.

Download the correct version of the Princess Home app via our website princesshome.eu/nl-nl/princess-home-app or use QR:



iOS™



Android™

Pair your device to Princess Home app

- Make sure the item is powered.
- Press the timer button for about 5 seconds until you hear a beep and the Wi-Fi indicator light is flashing rapidly.
- Open the Princess Home app.
- Select your country code, enter the cell phone number and tap "Get" to get a message containing the verification code.
- Enter the verification code in the message and tap "Log in" to log in to the App.
- Click "Add Device" to add a new device.
- Select the device you wanted to connect.
- Follow the instructions on the app to connect the item.

How to set local time

When the item is connected to the Princess Home App, it will automatically update the local time according to the time on the phone.

Wi-Fi information

Wireless technology: Wi-Fi

Operating frequency: 2400MHz~2483.5MHz

Max. radio-frequency power: 20 dBm

DECLARATION OF CONFORMITY

- Hereby, Smartwares Europe declares that the radio equipment type 348575 is in compliance with Directive 2014/53/EU
- The full text of the EU declaration of conformity is available at the following internet address: www.princesshome.eu/doc

CLEANING AND MAINTENANCE

- Unplug the appliance and allow it to cool down. Use a soft, slightly damp cloth to wipe appliance surfaces. Do not allow water or any other liquid to get into the unit.
- Clean the air suction opening from time to time with a fine brush.

ENVIRONMENT

This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at www.princesshome.eu!



This product is only suitable for well insulated spaces or occasional use.

Wireless technology: Wi-Fi
Operating frequency: 2400MHz~2483.5MHz
Max. radio-frequency power: 20 dBm



smartwares® Europe
Swaardvenstraat 65 | 5048 AV | Tilburg
The Netherlands | www.princesshome.eu



smartwares® Safety and Lighting Ltd.
Meriden House | 6 Great Cornbow
Halesowen | West Midlands | B63 3AB |
United Kingdom | www.princesshome.co.uk