 


# Assembly Instructions

## GORAN DINING CHAIR

518260

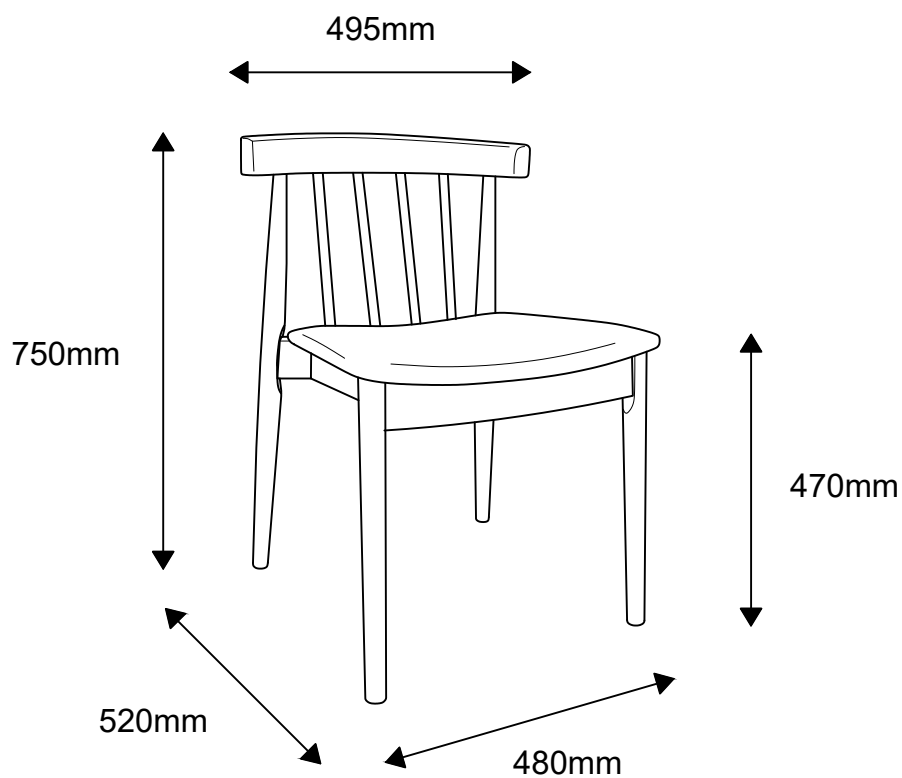

## **Keep these instructions for future reference**

 
Assemble the furniture on a soft level surface to avoid damaging the furniture or your floor.

We recommend furniture be assembled near where they will be placed, to avoid moving the product unnecessarily once assembled.

 
If there is a need to move the furniture, please remove all loose items and have extra hands to help lift the furniture to the desired location. Dragging the furniture will damage both the furniture and the floor.

Regularly check and re-tighten (if necessary) all bolts on furniture that you have assembled yourself.

## **Tools Required**




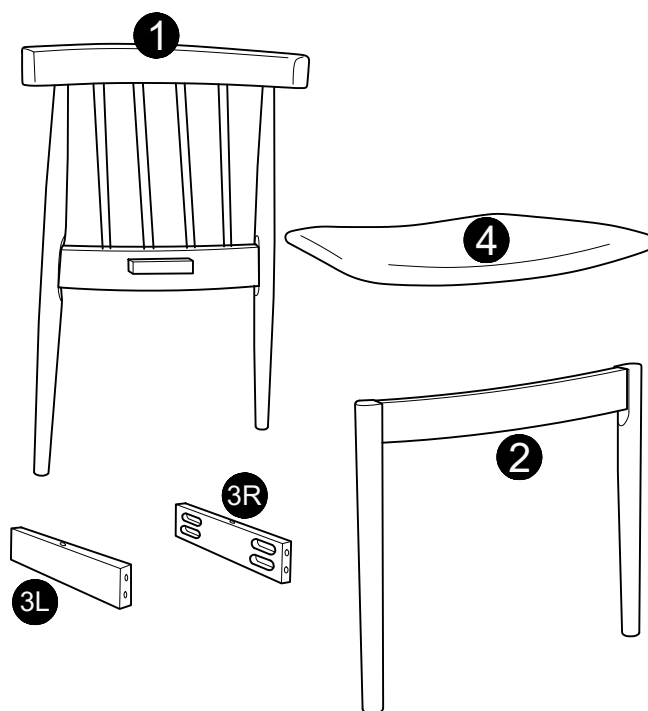

## PARTS LIST




 NO.	PARTS LIST	QTY
(1)	CHAIR BACK	1
(2)	FRONT LEG FRAME	1
(3)	SIDE RAIL (L&R)	2
(4)	CUSHION SEAT	1

## HARDWARE LIST

NO.	DESCRIPTION		QTY
A	JCBC M6 x 50MM		10
B	Spring Washer M6		10
C	CSK SCREW M4 x 32MM		4
D	Allen Key M4 x 110MM		1

# 1

 



A x 4  
M6 x 50MM




B x 4  
M6



  D x 1

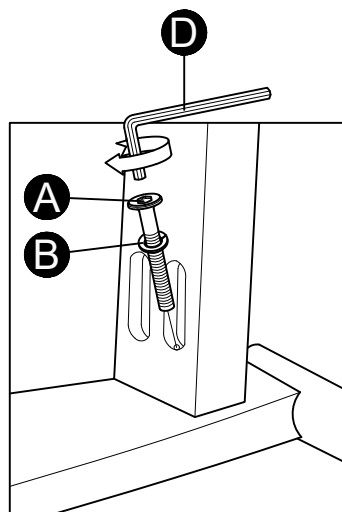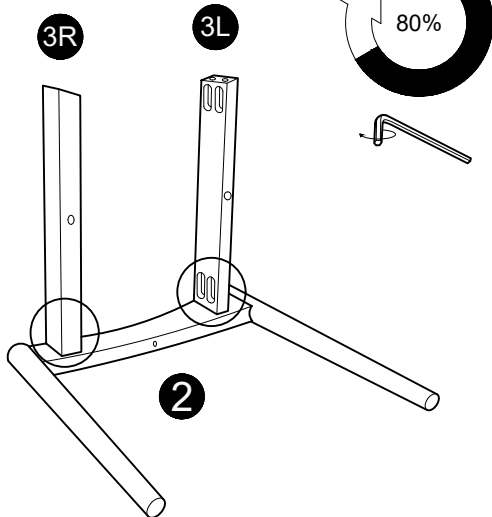

# 2

 



A x 4  
M6 x 50MM



B x 4  
M6



 
 
D x 1

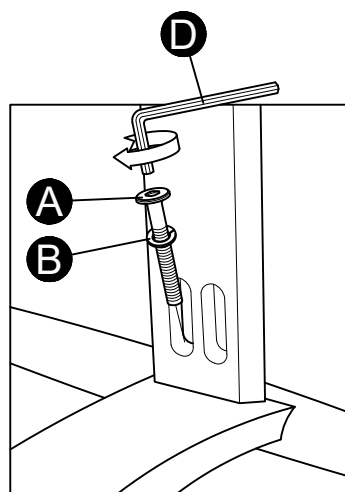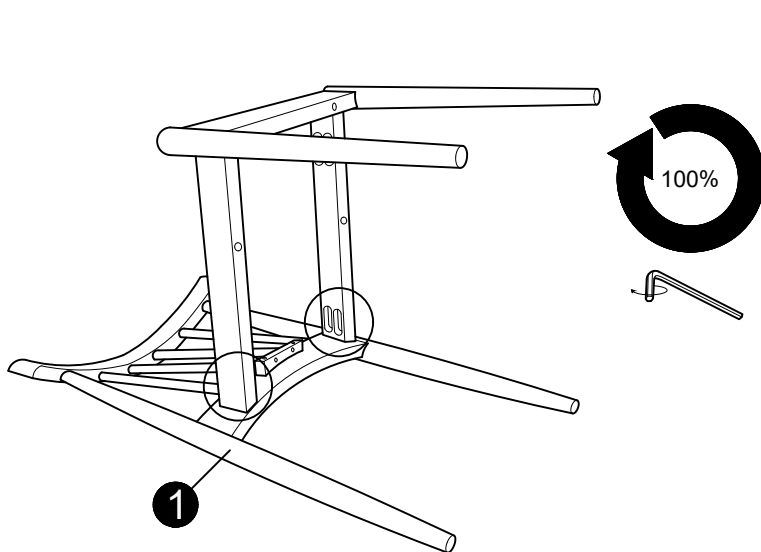


# 3



  D x 1

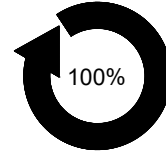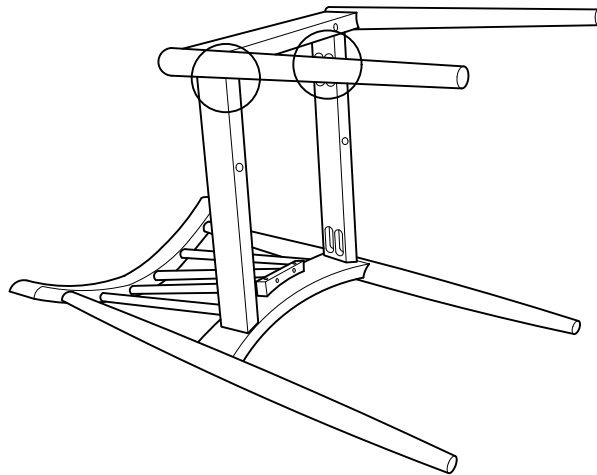

# 4

 




A x 2  
M6 x 50MM



B x 2  
M6



 
 
 
D x 1

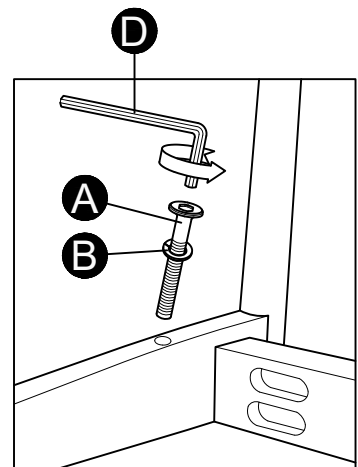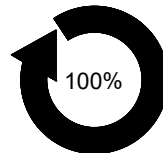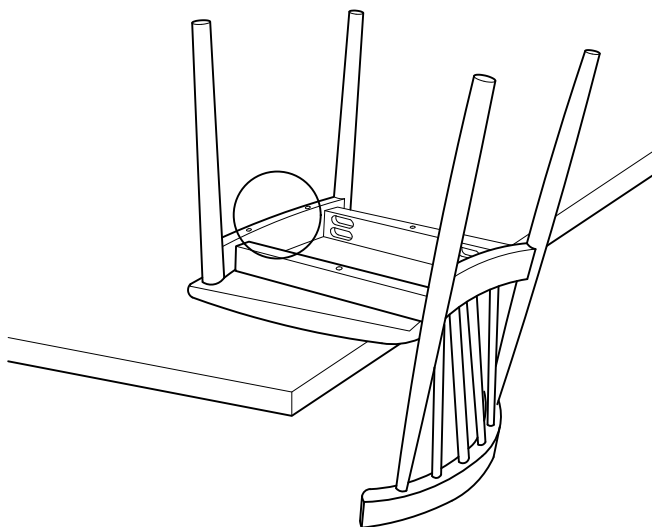



# 5



   C x 4  
M4 x 32MM

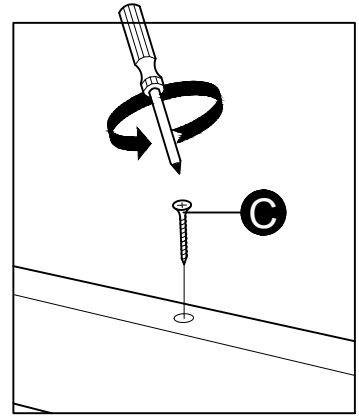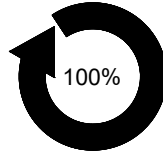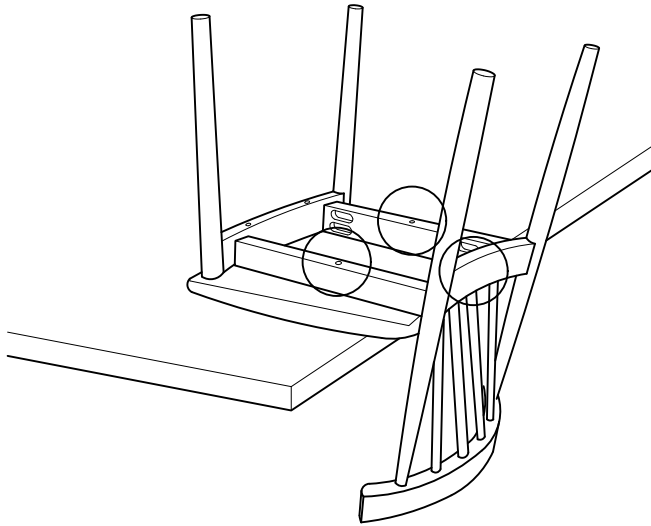

# 6

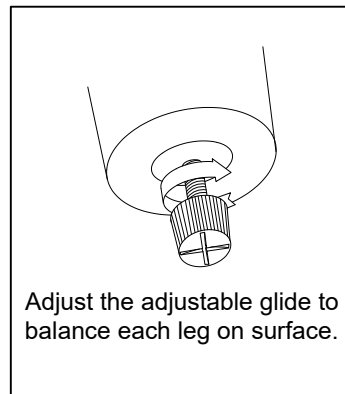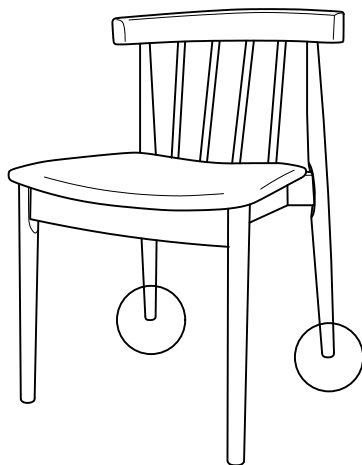  

Adjust the adjustable glide to  
balance each leg on surface.