


Assembly Instructions

Disney Teepee
522077

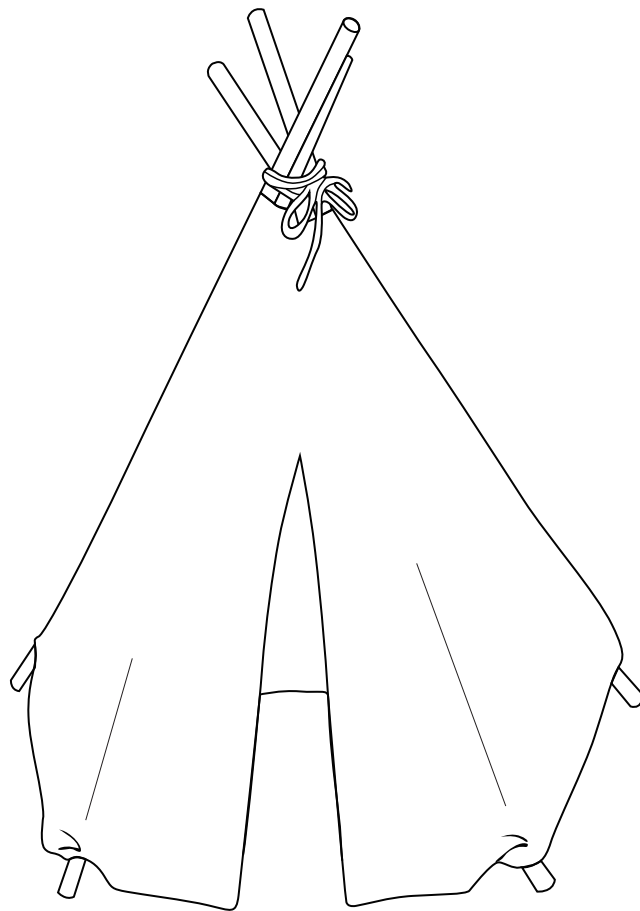

IMPORTANT!

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Assembly to be carried out by a competent adult only.

During assembly children should be kept away from the product due to the possible risk of injury.

We recommend furniture be assembled near where they will be placed, to avoid moving the product unnecessarily once assembled.

Regularly check and re-tighten (if necessary) all bolts on furniture that you have assembled yourself.

Do not use this item if any components are missing or damaged.

Folding and unfolding this product should only be carried out under adult supervision.

Ensure that fingers and legs are clear of all adjustments when adjusting this product.

This product is suitable for children in the age range 3-7 years.

 
Keep away from fire.

Surface wash only with a damp cloth.

CAUTION: FREQUENT EXPOSURE TO DIRECT SUNLIGHT OR SIMILAR SOURCES MAY CAUSE THE SURFACE TO DISCOLOUR OR FADE.


PARTS LIST

1




Pine Poles x 4

 2



Pine Poles x 8

 3



Pine Poles x 4

4



Teepee x 1

5




 
Rope x 1

6




Connectors x 12

1

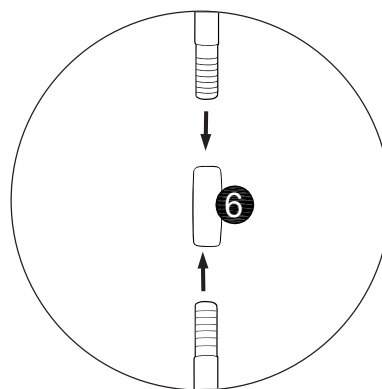


x4


2

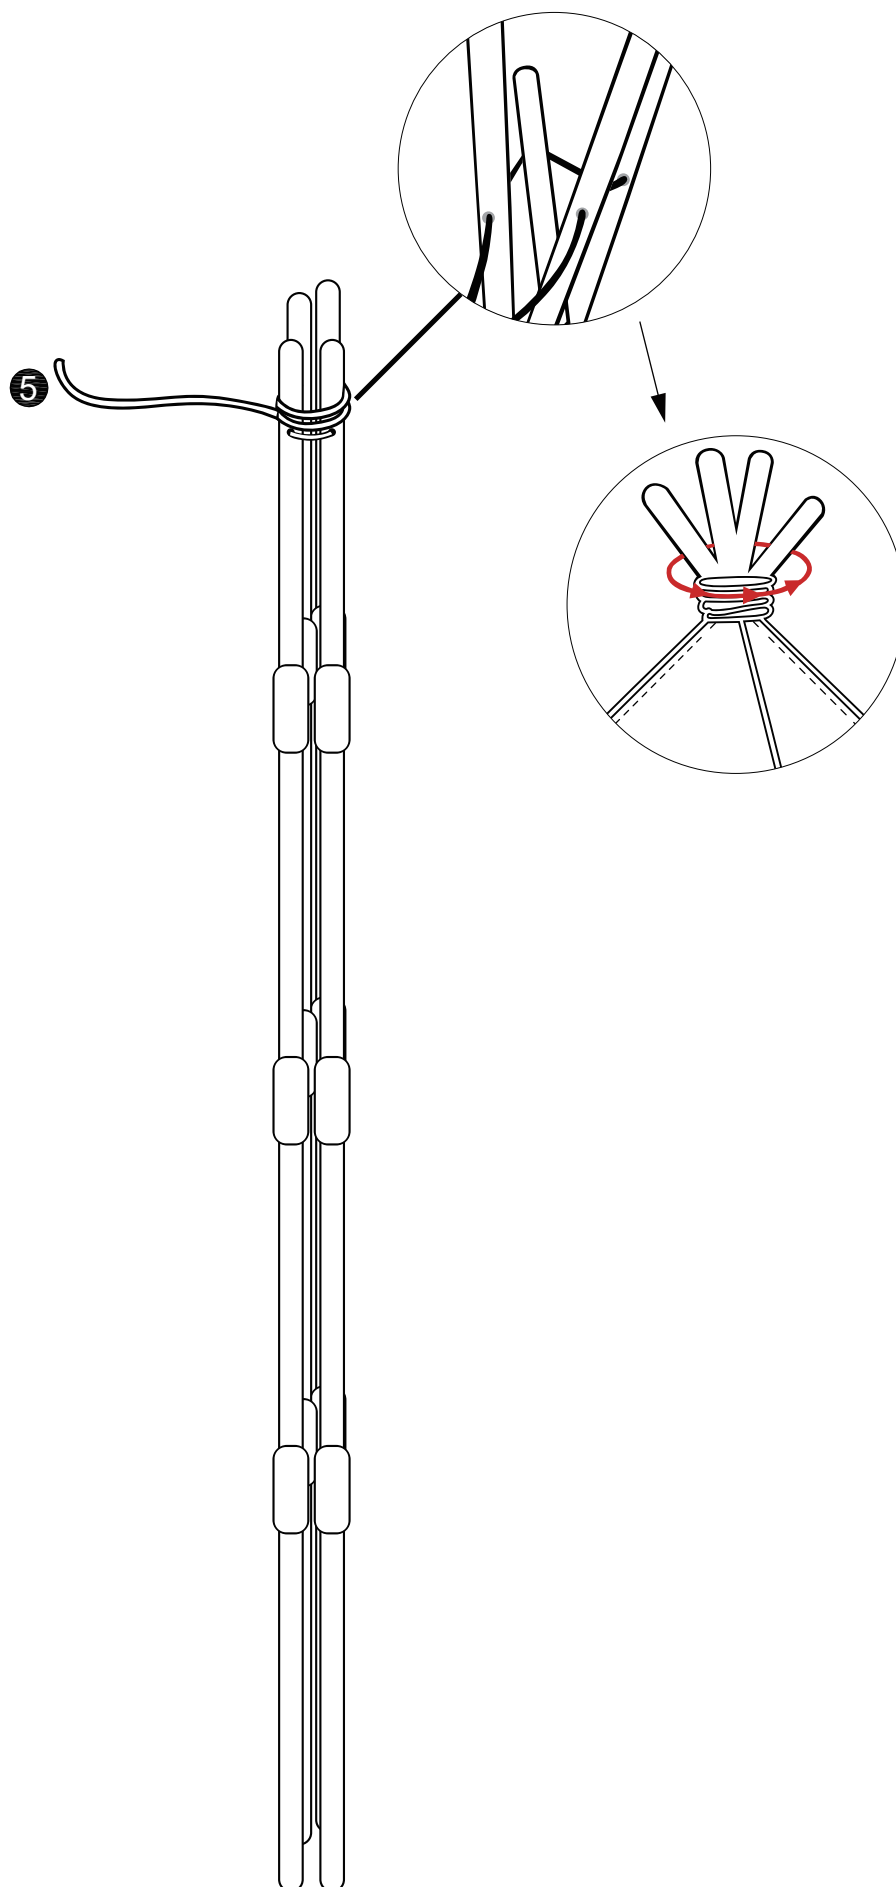


3

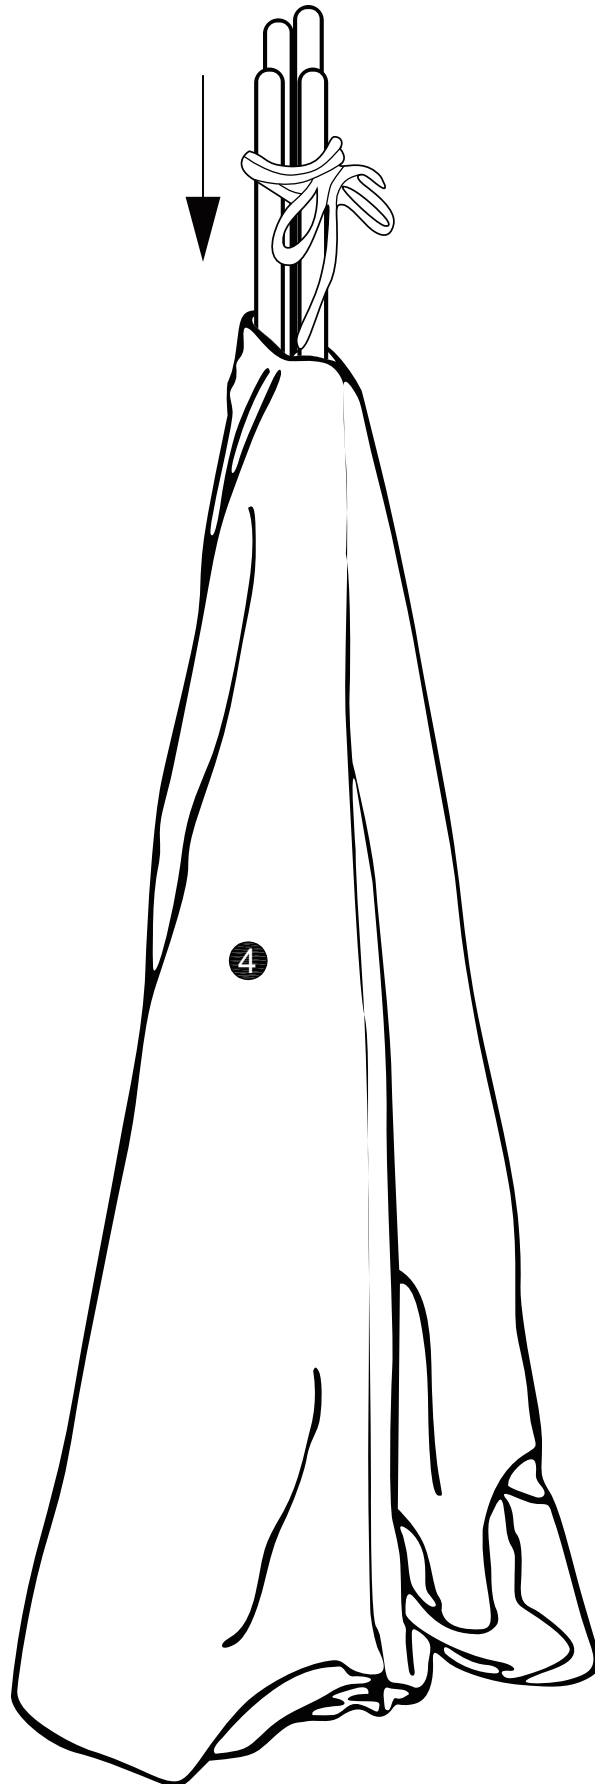

4

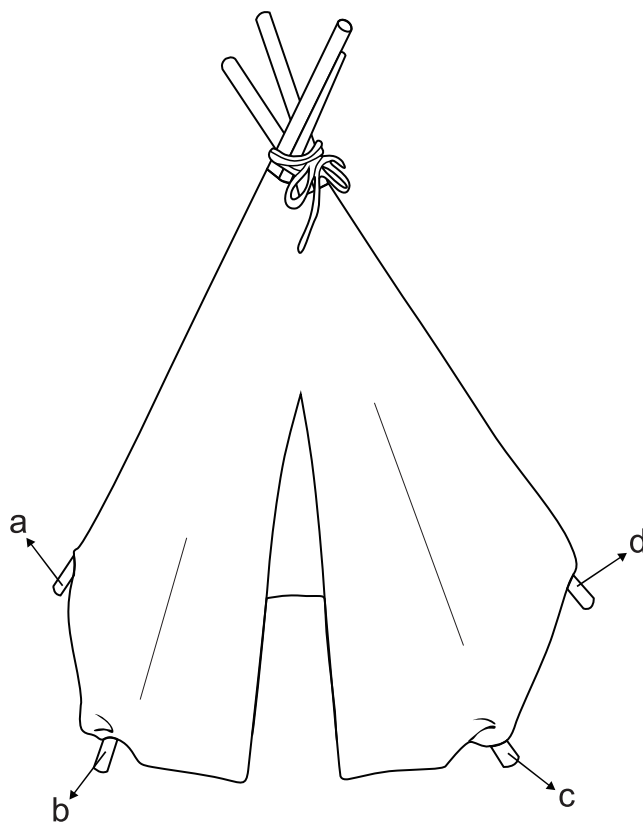

5

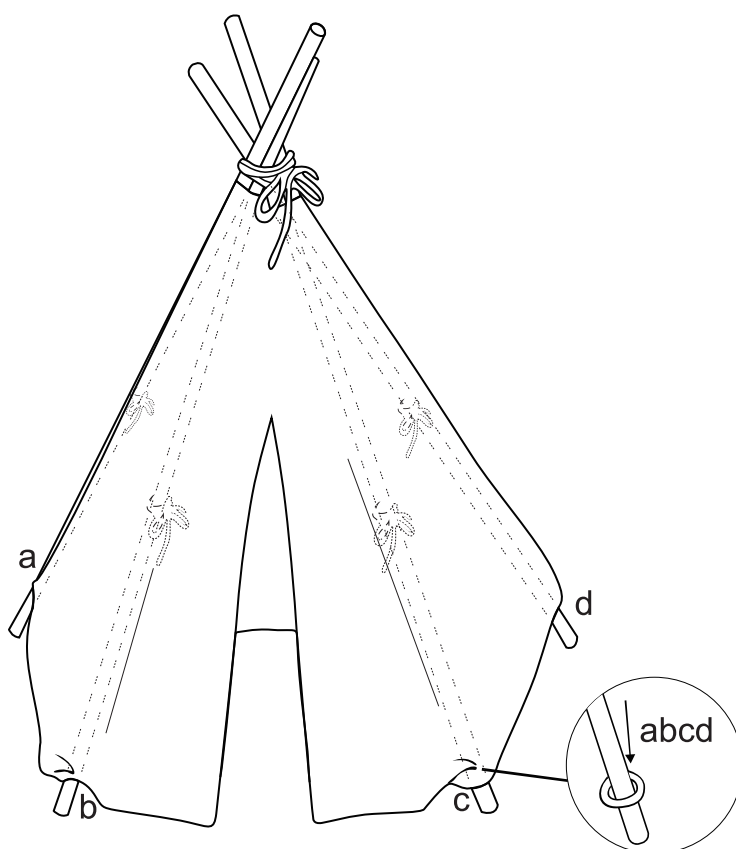

Sourcebynet UK Limited
Unit 8, Nine Bridges, Vanguard Way,
Battlefield Enterprise Park, Shrewsbury,
SY1 3TG, UK