


Assembly Instructions

Bluey Character Chair

522470-01-01

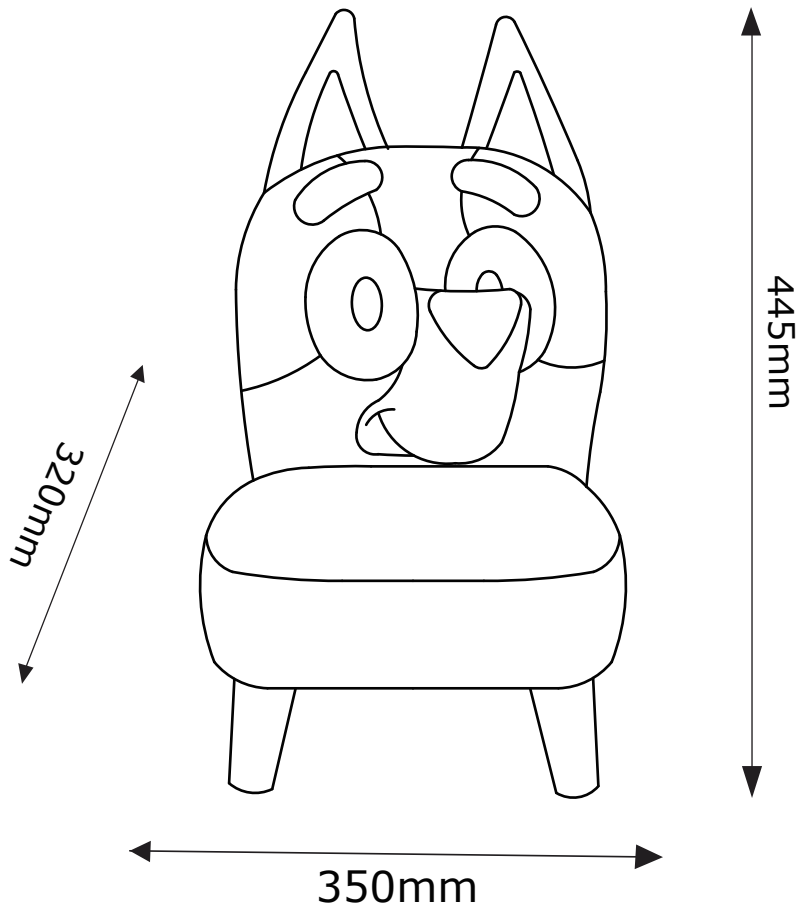

IMPORTANT!

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Assembly to be carried out by a competent adult only.

During assembly children should be kept away from the product due to the possible risk of injury.

Do not use the furniture if any part is broken, torn or missing and use only spare parts approved by the manufacturer.

Assemble the furniture on a soft level surface to avoid damaging the product or your floor.

We recommend furniture be assembled near where they will be placed, to avoid moving the product unnecessarily once assembled.

If there is a need to move the furniture, please remove all loose items and have extra hands to help lift the furniture to the desired location. Dragging the furniture will damage both the furniture and the floor.

Ensure that fingers and legs are clear of all adjustments when adjusting this product.

Regularly check and re-tighten (if necessary) all bolts on furniture that you have assembled yourself.

This product is suitable for children in the age range 3 to 7 years.

Maximum weight allowed on product: 30kg.

Tools Required



Care and Maintenance of your Furniture

Do not expose upholstered furniture to direct sunlight for long periods.

Avoid excessive wear and tear on your upholstery.


Avoid allowing pets on the upholstery as their claws may cause damage to the cover.



Cleaning Advise

For light daily cleaning, use a clean, damp cloth (not wet).



In case stronger cleaning is required, use only detergent specially recommended for your furniture.

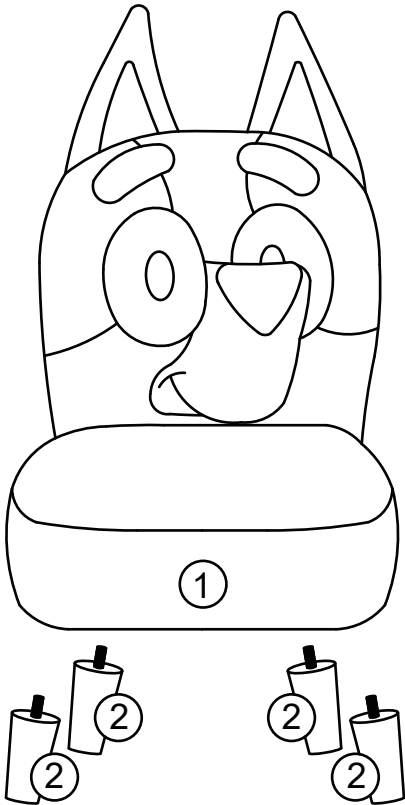PARTS LIST



A x 1 	B x 4 
--	--

1

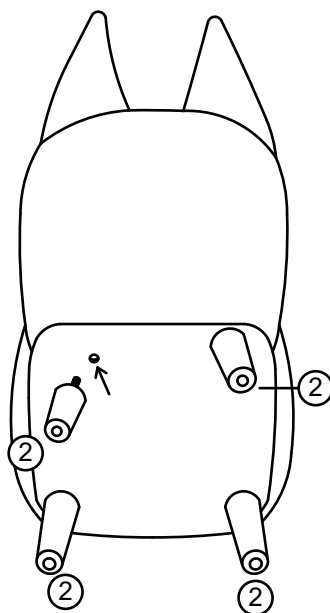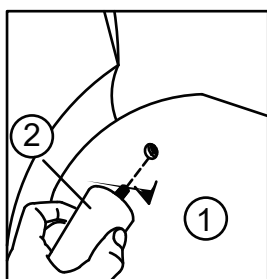

2

