



CAB 165 R01 | INSTRUCTION LEAFLET

WC9721## VALLON SINGLE DOOR CABINET
WC9726## VALLON DOUBLE DOOR CABINET

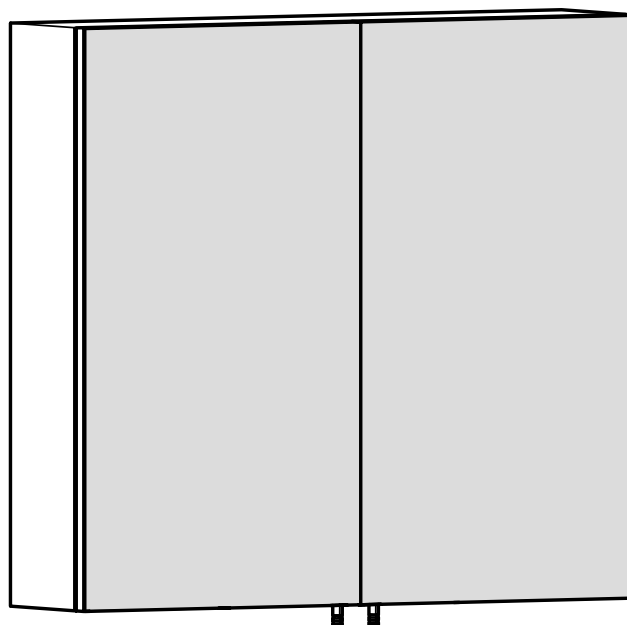

ALL ILLUSTRATIONS OF THE PRODUCT ARE FOR REFERENCE ONLY.
COMPONENTS SUPPLIED WITH INDIVIDUAL PRODUCTS MAY DIFFER.

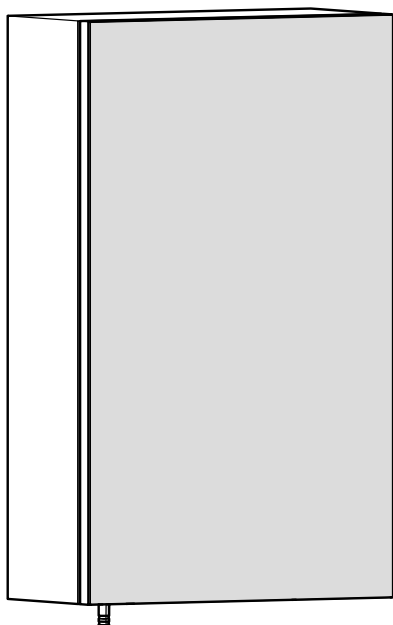

ALWAYS READ THROUGH AND FULLY UNDERSTAND THE INSTRUCTION LEAFLET BEFORE STARTING THE INSTALLATION OF THIS PRODUCT.

ALWAYS CHECK THE PACKAGING AND ENSURE YOU HAVE ALL FIXINGS AND COMPONENT PARTS DETAILED IN THIS INSTRUCTION LEAFLET BEFORE RECYCLING OR DISPOSING OF THE PACKAGING.

ALWAYS ENSURE YOU HAVE ALL THE FIXINGS AND COMPONENT PARTS BEFORE ATTEMPTING TO ASSEMBLE OR FIT THIS PRODUCT.

Thank you for purchasing this Croydex product. Follow the fixing and care instructions in this manual to ensure that your product is fitted safely and that it retains its high quality finish.

RETAIN THIS MANUAL FOR FUTURE REFERENCE.

ADDRESS (UK)

Croydex
Central Way
Andover, Hampshire
SP10 5AW, UK

ADDRESS (EU)

MIL, Unit 8
Purcellsinch Ind Est
Dublin Road, Kilkenny
R95 HP71, Ireland


1 - INTRODUCTION

SAFETY & PRODUCT CARE


- 1. ALWAYS** make sure all parts are present. If any part is damaged or missing, do not attempt to assemble.
- 2. ALWAYS** keep all tools out of reach of children.
- 3. ALWAYS** take care when using power tools, particularly if there is any water in the working area.
- 4. ALWAYS** wear eye protection when using power tools.
- 5. ALWAYS** check for pipes and cables before drilling into walls.
- 6. ALWAYS** use a Residual Current Circuit Breaker (RCCB).
- 7. ALWAYS** use a drill bit that is suitable for the surface that is being drilled.
- 8. ALWAYS** use a ceramic drill bit when drilling into tiled surfaces and use masking tape on tiled surfaces to prevent the drill slipping.
- 9. DO NOT** use a hammer drill when drilling through tiles.
- 10. ALWAYS** ensure the drill hole passes through the central tiled area, **DO NOT** drill on the grout line of tiles.
- 11. DO NOT** use power tools for assembling the product including power drills and power screwdrivers.
- 12.** The wall plugs supplied are for use on solid walls only. For cavity walls or plasterboard walls, use specialist fixings that are suitable for the type of wall construction.
- 13. ALWAYS** insert the wall plugs flush to the surface of the wall. If fitting to a tiled surface, the wall plugs should be inserted below the surface of the tile to avoid cracking.
- 14. DO NOT** use abrasive or chemical cleaners as these may damage the product. To retain the best quality finish, clean the product regularly with a soft damp cloth.
- 15. DO NOT** strike the products with hard or sharp objects.
- 16. DO NOT** slam the door closed/swing the door open as this may damage the hinges.

PARTS AND FIXINGS


(Not to scale)




(A) Pin Handle Screw
x1 (Single)
x2 (Double)



(B) Wall Plug
x4




(C) Mounting Screw
x4




(D) Pin Handle
x1 (Single)
x2 (Double)

TOOLS REQUIRED

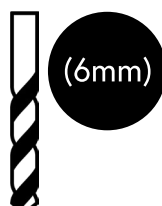

2 - ASSEMBLING THE CABINET

STEP 1

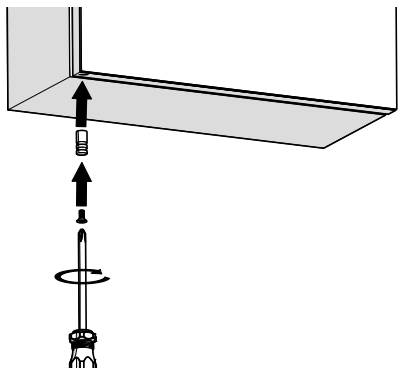


Insert the pin handle screw through the pin handle and guide this into the captive nut located at the bottom of the door as shown in the diagram. Using a cross-head screwdriver, rotate the pin handle screw clock-wise to securely tighten the pin handle.

Note: If you have a double door, repeat this for the second door.

Note: The pin handle is optional and can be removed if preferred.

3- MOUNTING THE CABINET


STEP 1

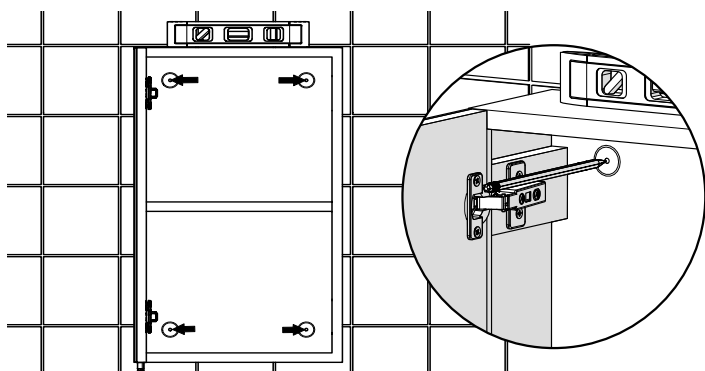

Place the cabinet in the desired position onto the wall and mark the four mounting hole positions using a pencil.

Note: Use a spirit level to ensure the cabinet is level before marking.


STEP 2

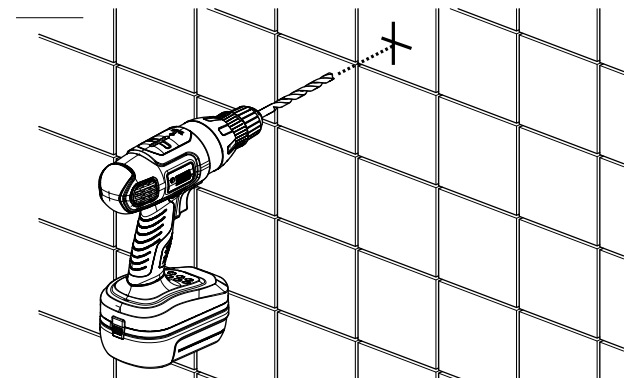

Drill a 6mm hole to a depth of 30mm in the four marked positions.

Note: Read the safety and product care section before proceeding.


STEP 3

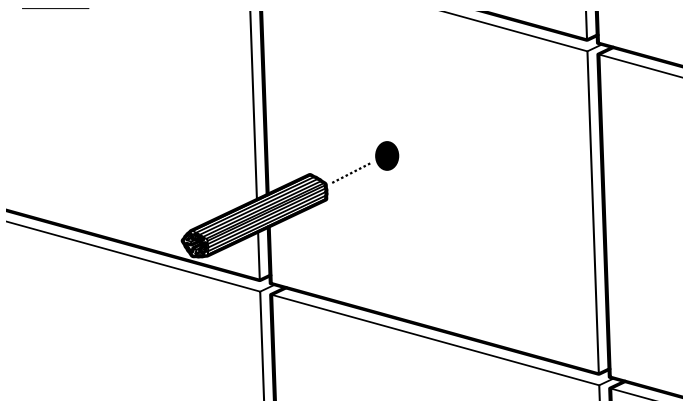

Insert the four wall plugs into the four drilled holes flush to the surface of the wall.

Note: Read safety and product care section before proceeding.

STEP 4

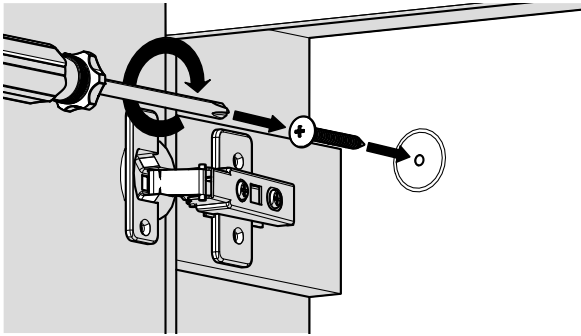


Place the cabinet back on the wall. Pass the mounting screws through the mounting holes and into the wall plugs. Secure the cabinet into place by rotating the mounting screws clock-wise using a cross-head screwdriver.

Note: Do not over-tighten.

Note: Use a spirit level to ensure the cabinet is level before screwing in.

4- DOOR ADJUSTMENT

STEP 1

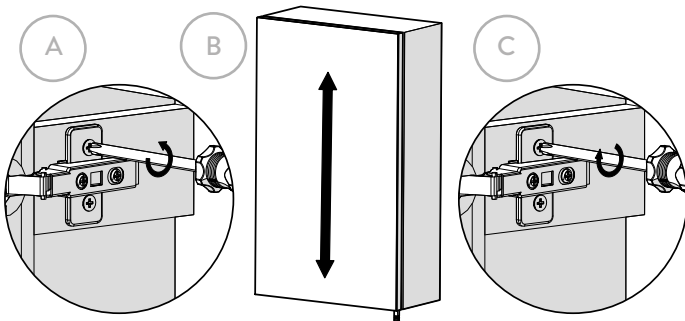


A. If the height of a door needs adjusting, loosen the two screws, as shown in the diagram, on each hinge.

B. Either lower or raise the door(s) to the desired height and hold in place.

C. When happy with the door height, re-tighten the two screws on both hinges.

Note: Do not overtighten


STEP 2

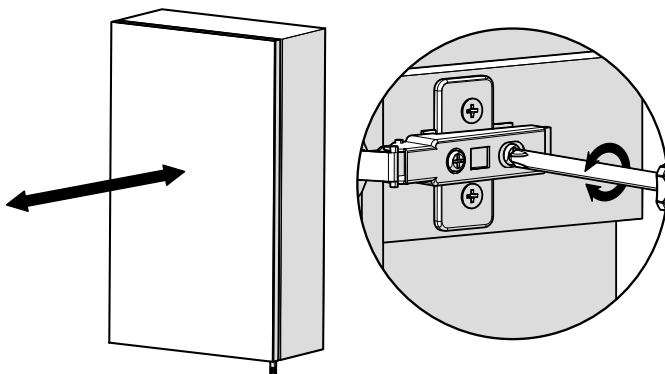

If the depth of a door needs adjusting, use a cross-head screwdriver to either loosen or tighten the rear middle screw as shown in the diagram.

Note: Do not overtighten

STEP 3

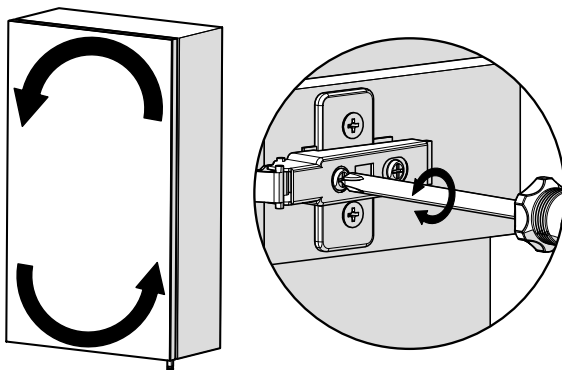

If the angle of a door needs adjusting, use a cross-head screwdriver to either loosen or tighten the front middle screw as shown in the diagram.

Note: Do not overtighten