

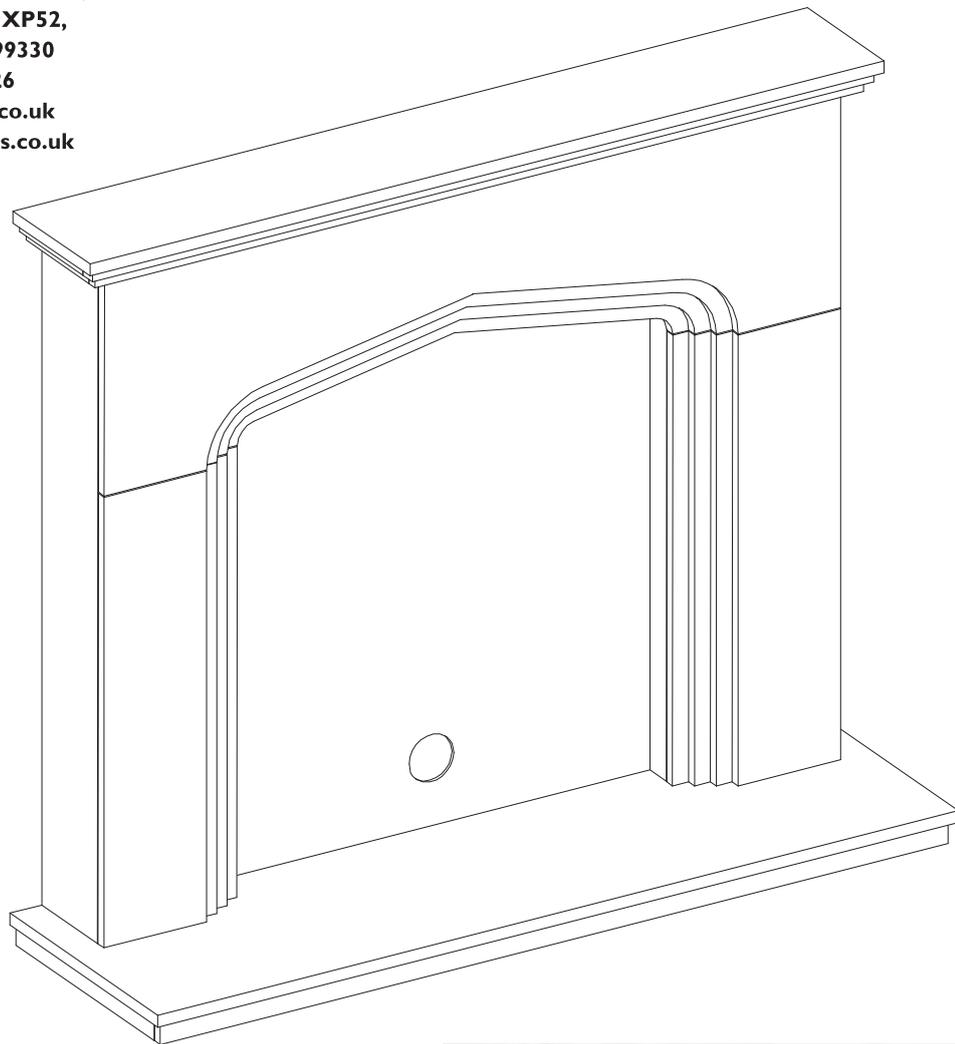
ASSEMBLY & INSTALLATION INSTRUCTIONS



MODELS COVERED BY THESE INSTRUCTIONS F820936 INNSWORTH FIRE SURROUND

Focal Point Fires Ltd
Christchurch, Dorset BH23 2BT
Tel: 01202 49933499330
Fax: 01202 499326
www.focalpointfires.co.uk
e : sales@focalpointfires.co.uk

Focal Point Fires Ltd
RBK House, Irishtown, Athlone,
Co. Westmeath, N37 XP52,
Ireland Tel: 01202 499330
Fax: 01202 499326
www.focalpointfires.co.uk
e : sales@focalpointfires.co.uk



3 YEAR GUARANTEE

SUBJECT TO TERMS & CONDITIONS

For details please see: www.focalpointfires.co.uk or telephone
01202 588635 Option 4

Please note : Except where otherwise stated, all rights, including copyright in the text, images and layout of this booklet is owned by Focal Point Fires Ltd. You are not permitted to copy or adapt any of the content without the prior written permission of Focal Point Fires Ltd.

All instructions must be handed to the user for safekeeping.

Revision A 07/21

© 2021 Focal Point Fires Ltd.

Section	Contents	Page No.
1.0	Important notes	2
2.0	Tools required	2
3.0	Hardware & parts list	2
4.0	Assembly	3
5.0	Installation	6
6.0	Cleaning/ finishing	7
7.0	Guarantee - terms and conditions	7

1.0 IMPORTANT NOTES

To ensure safe and stable installation:

1. The assembled Fire Surround must be fixed / secured to wall.
2. The wall must be sturdy and in good repair.
3. Some walls require alternative fixings (not included).
4. When drilling into the wall, check for hidden pipes and cables.

2.0 TOOLS REQUIRED










Cross head screwdriver PZ2 (3 inches in length or greater)

Drill, 6mm and a 2mm suitable drill bit


Pencil

Tape measure

3.0 HARDWARE & PARTS LIST

CODE	NAME	FIGURE	QUANTITY	CODE	NAME	FIGURE	QUANTITY
A	WOOD DOWELS (8x 30mm)		26PCS	K	ALLEN KEY		1PCS
B	CAM LOCKS (15x 9mm)		19PCS	①	TOP PANEL		1PCS
C	CAM BOLTS (6x 40mm)		19PCS	②	FRONT PANEL		1PCS
D	WOOD SCREWS		17PCS	③	LEFT SIDE LEG		1PCS
E	WOOD SCREWS (3.5x 16mm)		9PCS	④	RIGHT SIDE LEG		1PCS
F	WALL SCREWS (4x 30mm)		2PCS	⑤	LEFT SIDE PANEL		1PCS
G	WOOD SCREWS (3x 12mm)		4PCS	⑥	RIGHT SIDE PANEL		1PCS
H	WALL PLUGS (6x 30mm)		2PCS	⑦	INSIDE LEGS		3PCS
I	MIRROR PLATES (45x 43mm)		2PCS	⑧	HEARTH		1PCS
J	GLUE (10g)		1PCS	⑨	BACK PANEL		1PCS

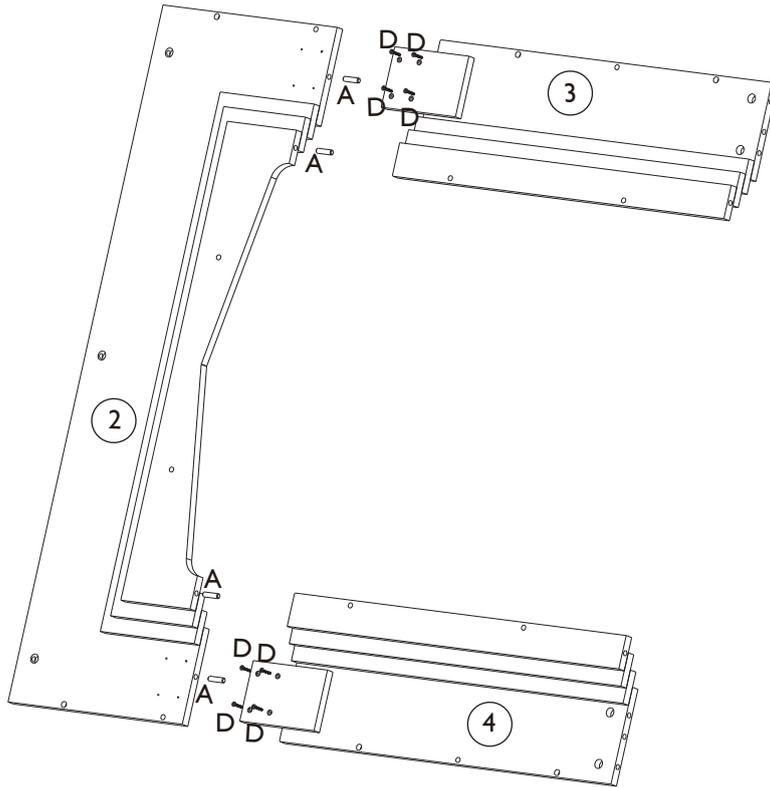STEP 1




Fixings	Parts
A x 4 PCS	2
D x 8 PCS	3
	4

Gently lay both legs you have prepared onto a suitable protected surface. Be extremely careful not to scratch the front edges of the legs. **DO NOT DRAG THE LEGS!** Make sure that the legs are lifted every time they are moved to avoid them from being damaged.

Using a drop of glue (J) in each dowel hole, insert 2 dowels (A) in to the left side panel (3). Again, using a drop of glue (J) in the dowel holes take the front panel (2) and push them on to the dowels (A). Use 2x wood screws (D) to screw the parts together. Repeat the process for the right side panel (4) and front panel (2).

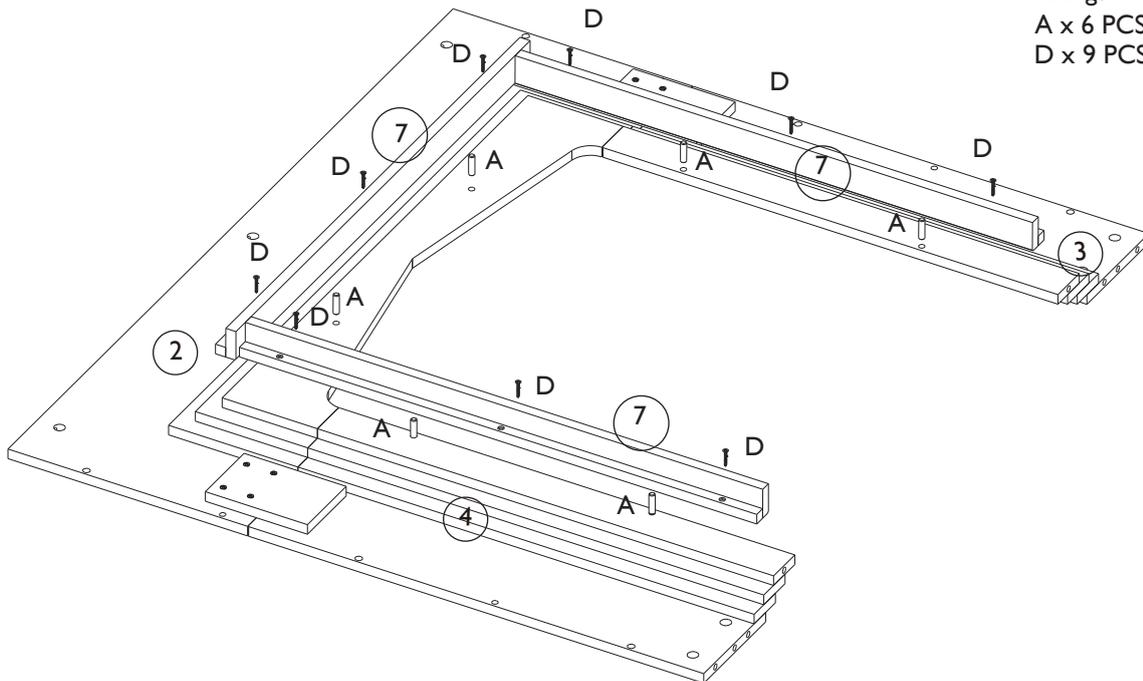STEP 2



Fixings	Parts
A x 6 PCS	2
D x 9 PCS	3
	4
	7

Using a drop of glue (J) in each dowel hole, 2 x dowels (A) in to the left side panel (3). Again, using a drop of glue (J) in the dowel holes take the inside leg (7) and push them on to the dowels of the left side panel (3).


Use 3 x wood screws (D) to screw the inside leg (7) to the left side panel (3). Repeat the process to secure the other 2 inside legs (7) to the right side panel (4) and front panel (2).

4.0 ASSEMBLY

GB IE

STEP 3

Fixings	Parts
A x 4 PCS	2
B x 6 PCS	3
C x 6 PCS	4
	5
	6

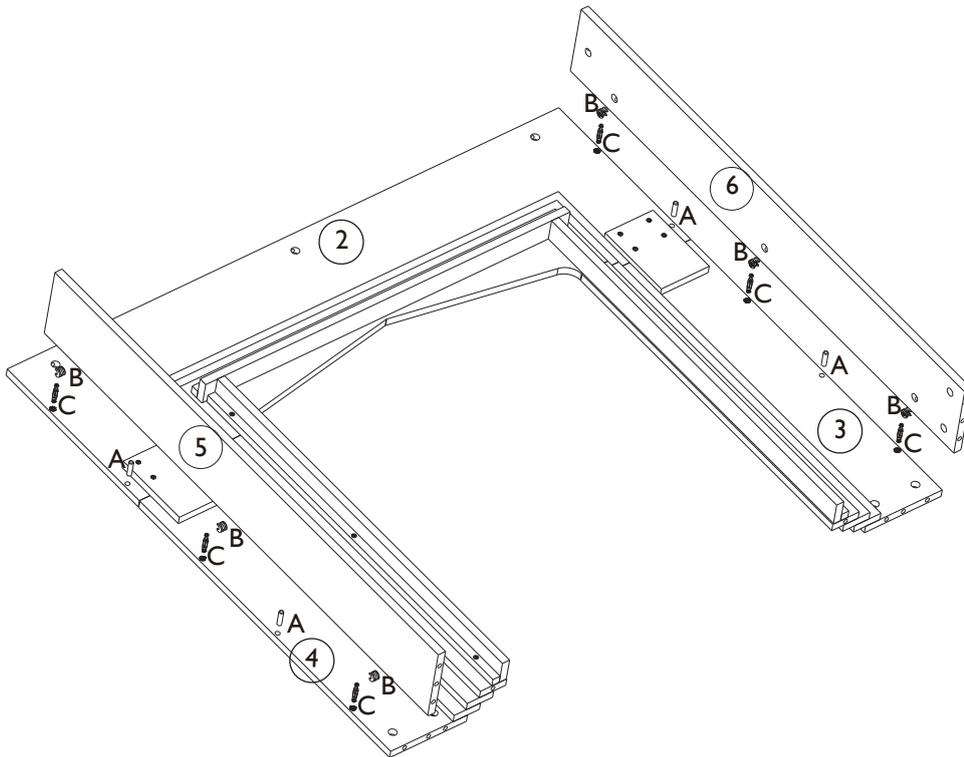


Use the glue (J) in the dowel holes before inserting 2x dowels (A) into the left and right hand panels (3)(4). Position the cam bolts (C) in to left and right side panels (3)(4).

Take the left side and the right side legs (5)(6), put some glue (J) in to the dowel holes. Connect the side legs (5)(6) to the side panels (3)(4), make all the inserts are in the correct position. Insert the cam locks (B), turn the cam locks (B) clockwise to lock the parts together.

STEP 4

Fixings	Parts
A x 6 PCS	2
B x 8 PCS	3
C x 8 PCS	4
	5
	6
	7
	8

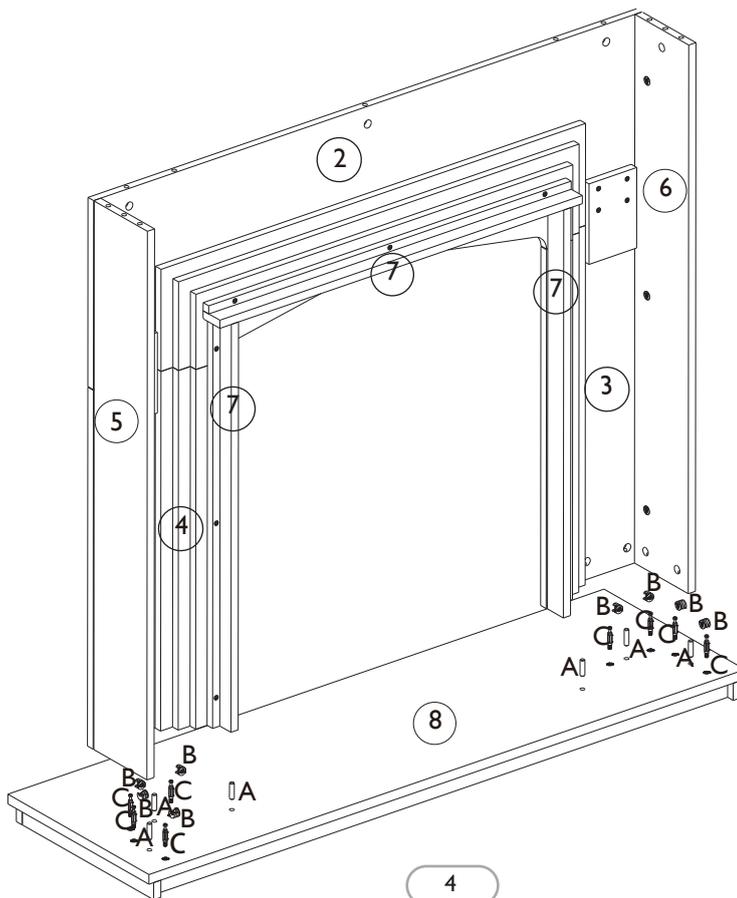

4.0 ASSEMBLY


GB IE

Firstly insert 6x wooden dowels (A) with glue into the top of the hearth (8). With a cross headed screw driver insert 8x single headed cam bolts (C) into the top of the hearth (8). For the next step we recommend to use two people.

Carefully lift the surround over the hearth (8) ensuring that all 8x single headed cam bolts (C) and 6 x wooden dowels (A) insert the bottom edges of the surround. Once all 8x single headed cam bolts (C) and wooden dowels (A) are correctly in position, insert 8x cam locks (C) into the rear of the surround and tighten together using a cross headed screw driver.

STEP 5

Fixings	Parts
A x 6 PCS	1
B x 5 PCS	2
C x 5 PCS	3
	4
	5
	6
	7
	8

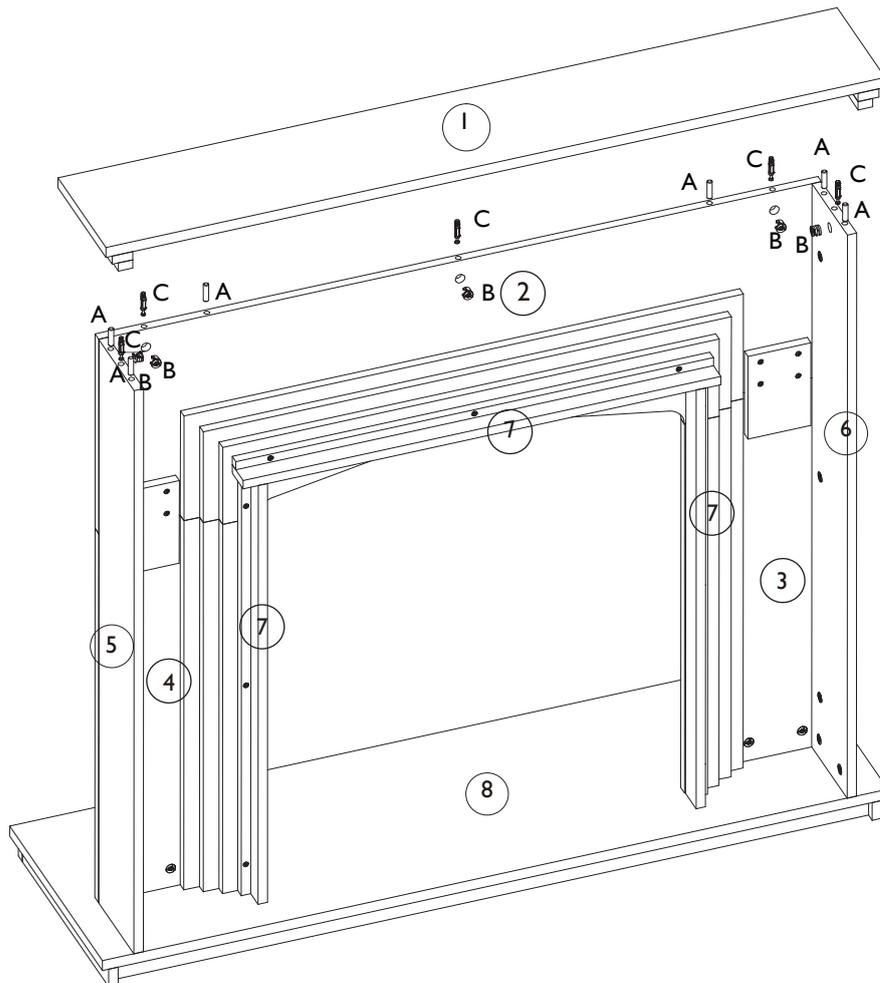


Insert 5x cam locks (C) and glue (J) 6x wood dowels (A) into the legs, side panels and front panel (2,5,6)
 Next prepare the top panel (1) by screwing all 5 x cam bolts (C) into position. The dowel joints (A) need to be glued in at both ends of the top panel. Connect the top panel to the surround, making sure all inserts are in the correct position. Once home, all 5x cam locks (B) can be tightened into position.

4.0 ASSEMBLY

GB IE

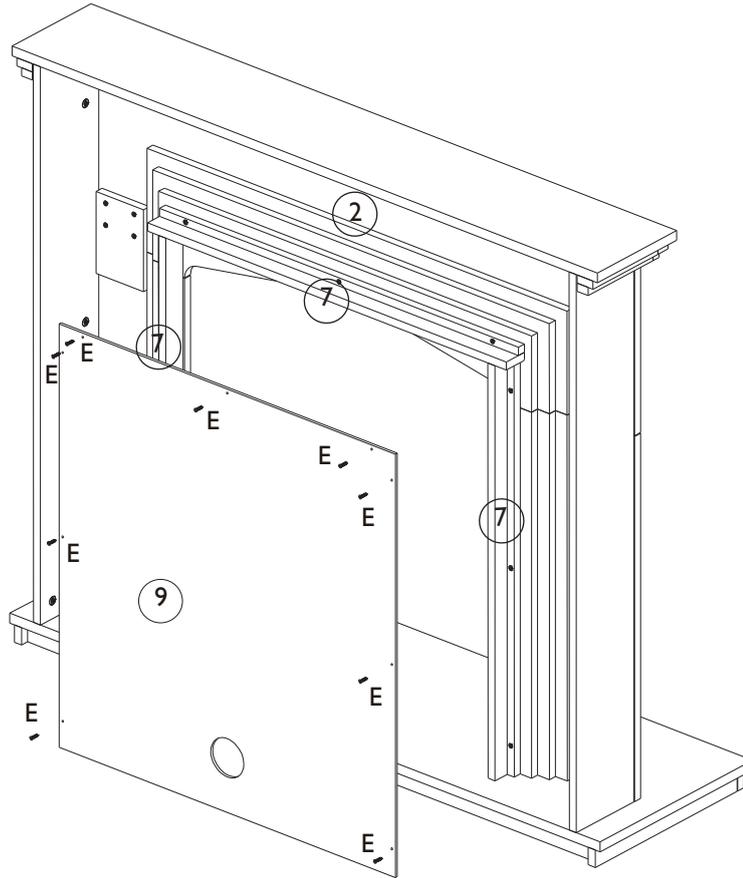STEP 6




Fixings
E x 9 PCS

Parts
1
2
3
4
5
6
7
8
9

Offer the back panel (9) into position. Line the screw holes in the back panel (9) up with the screw holes of the back of the rebates (7). Once aligned, screw the 9x screws (E) with a cross headed screwdriver into position.

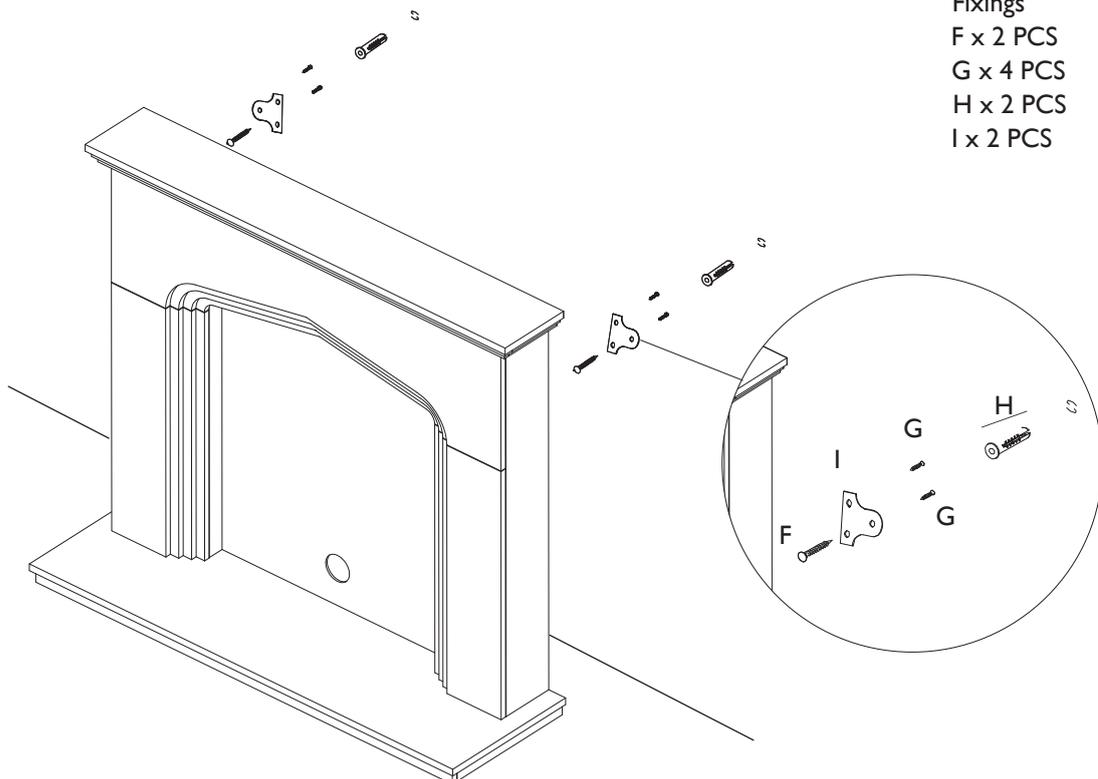5.0 INSTALLATION



Fixings
F x 2 PCS
G x 4 PCS
H x 2 PCS
I x 2 PCS

5.0 INSTALLATION

GB IE

With a pencil mark out the desired height where you would like the mirror brackets(I) to be situated on the rear of the legs. To avoid splitting the leg, pre drill the bracket holes with a 2mm drill bit, Now attach the brackets to the legs using the 3x12mm screws (G). Once the brackets are in position, centre and level the hearth into its final fitting position, mark with a pencil on the wall where you wish to drill. Remove the surround and prepare the wall from the marked positions. If using the fixings supplied, drill a hole in the wall using a 6mm drill bit, if not, use a suitable drill bit for the wall plugs you are using. Insert the wall plugs (H) into position. Offering the surround back up into position against the wall, you are now able to secure the surround to the wall using the 4x30mm screws (F).

6.0 CLEANING/ FINISHING

Before carrying out any of the following operations, ensure that the appliance is OFF and completely cold. Regularly clean around the appliance to ensure that dust, fluff, pet hair etc, are kept to a minimum. There are no other specific requirements for care, other than regular cleaning of the general appliance.

A wipe with a dry cloth is normally sufficient. **DO NOT** use abrasive cleaners as they can damage the finish. Test on a hidden part before cleaning. Clean only in the direction of the grain. Regularly check the surround is securely fixed in position.

7.0 GUARANTEE - TERMS AND CONDITIONS

The 3 year guarantee commences from the date of purchase, provided that the terms and conditions are adhered to:

Registration is not required.

1. For any claim to be made within the 3 years from date of purchase you will be required to provide and supply us with your proof of purchase.

Making a claim is easy.

If you wish to make a claim under our 3 year guarantee and all the terms and conditions for your product have been met then please submit the following information for the attention of the 3G Service Department to the address below. Alternatively, you can email or fax. Please note that this does not affect your statutory rights.

Focal Point Fires Ltd, 3G Service Department, Reid Street, Christchurch, Dorset, BH23 2BT.

Alternatively email: 3g@focalpointfires.co.uk or fax. 01202 499326.

Details required:

1. Name, full address including post code and contact telephone number.
2. Receipt of purchase or credit card statement.