


EN Primed wall panelling – Contemporary

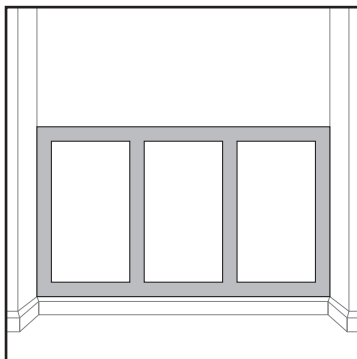


EN IMPORTANT - These instructions are for your safety. Please read through them thoroughly prior to handling the product and retain them for future reference.

5063022565044
5063022568564

V10724_5063022565044_MAND2_2324


EN Parts

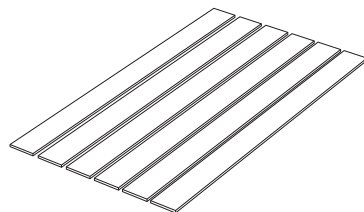

1.2 m MDF strips (97 mm x 9 mm) x6

NOTE: Contents of 1 pack covers approximately 1.2 sqm. You will need to add multiple packs together if you require to cover a larger area.

EN You will need

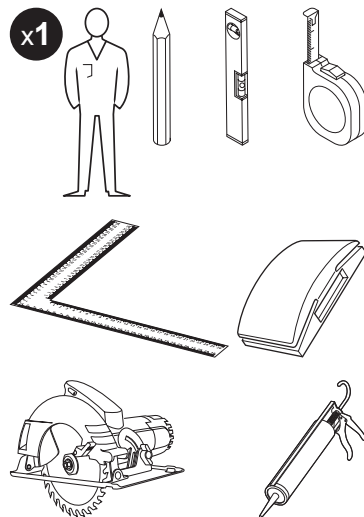

EN Safety

Before you start

- The surface should be free of all dust and debris and loose material.
- To prepare the wall surface, remove any flaking plaster or peeling paint with a scraper or medium-grit sandpaper. Use a cloth to remove any dust or debris.

Safety

- When preparing your walls and installing the wall panelling, you should keep the room you are working in as ventilated as possible. Wear an appropriate mask when sanding and wear safety goggles for eye protection when using machine tools.

Guarantee

We take special care to select high quality materials and use manufacturing techniques that allow us to create products incorporating design and durability. This product has a manufacturer's guarantee of 2 years against manufacturing defects, from the date of purchase (if bought in store) or date of delivery (if bought online), at no additional cost for normal (non-professional or commercial) household use.

To make a claim under this guarantee, you must present your proof of purchase (such as a sales receipt, purchase invoice or other evidence admissible under applicable law), please keep your proof of purchase in a safe place. For this guarantee to apply, the product you purchased must be new, it will not apply to second hand or display products. Unless stated otherwise by applicable law, any replacement product issued under this guarantee will only be guaranteed until expiry of the original period guarantee period.

This guarantee covers product failures and malfunctions provided the product was used for the purpose for which it is intended and subject to installation, cleaning, care and maintenance in accordance with the information contained in these terms and conditions, in the user manual and standard practice, provided that standard practice does not conflict with the user manual.

This guarantee does not cover defects and damage caused by normal wear and tear or damage that could be the result of improper use, faulty installation or assembly, neglect, accident, misuse, or modification of the product. Unless stated otherwise by applicable law, this guarantee will not cover, in any case, ancillary costs (shipping, movement, costs of uninstalling and reinstalling, labour etc), or direct and indirect damage.

If the product is defective, we will, within a reasonable time, replace.

Rights under this guarantee are enforceable in the country in which you purchased this product. Guarantee related queries should be addressed to the store you purchased this product from.

The guarantee is in addition to and does not affect your statutory rights.

IMPORTANT - RETAIN THIS INFORMATION FOR FUTURE REFERENCE : READ CAREFULLY

Manufacturer:

UK Manufacturer:

Kingfisher International Products Limited,
1 Paddington Square, London, W2 1GG,
United Kingdom


EU Manufacturer:

Kingfisher International Products B.V.,
Rapunburgerstraat 175E,
1011 VM Amsterdam,
The Netherlands

EN www.diy.com
www.screwfix.com
www.screwfix.ie


To view instruction manuals online,
visit www.kingfisher.com/products

01

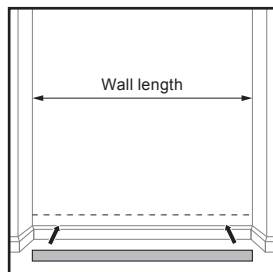


- EN** Measure the wall length to be panelled. Depending on the measurement, cut one or more strips to length to make up horizontal strip across the top of skirting. Apply adhesive in accordance with manufacturer's instructions and press strip(s) to the wall.

02

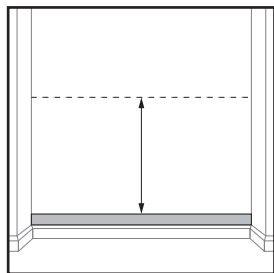


- EN** Measure desired height of the panelling (up to 1297 mm) from top of the bottom horizontal strip and mark a horizontal line across as shown using a straight edge. Check with spirit level.

03

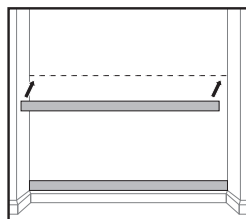


- EN** Cut one or more strips to length to create top horizontal strip - this will be positioned with top edge aligned with marked horizontal line. Apply adhesive and press it to the wall.

04

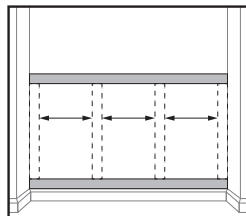


- EN** Calculate the distance between vertical strips using the method described below (it can be used for any wall length).
1. Subtract the width of a single strip from wall length.
i.e. for 1800 mm wall length subtract strip width 97 mm: $1800 - 97 = 1703$ mm
 2. Divide the result by desired number of wall panels (recessed areas between 2 strips).
i.e. for 3 panels $1703 \text{ mm} / 3 = 568$ mm
 3. Finally, for the distance between vertical strips subtract the width of a single strip
 $568 - 97 = 471$ mm
- Mark it up as shown for next steps.

05

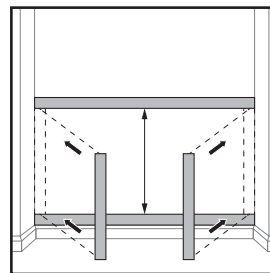


- EN** Measure the distance between top and bottom horizontal strip to cut all vertical strips to length (if needed). Mount 2 vertical strips between top and bottom horizontal strips, placing one at each end of the run.

06

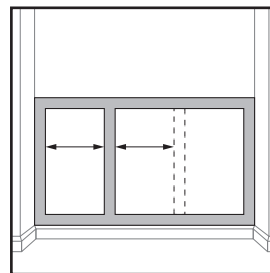

- EN** Follow the same steps for the remaining vertical strips using the placement previously marked up in Step 04.

07

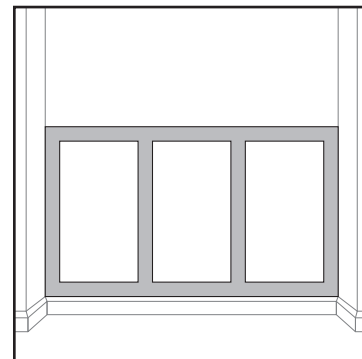

- EN** Fill any gaps and joints with decorator's caulk. Wipe off any excess and sand for a smooth finish if required. You are now ready to paint.