




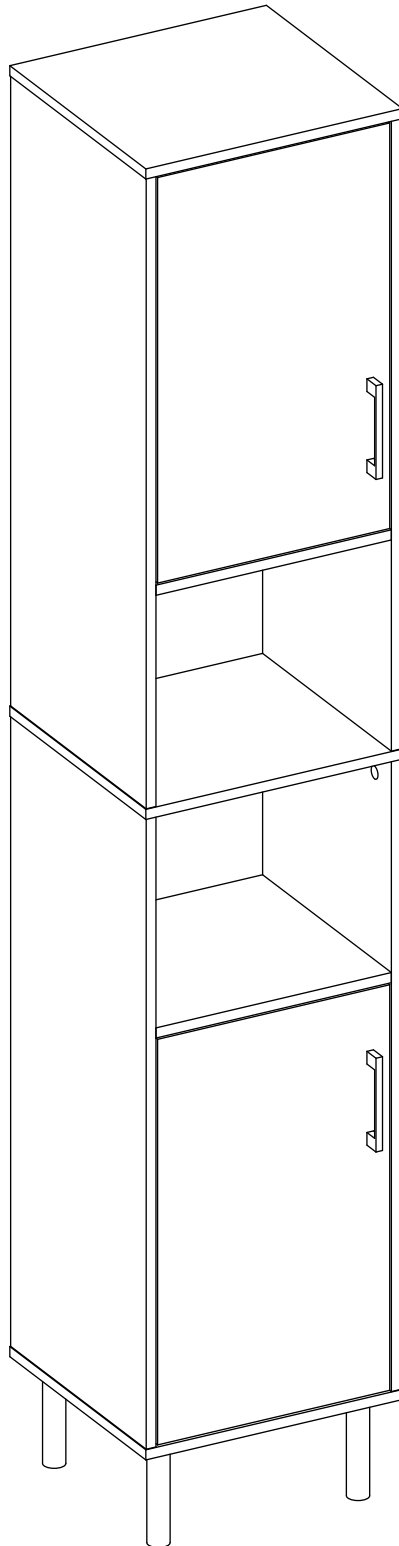


BZR131




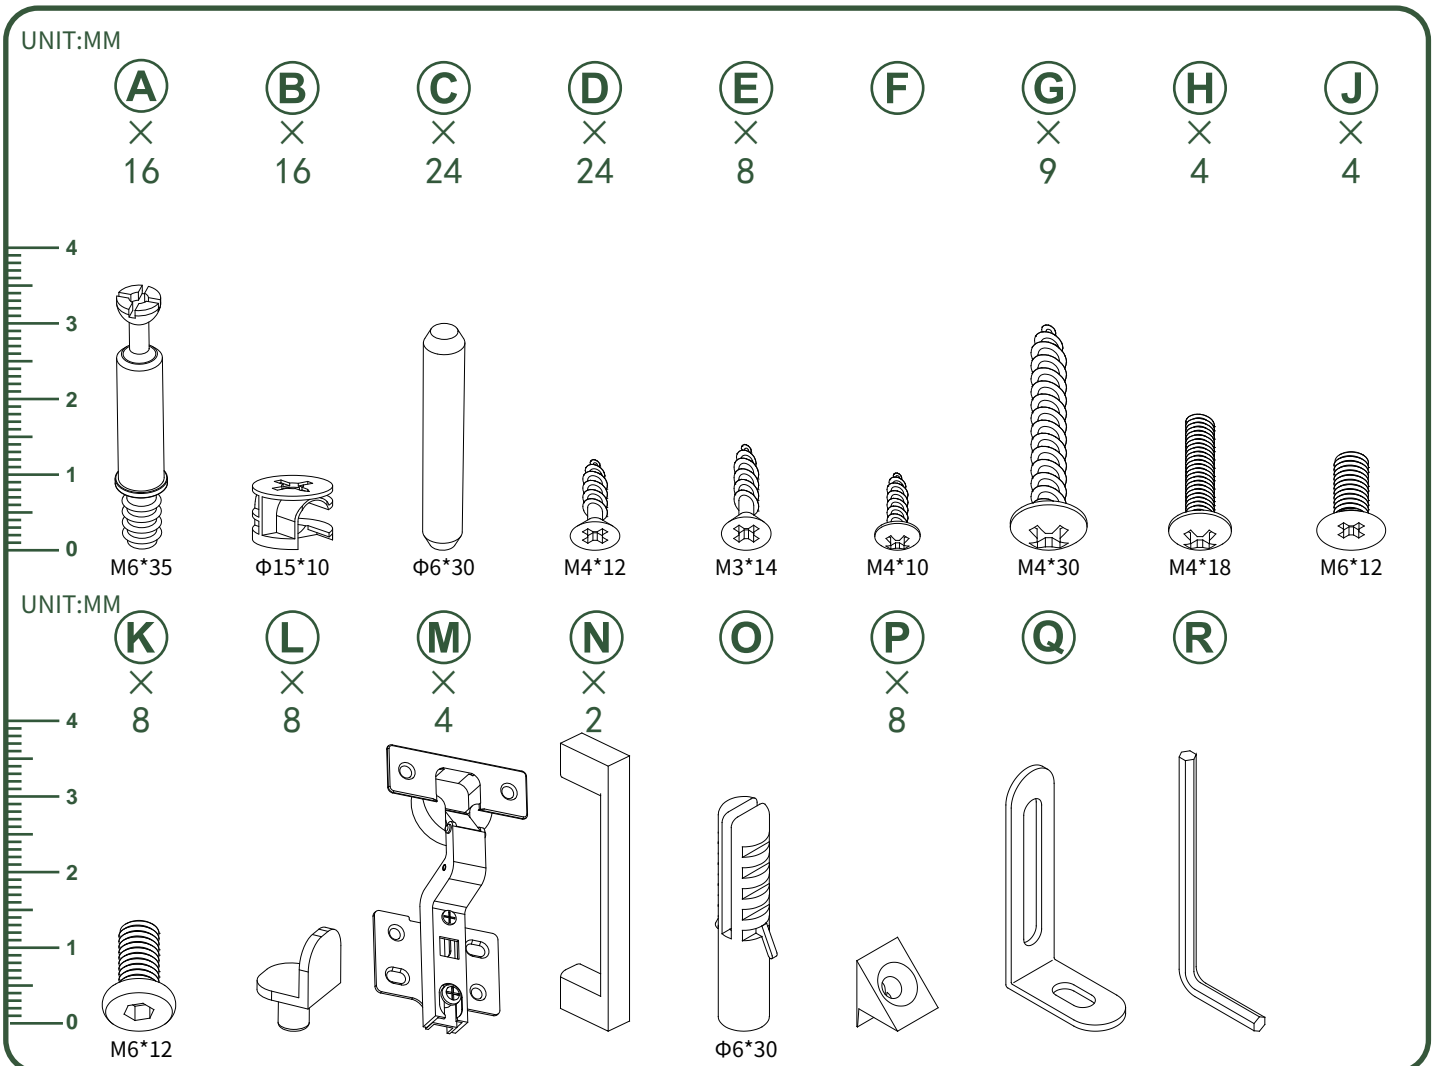


TOOLS:



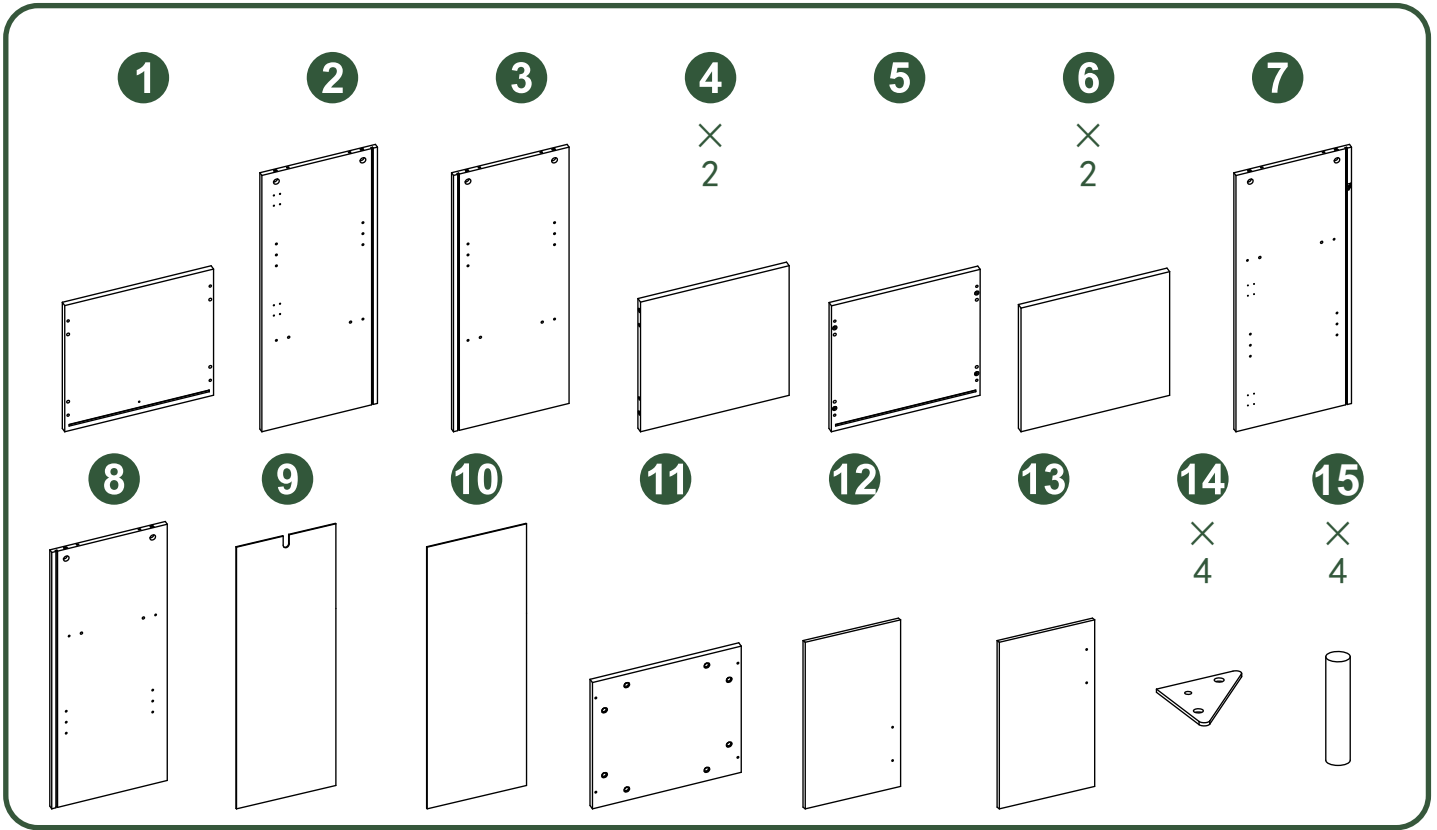


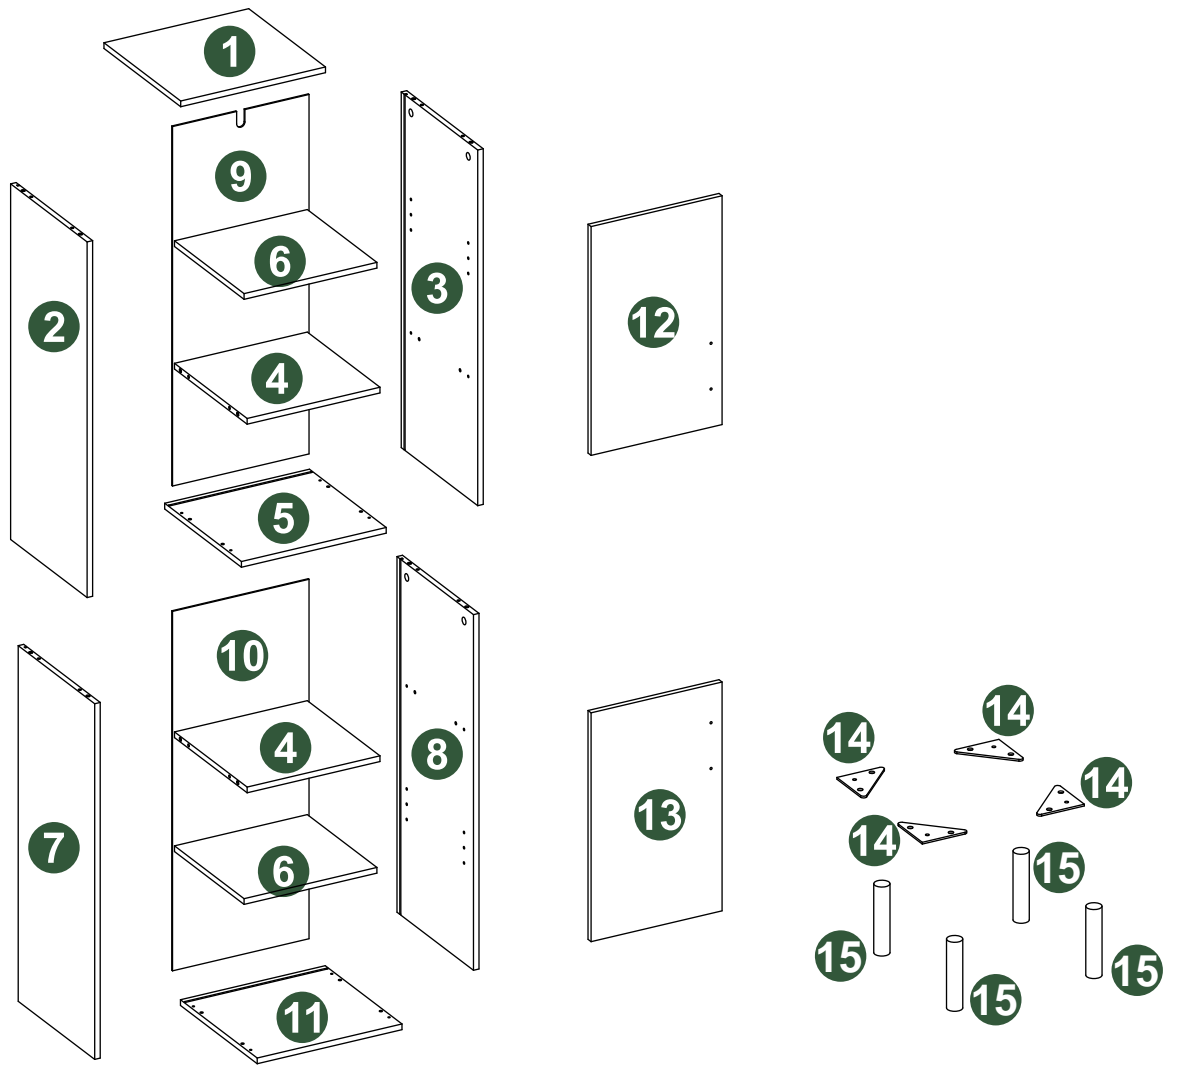


BOLT INSTALLATION AS BELOW:

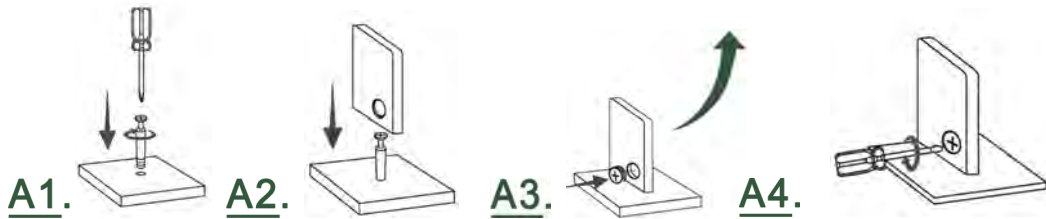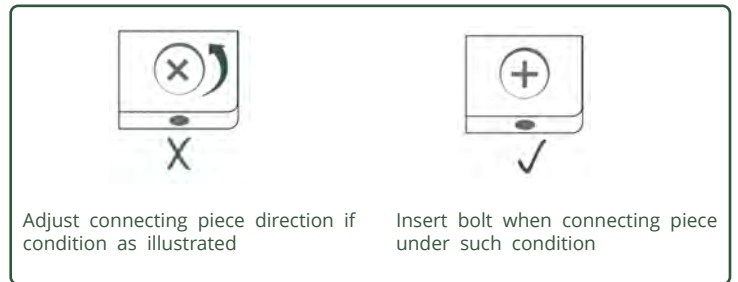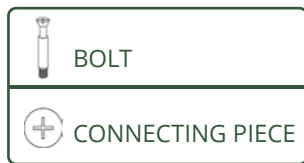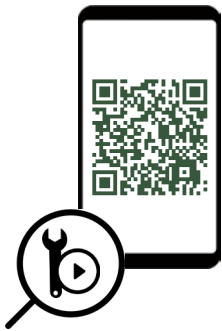


BACKPLATE BUCKLE INSTALLATION AS BELOW:

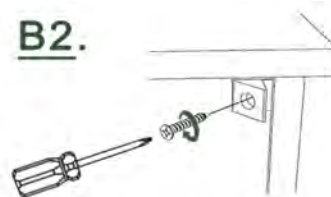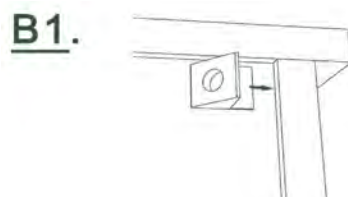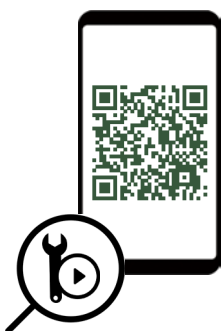


1.

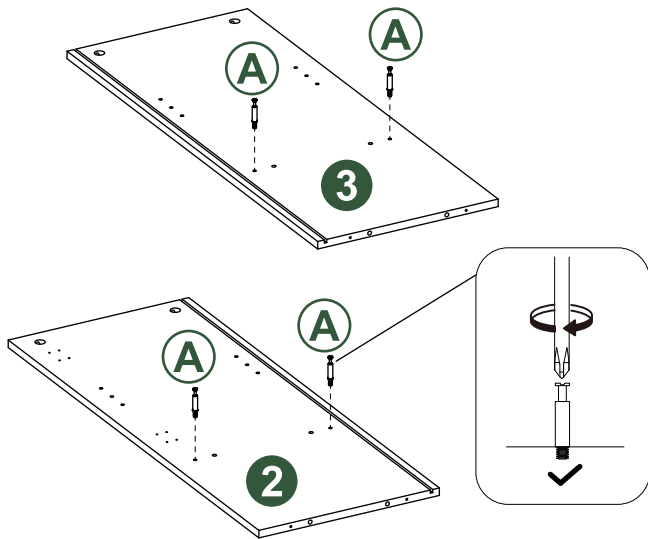


2.

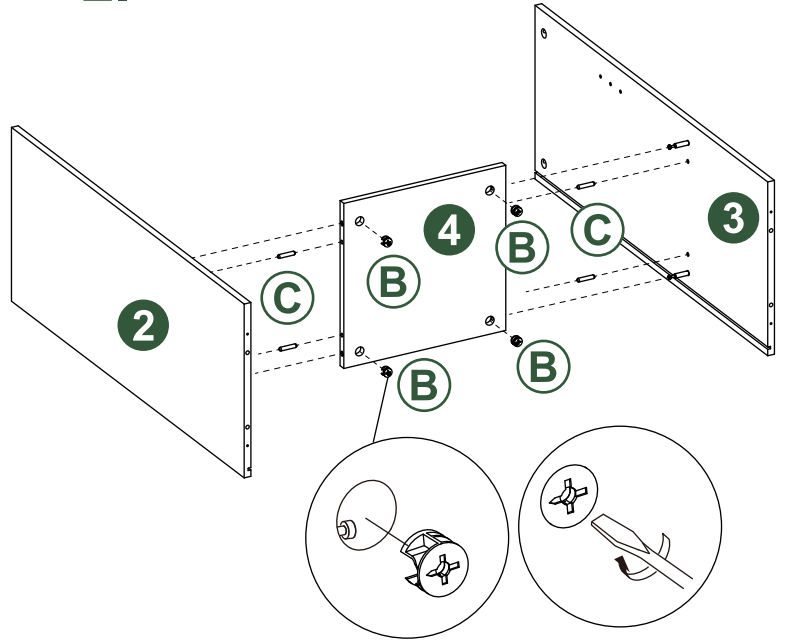


3.

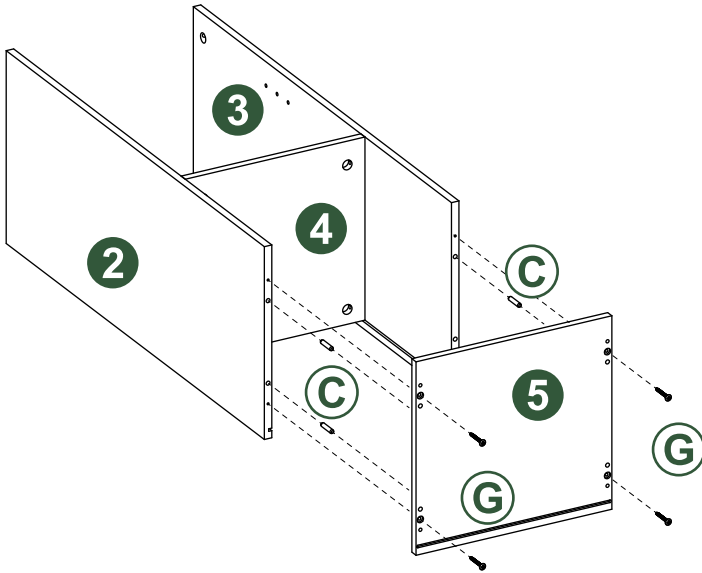


4.

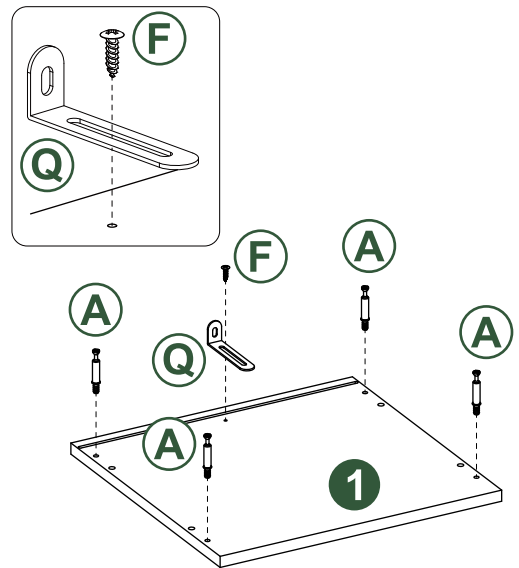


5.

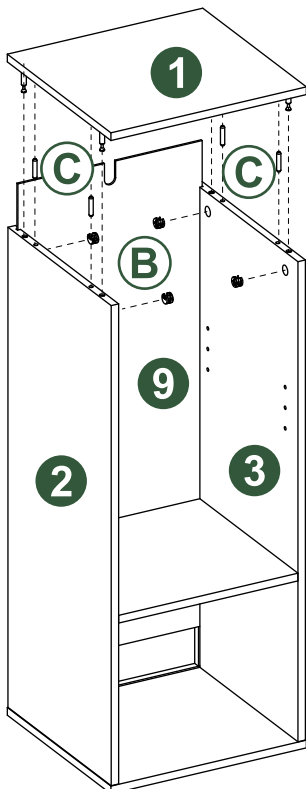


6.

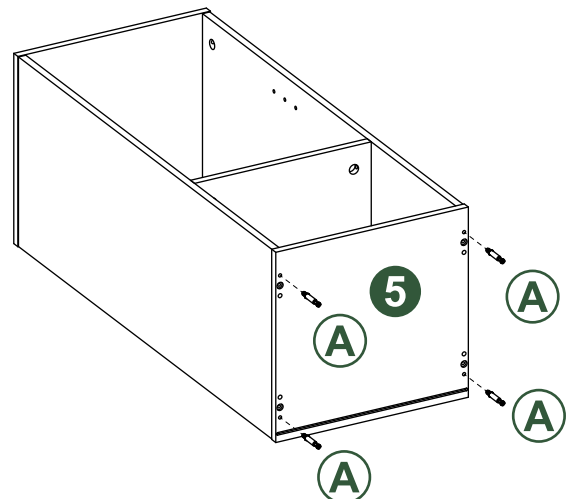


7.

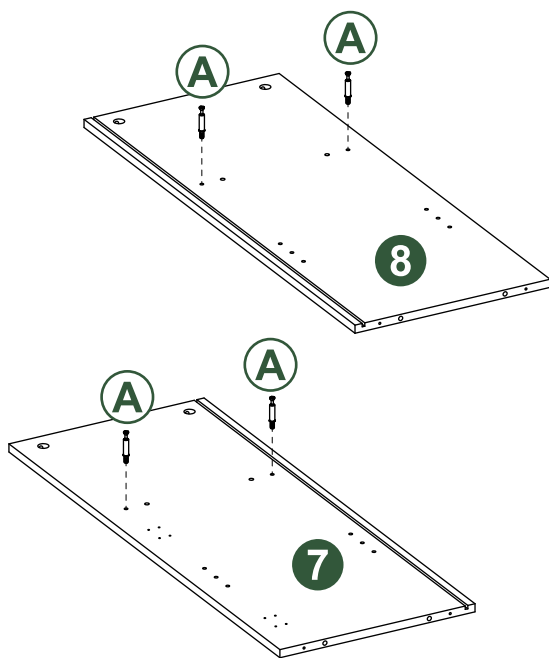


8.

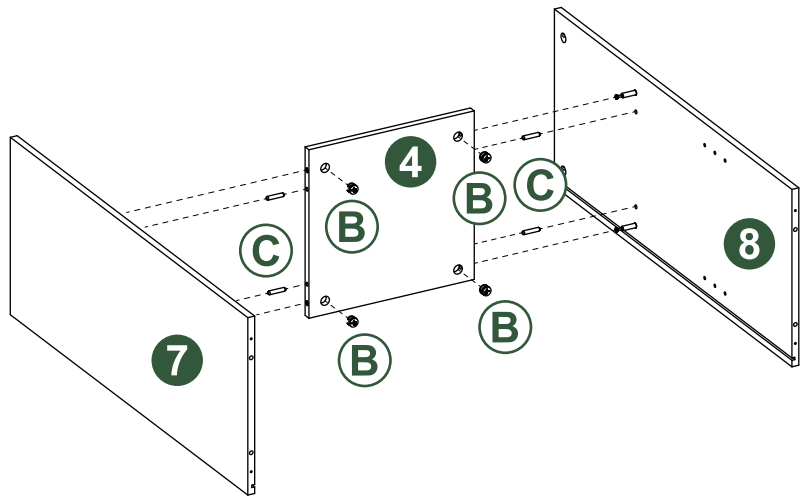


9.

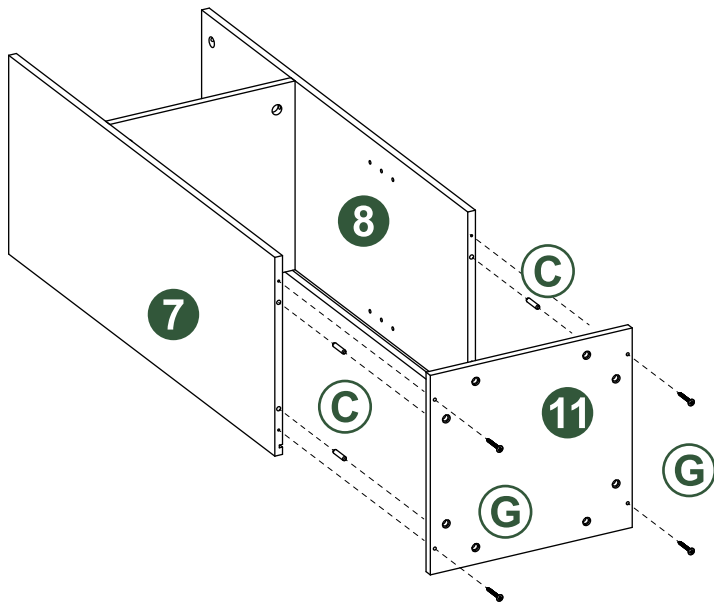


10(X4).

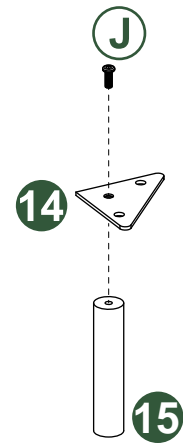


11.

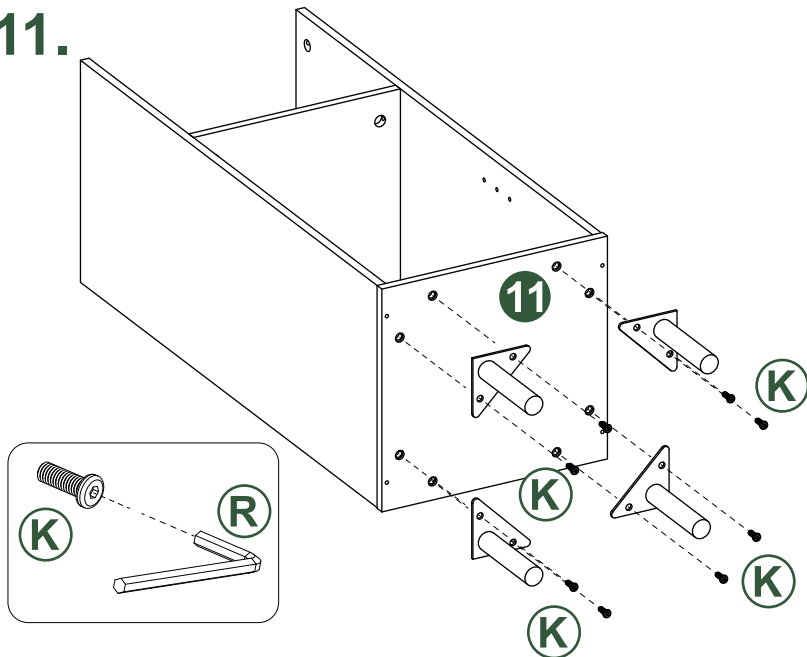


12.

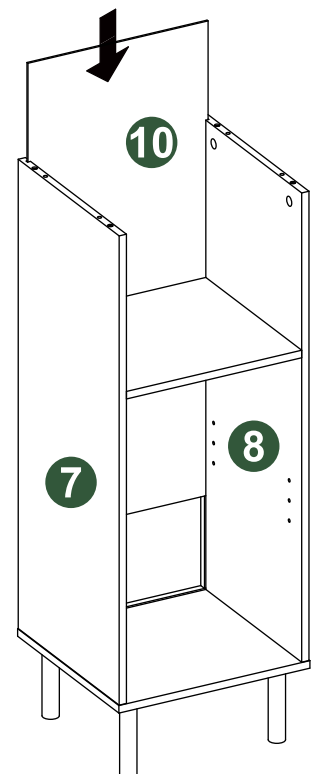


13.

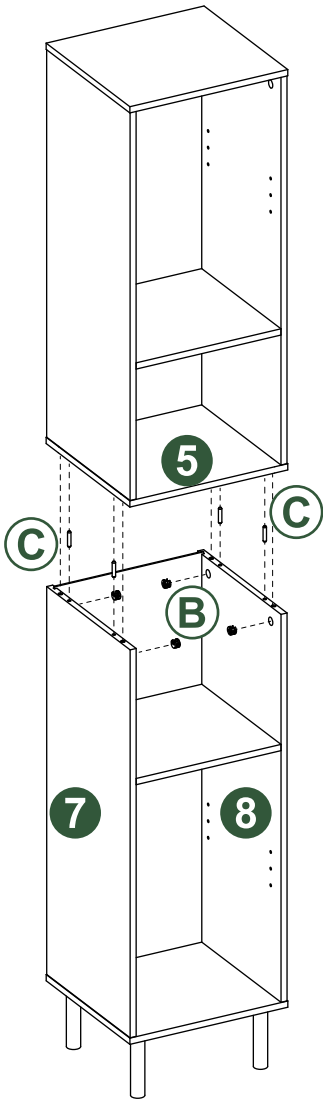



14.

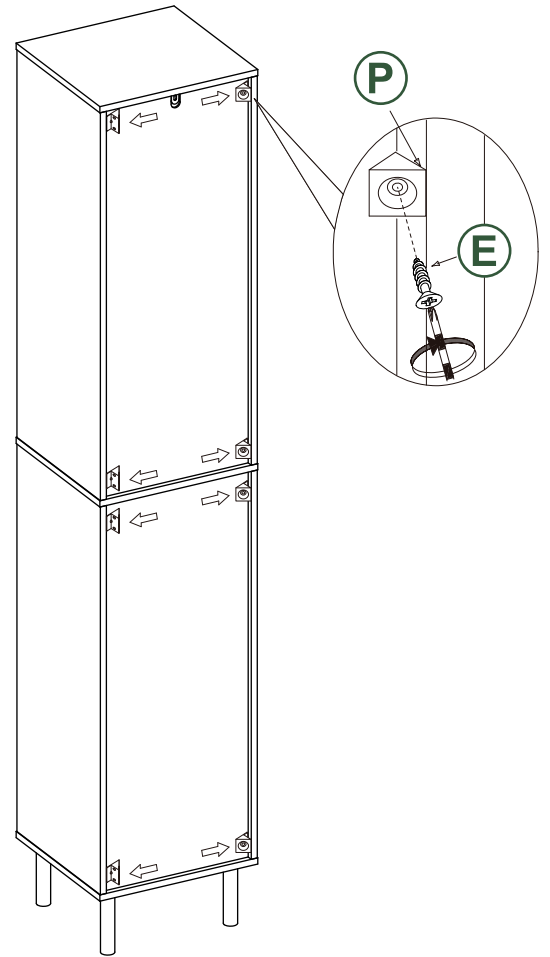


15.

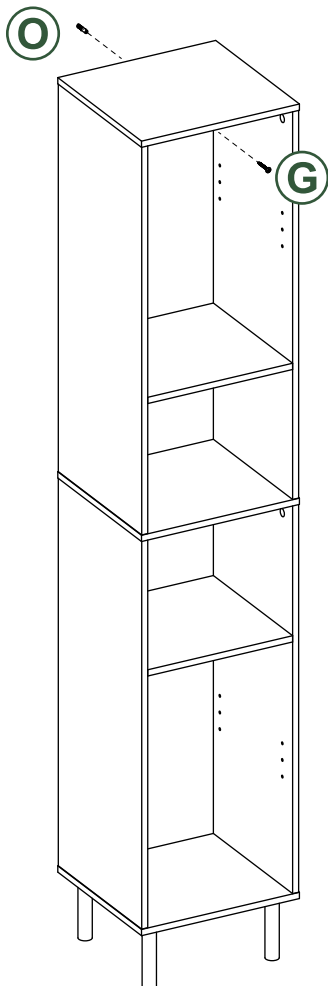


16.

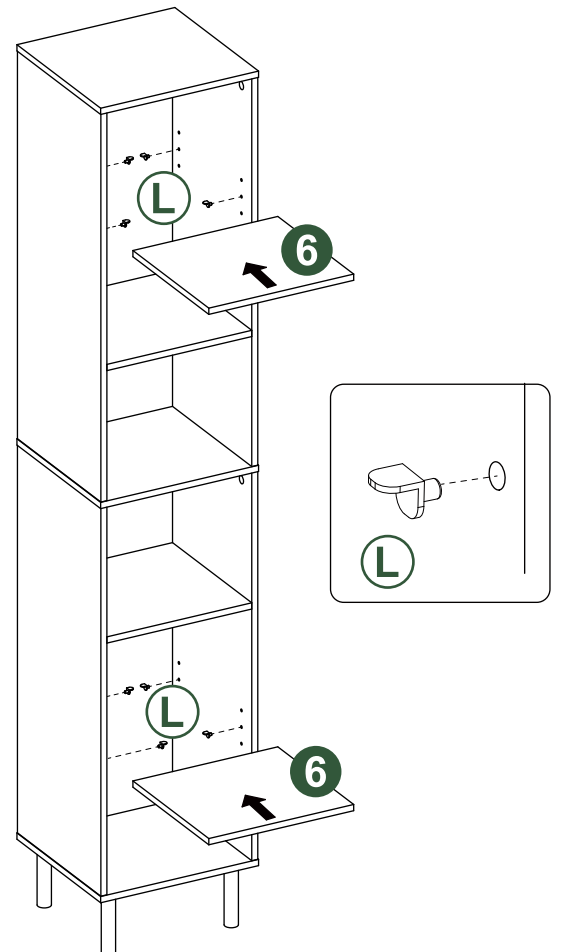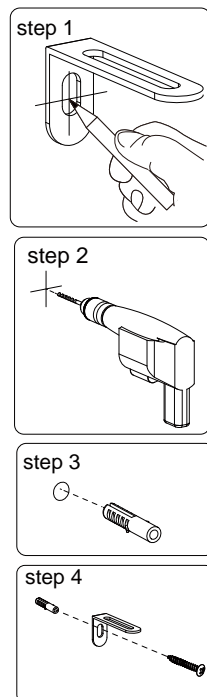

17.

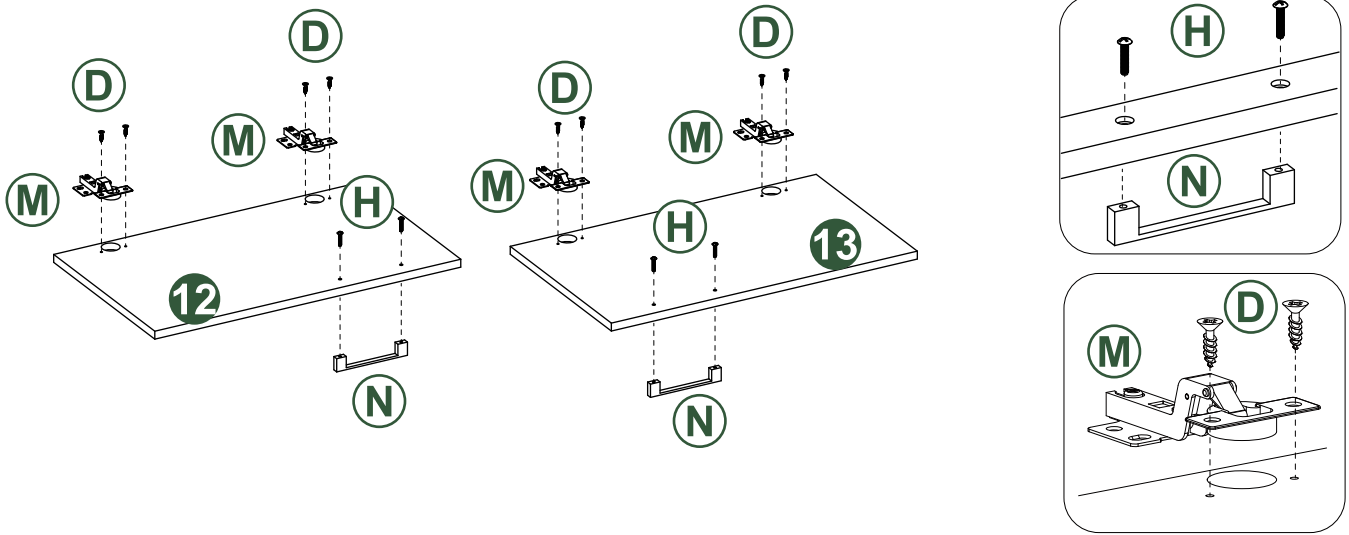

18.

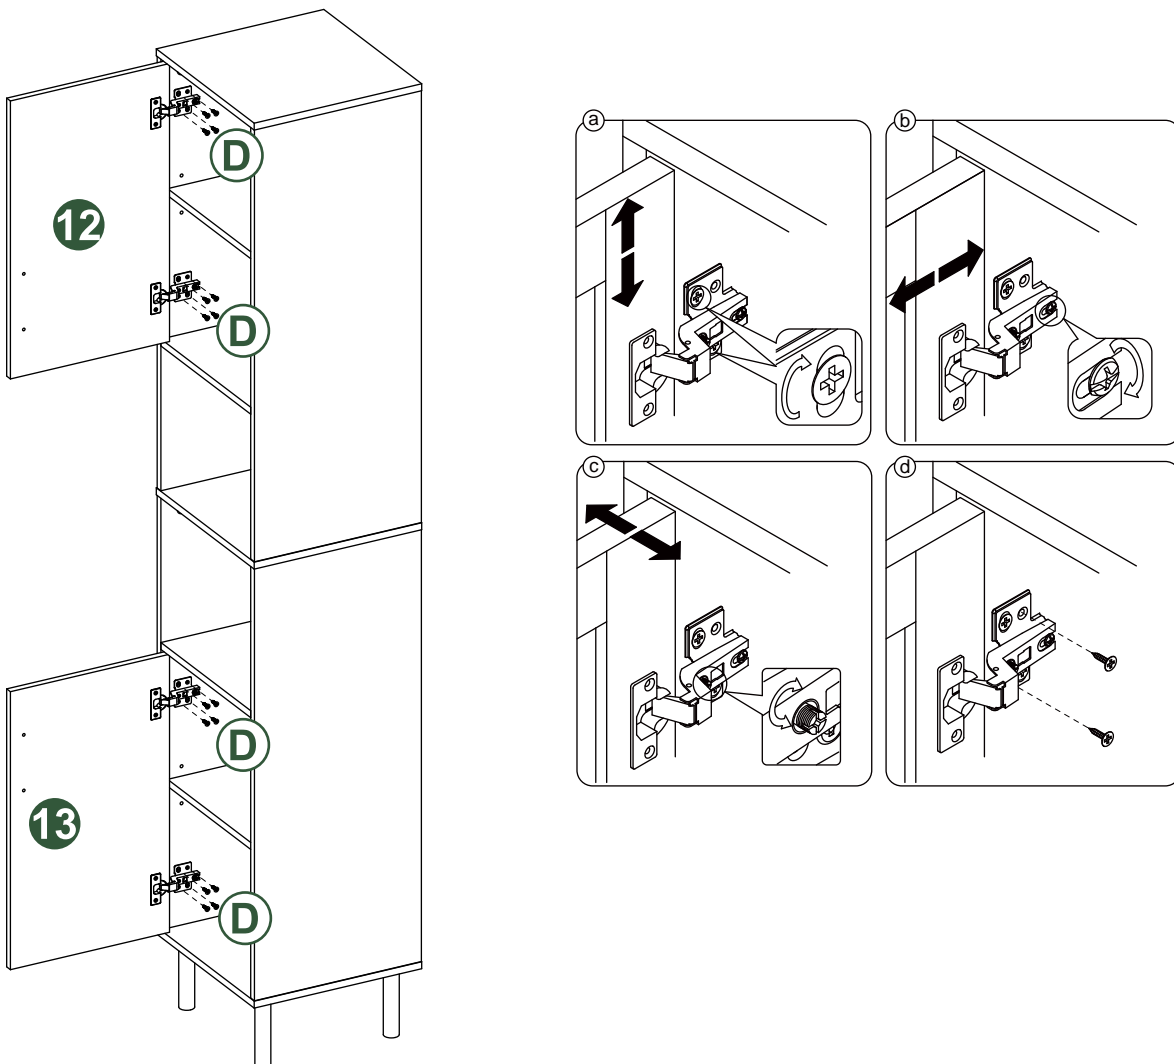



Scan the QR code to
share your review