


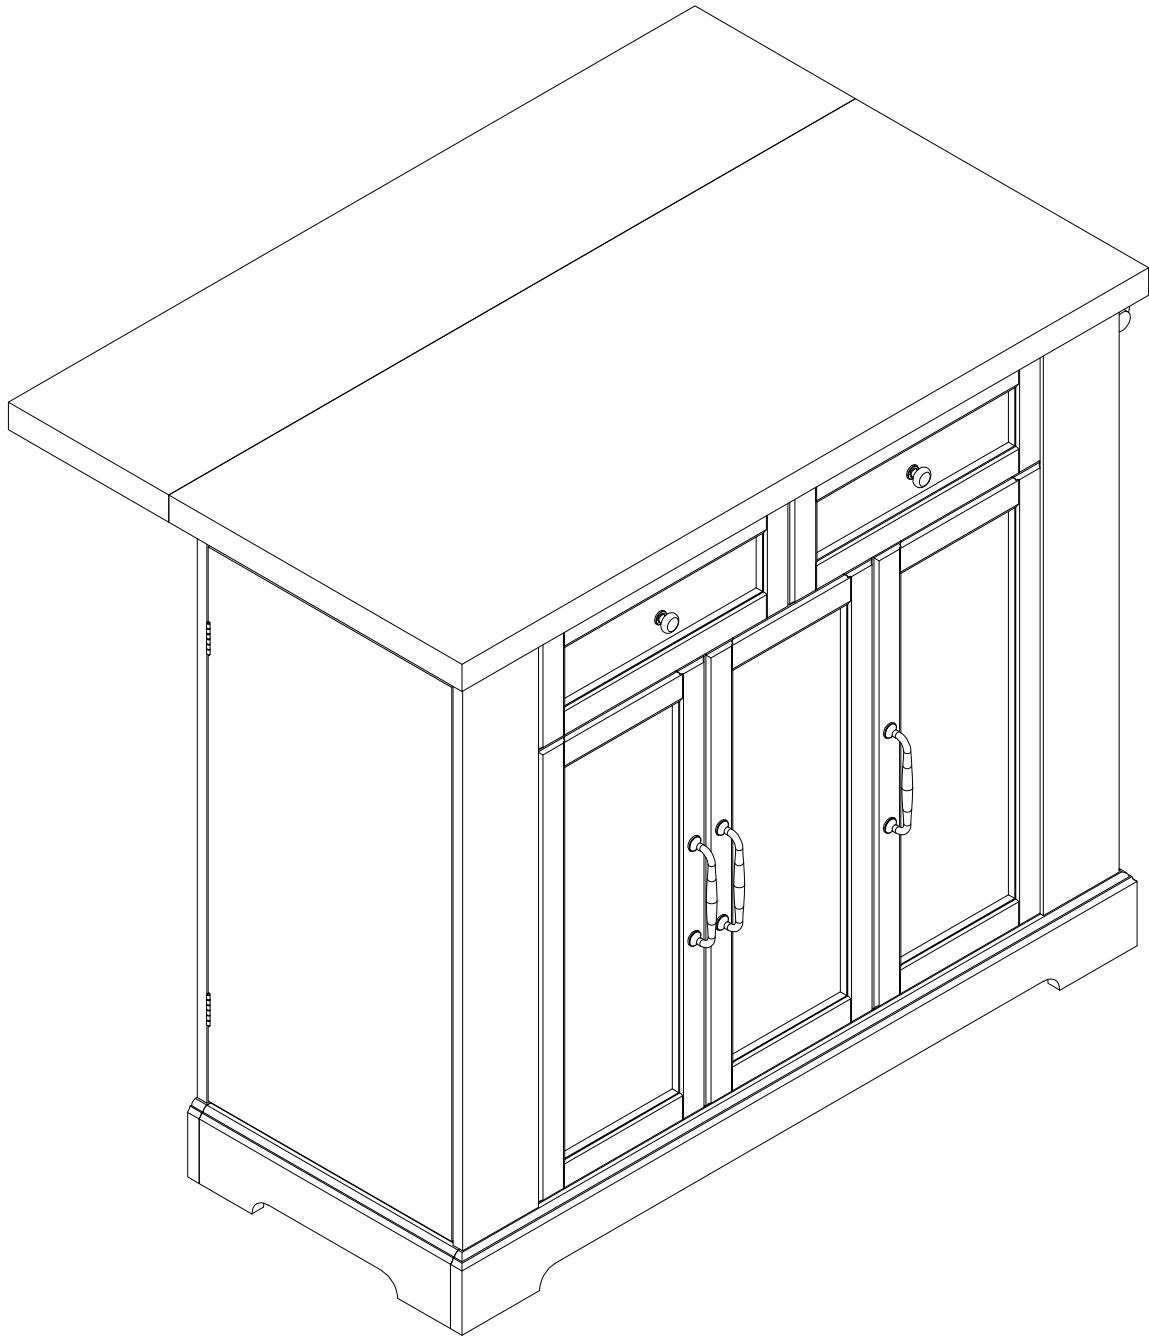


2025-01


FKW130




TOOLS:



PACKAGING A

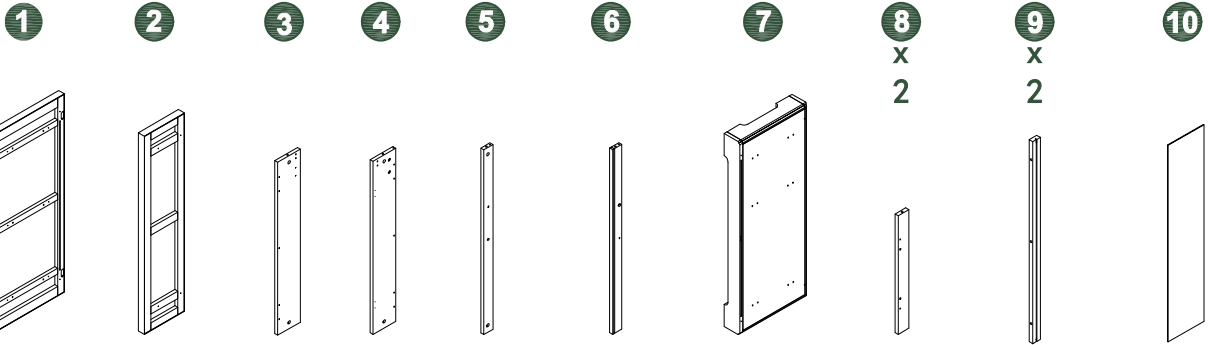


PACKAGING B

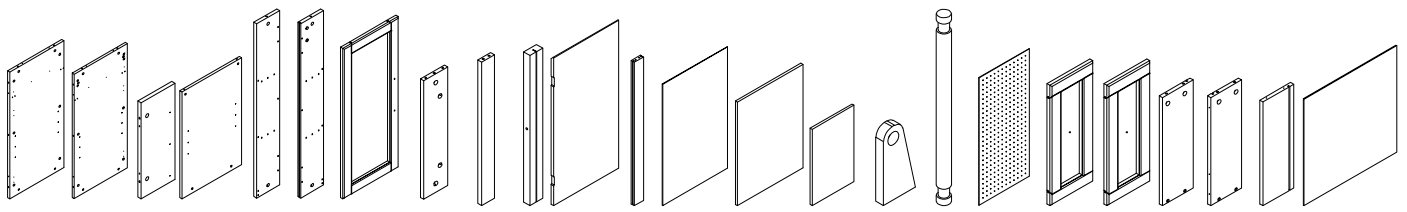


UNIT:MM PACKAGING A


	A	B	C	D	E	F	G	H	CL	CR	DL	DR	J	K	L
	X 46	X 46	X 56	X 22	X 4	X 8	X 8	X 4	X 2	X 2	X 2	X 2	X 6	X 48	X 2
	M6*35	Ø15*10	Ø6*30	M4*30	M5*40	M6*40	Ø10*13	M6*20						M4*12	
	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A1
	X 9			X 2	X 8	X 2	X 2	X 3	X 6	X 4	X 20	X 2	X 4	X 5	
	M3*12			M3*14			M4*12		M4*16		M5*16				

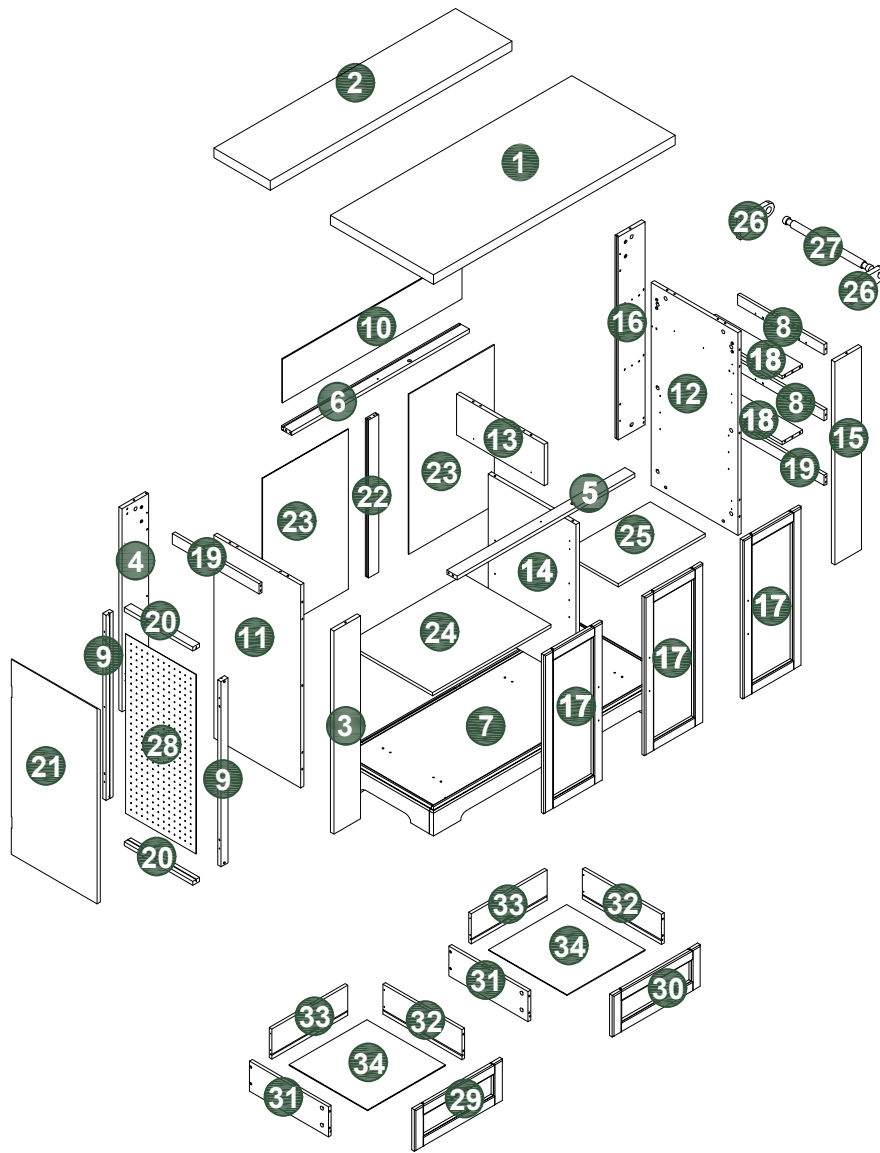


BOLT INSTALLATION AS BELOW:

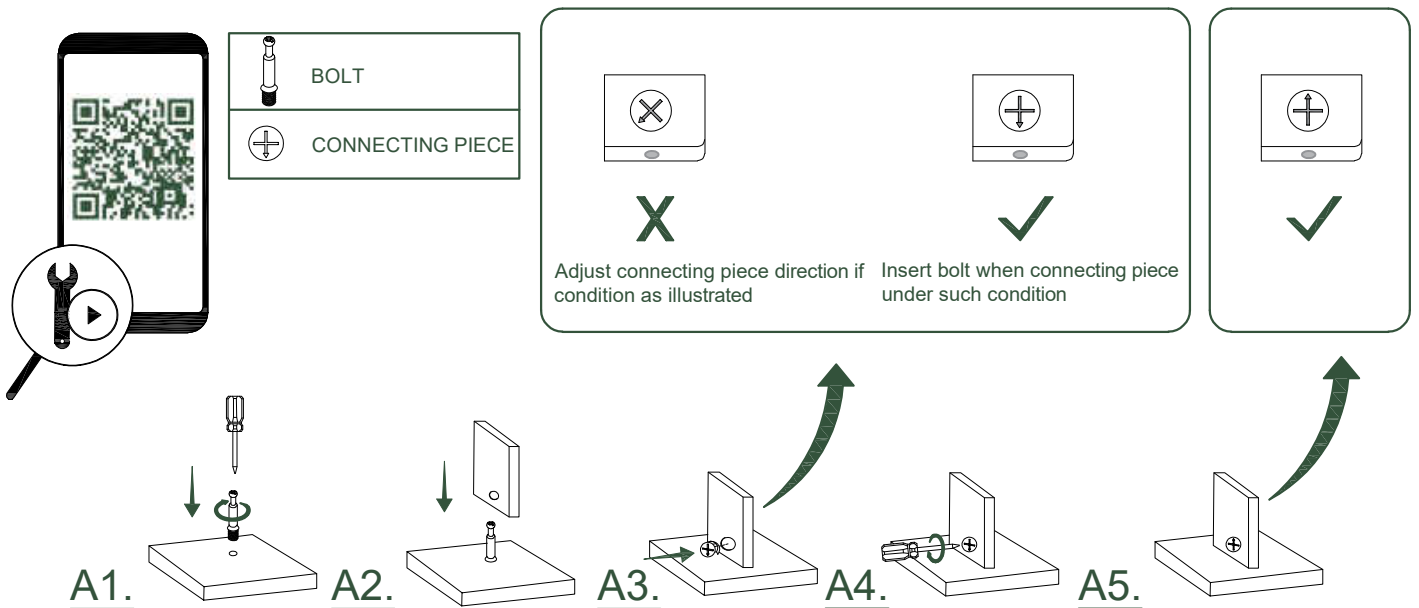


1.

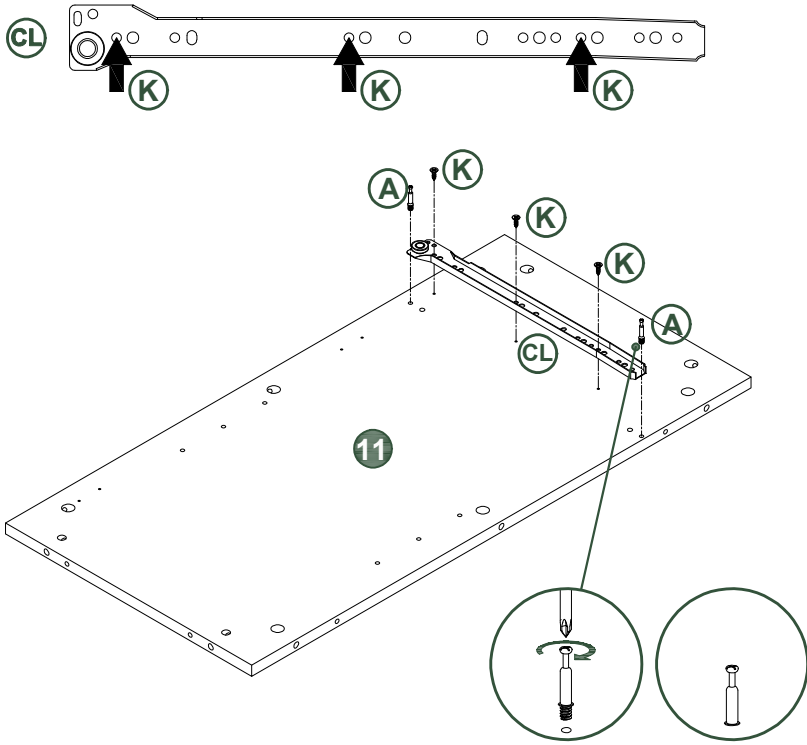


2.

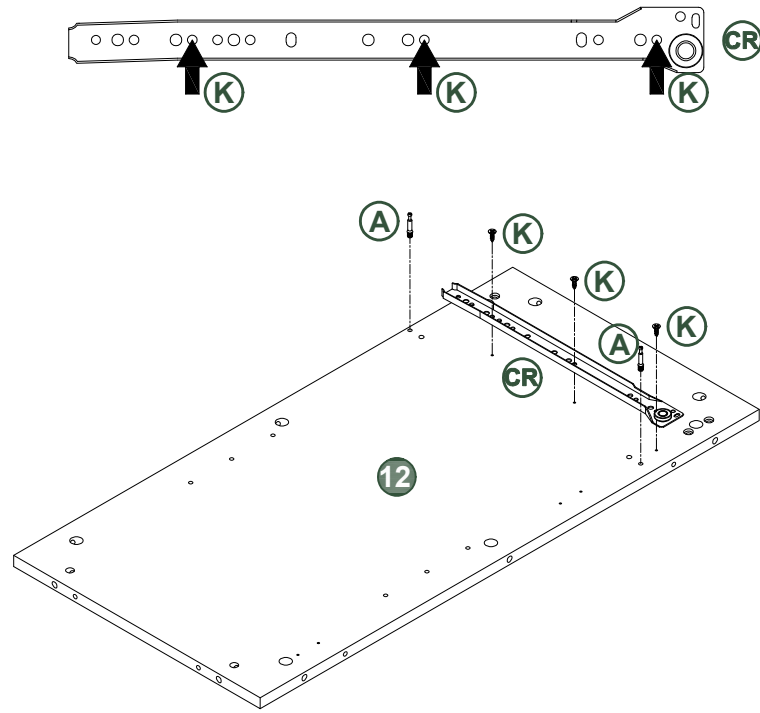


3.

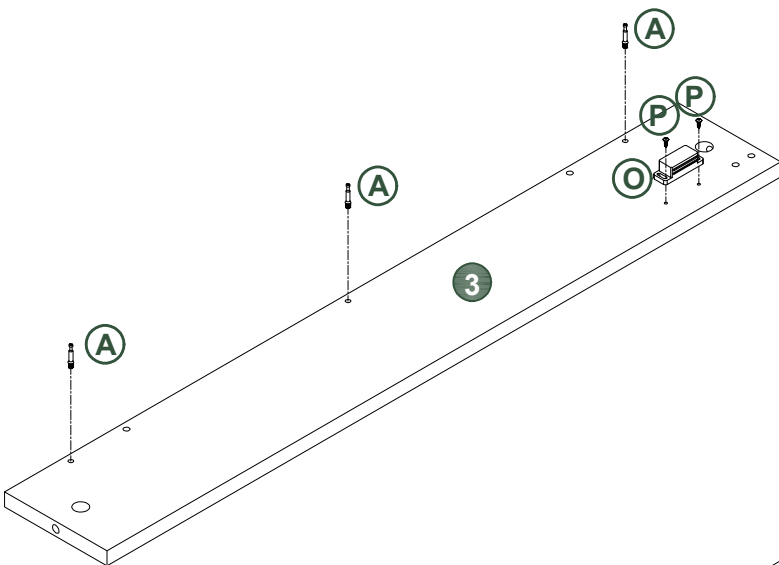


4.

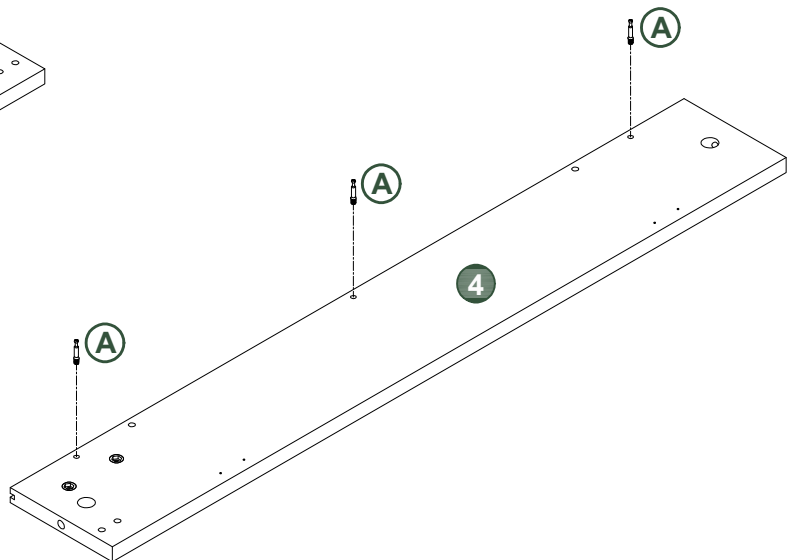


5.

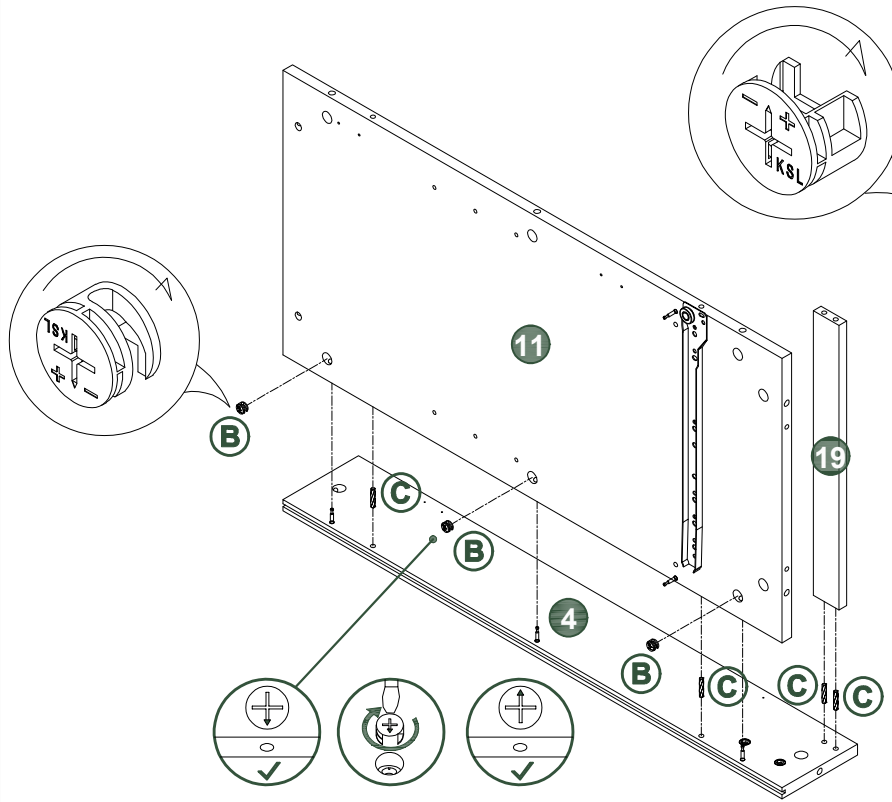


6.

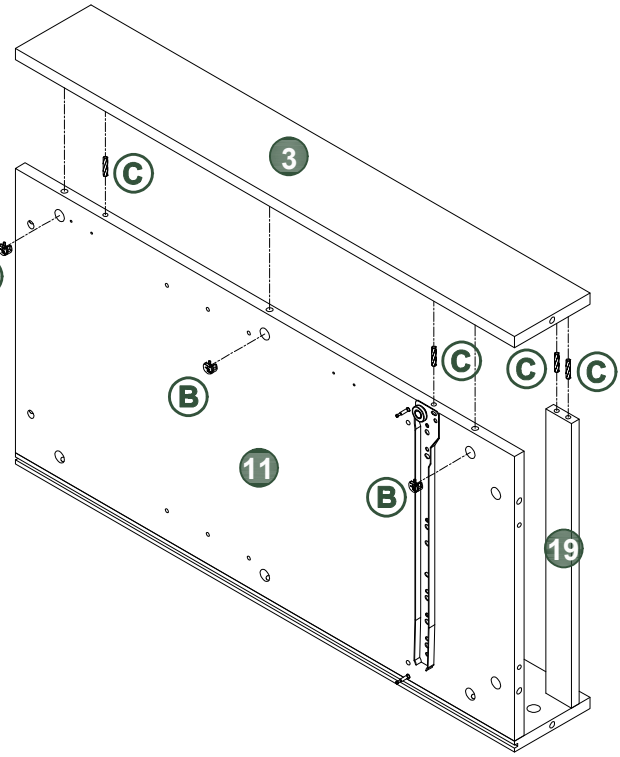


7.

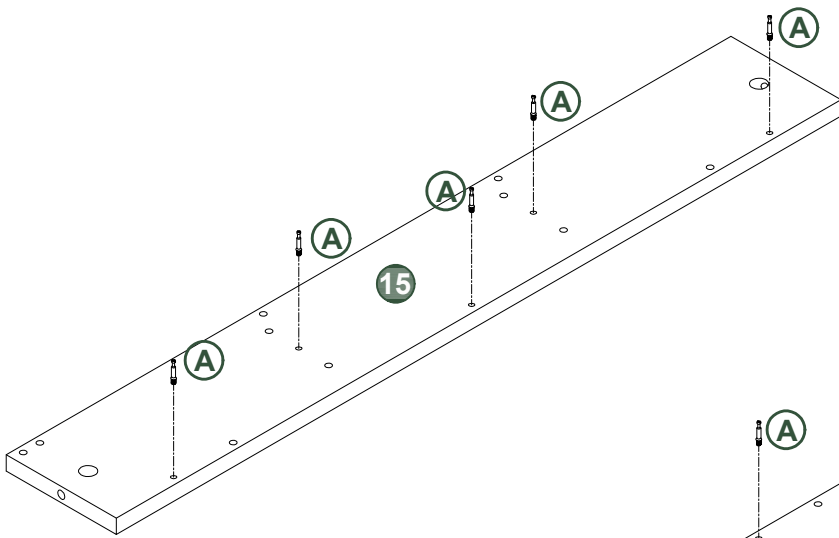


8.

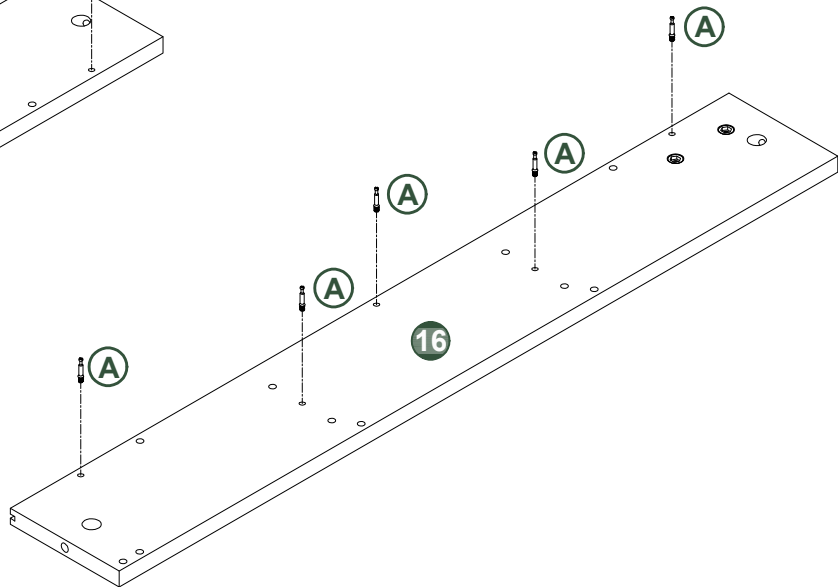


9(X2).

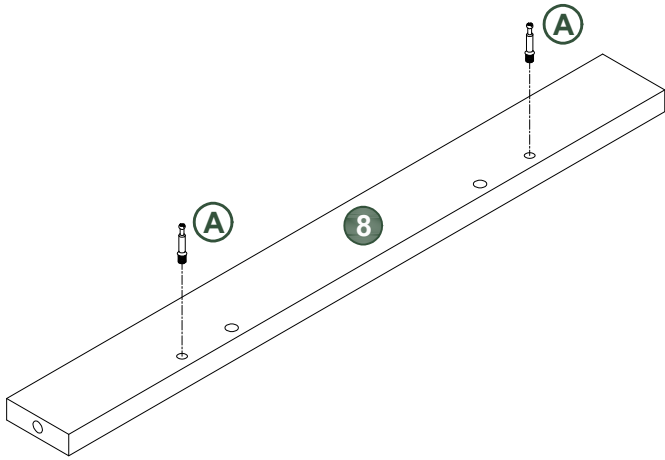



10(X2).

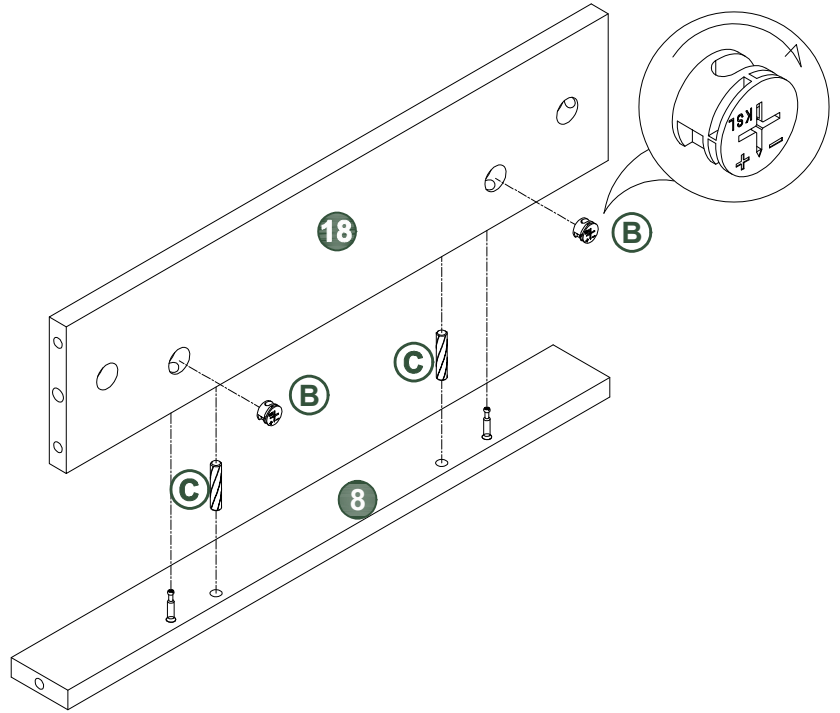


11.

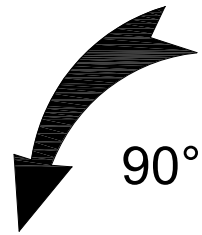




12.

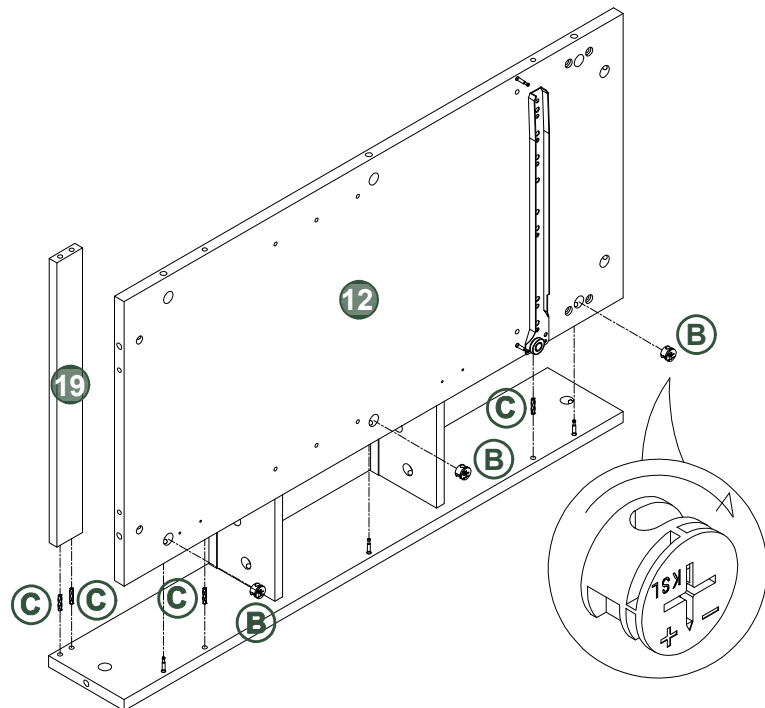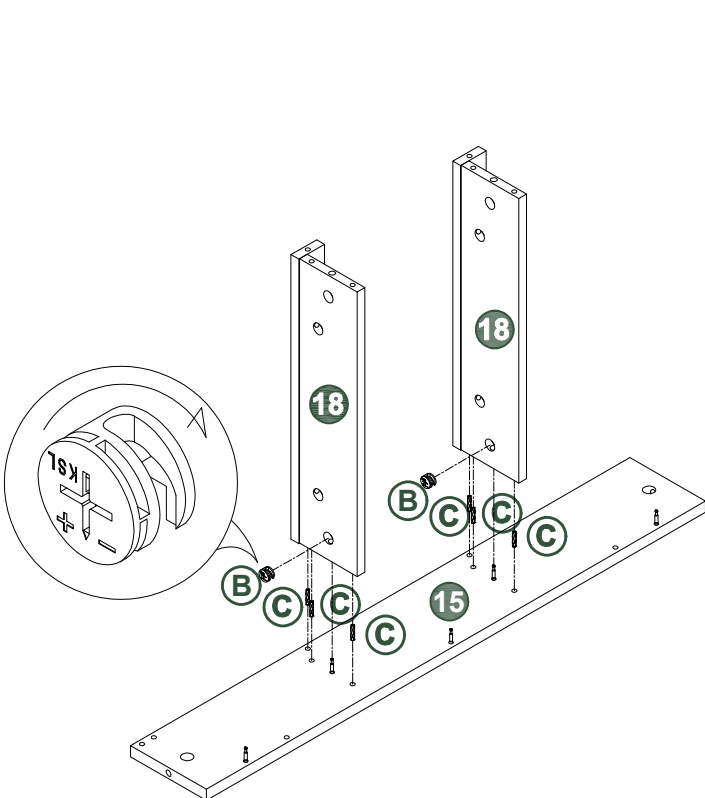




13.

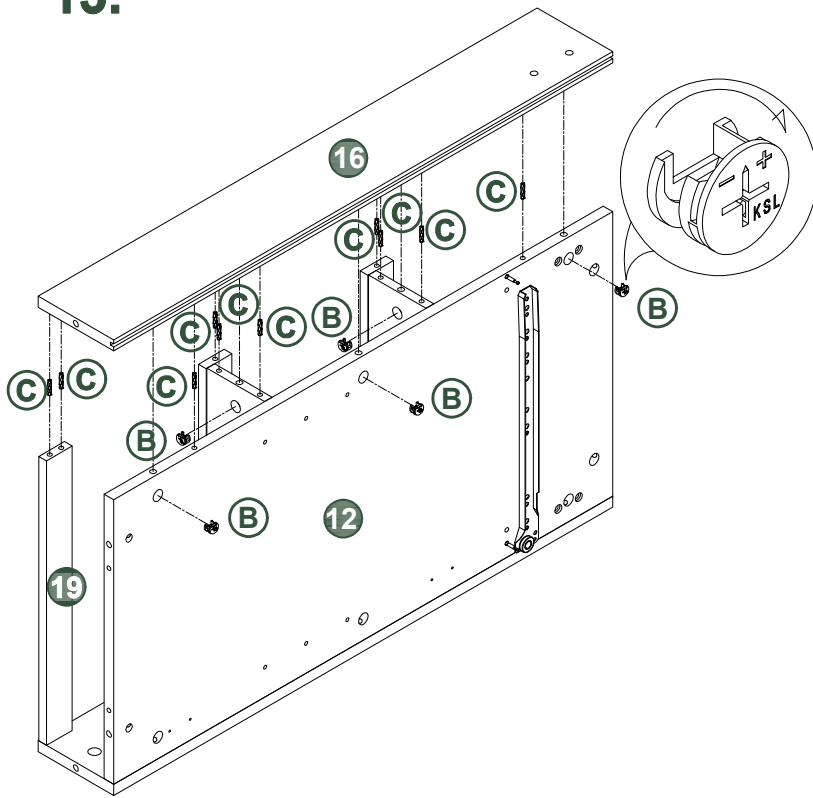


14.

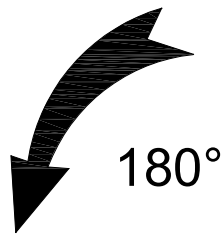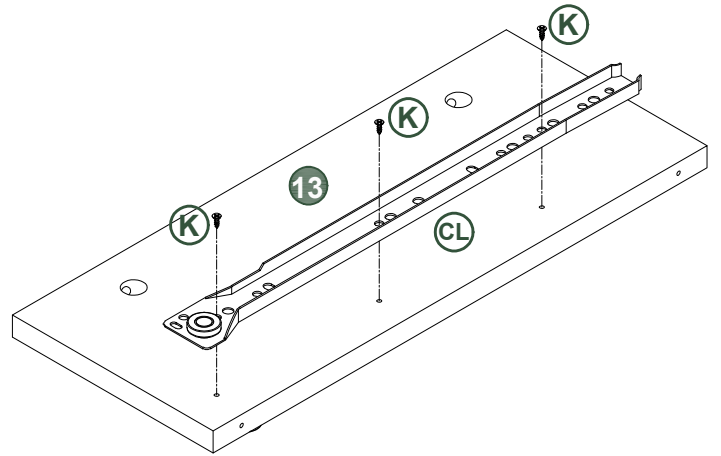


15.

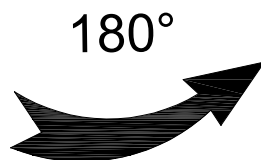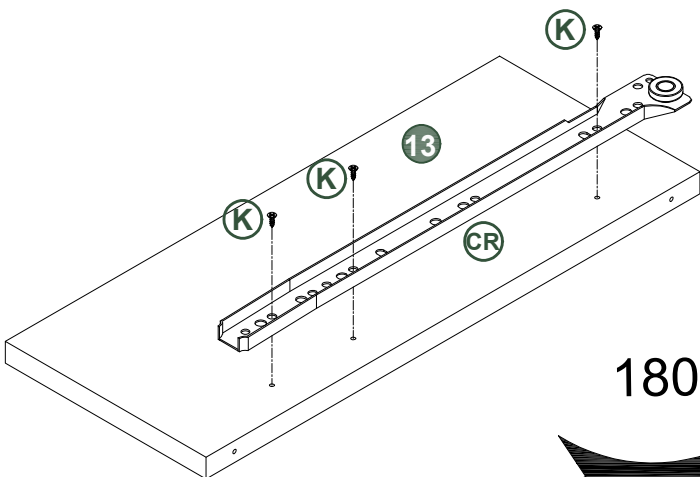



16.

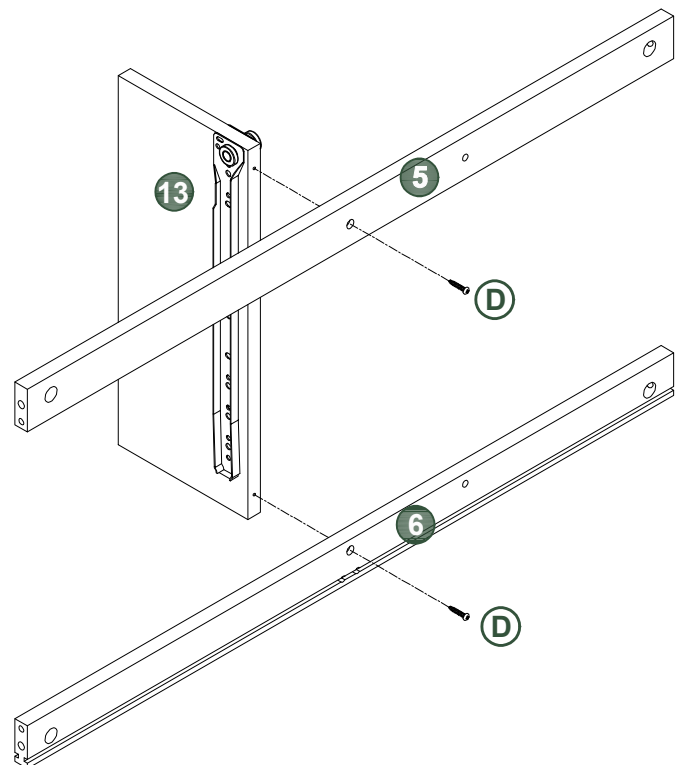


17.

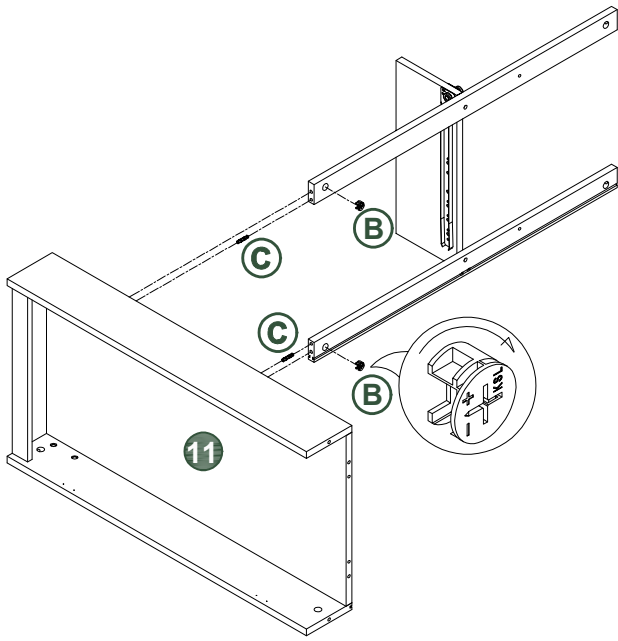


18.

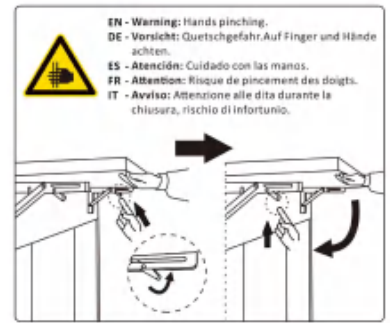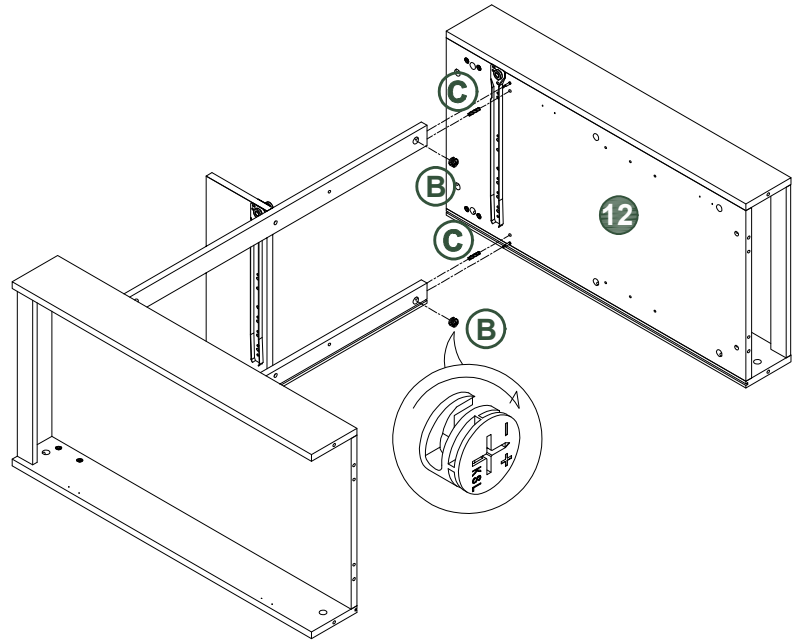


19.

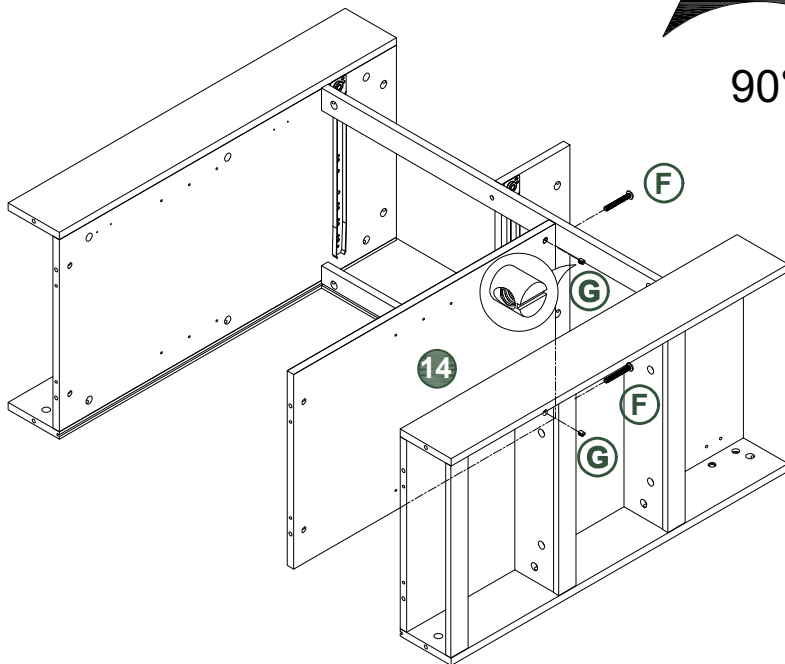


20.

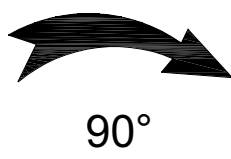


90°

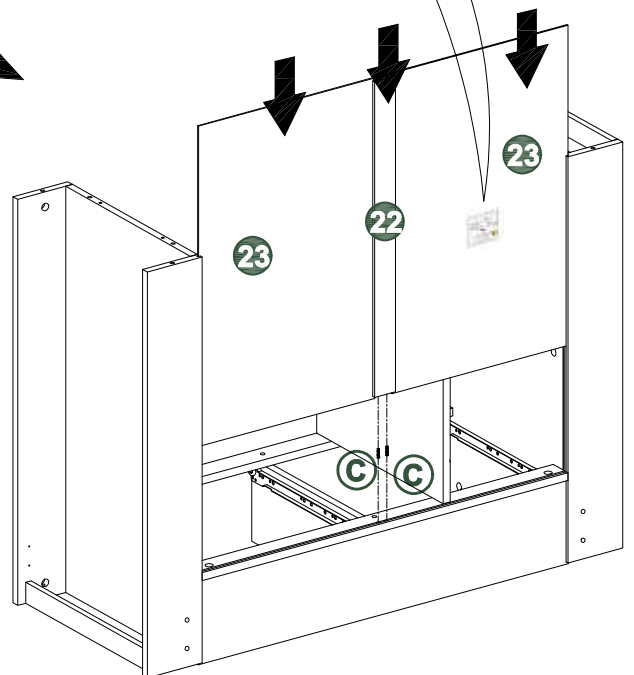


21.

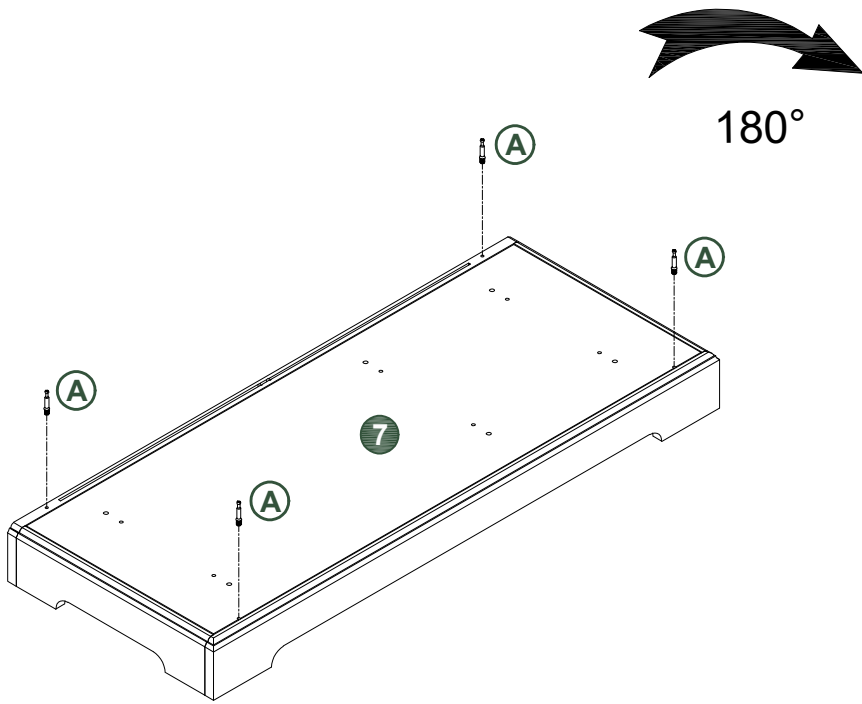


22.

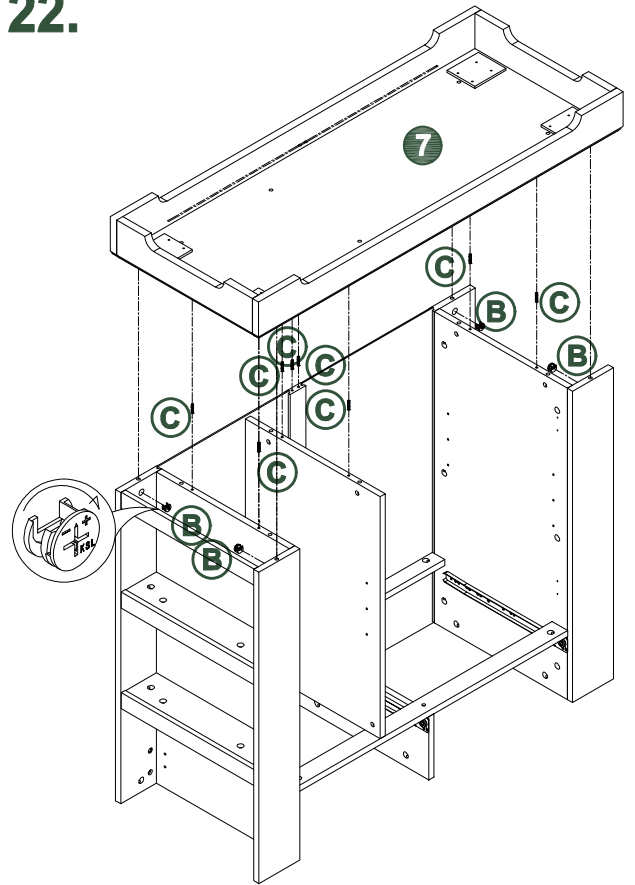


23.

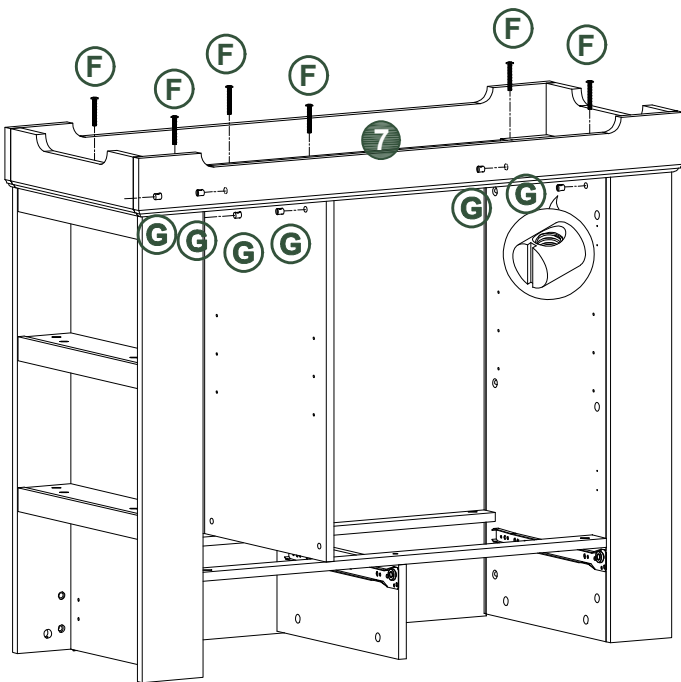


24.

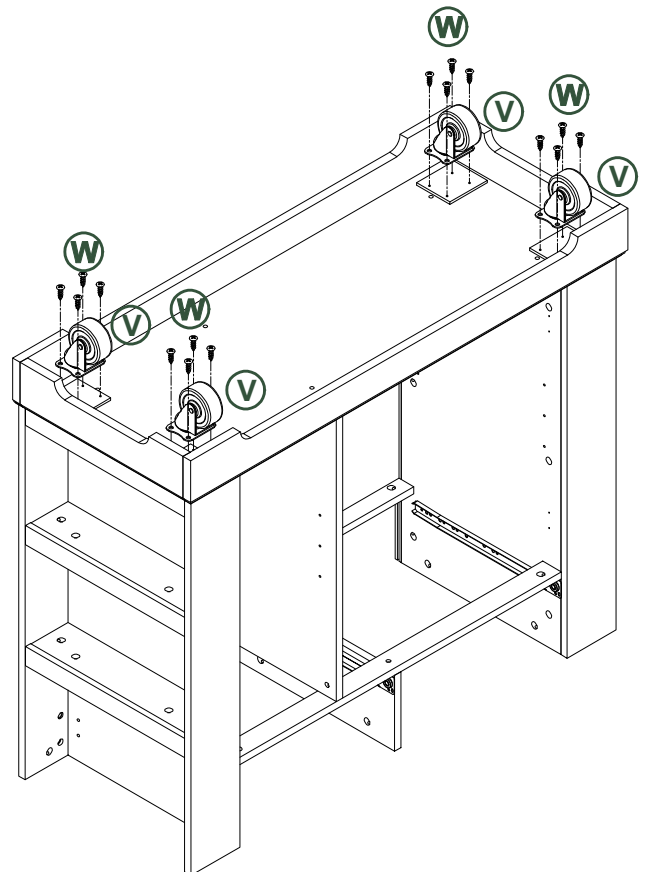


25.

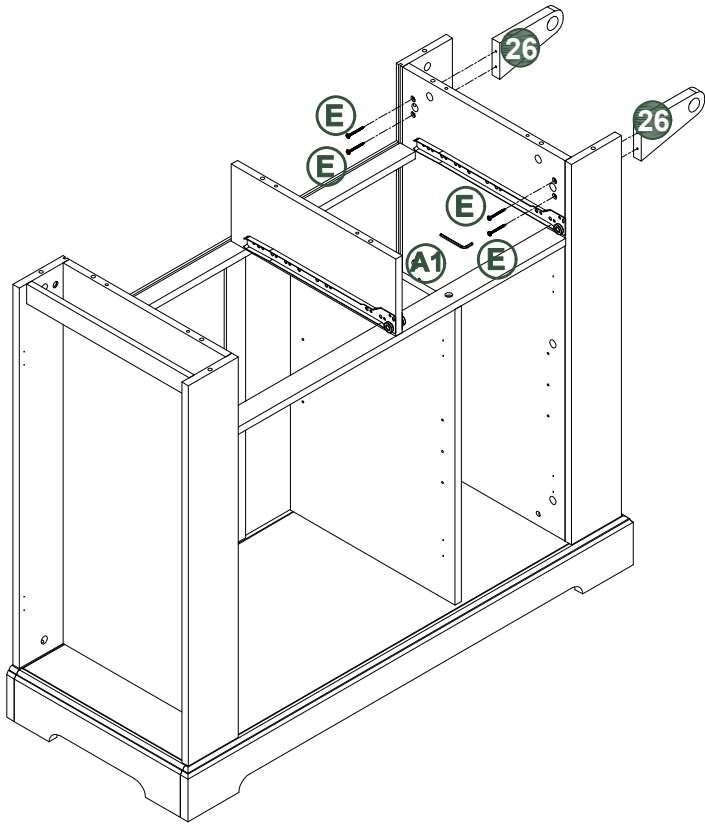


26.

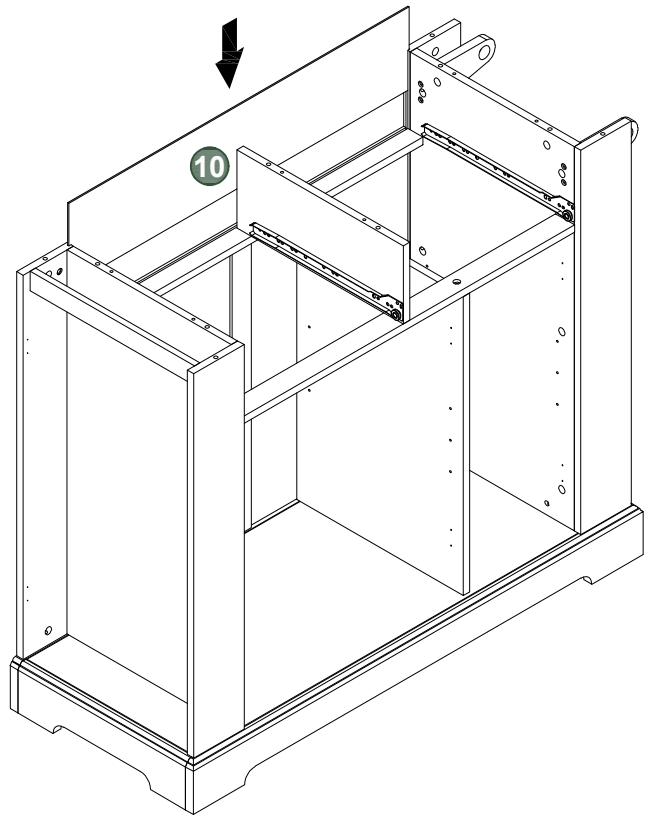


27.

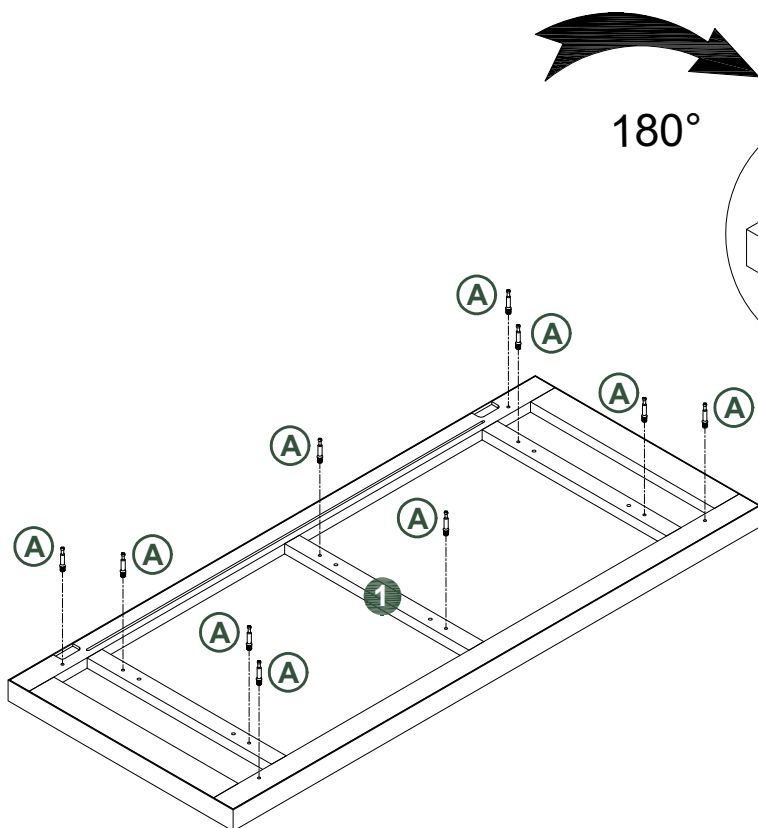



28.

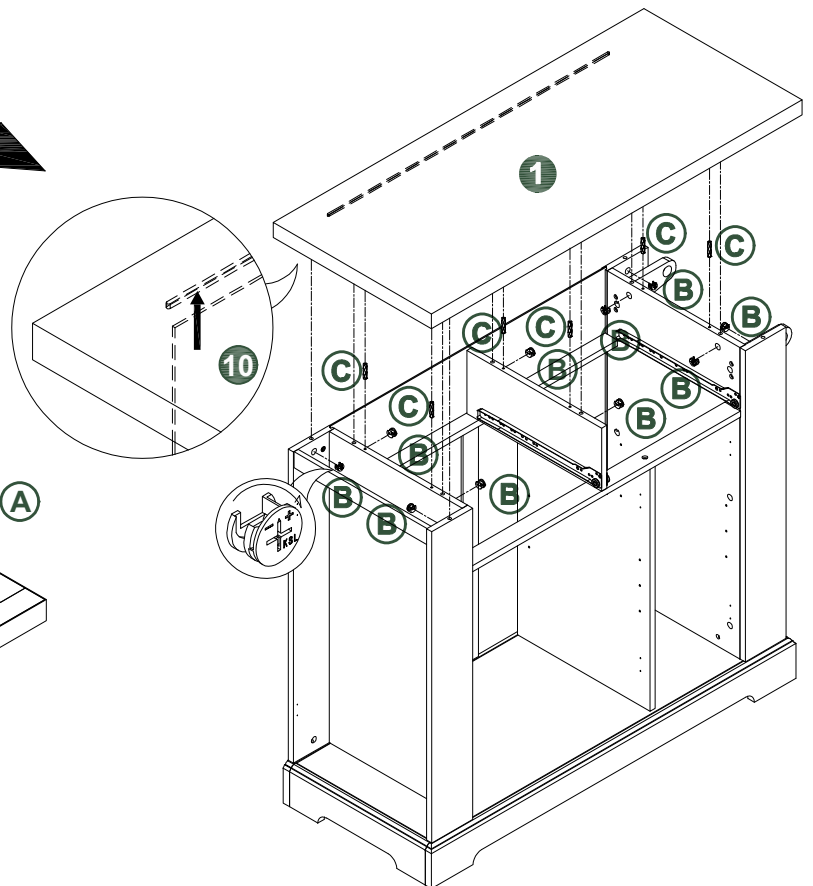


29.

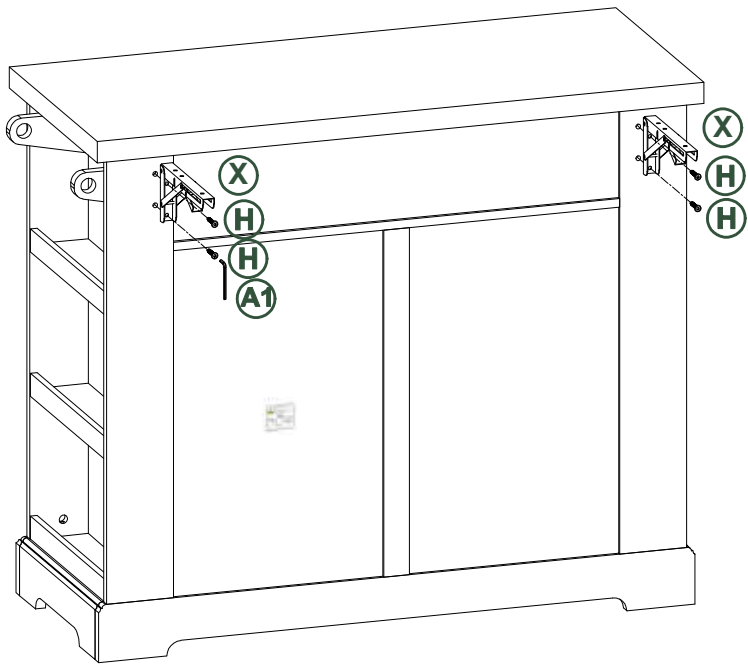

30.

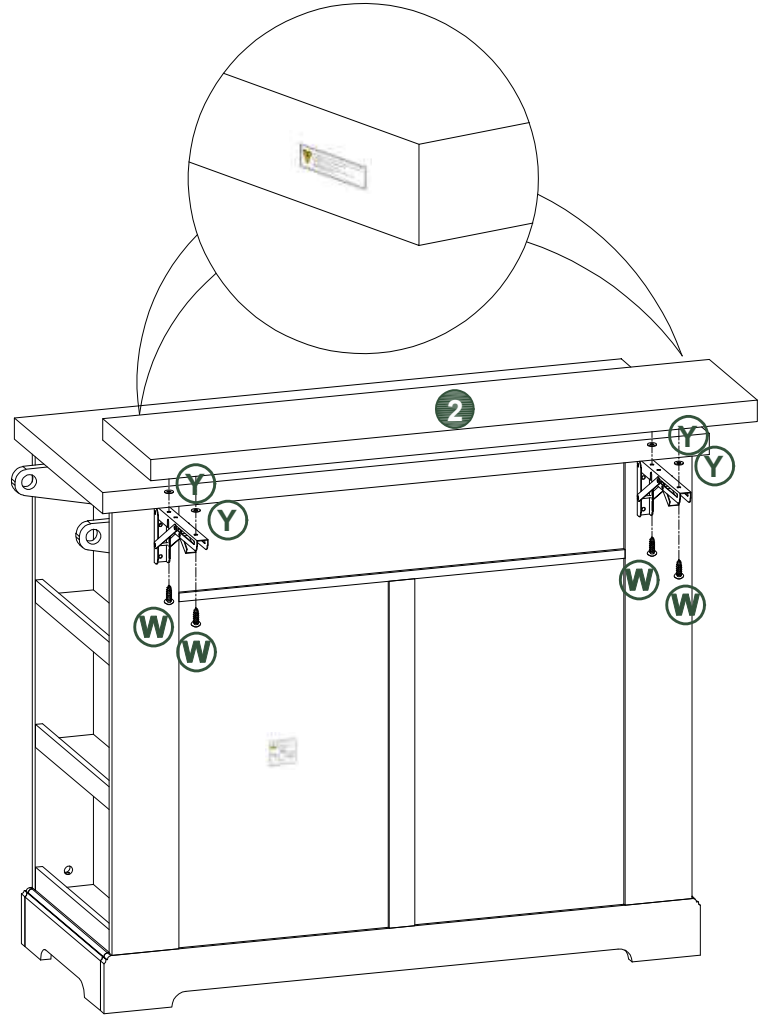



31.

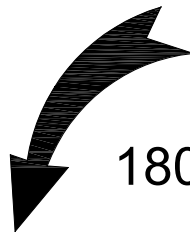


180°

32.

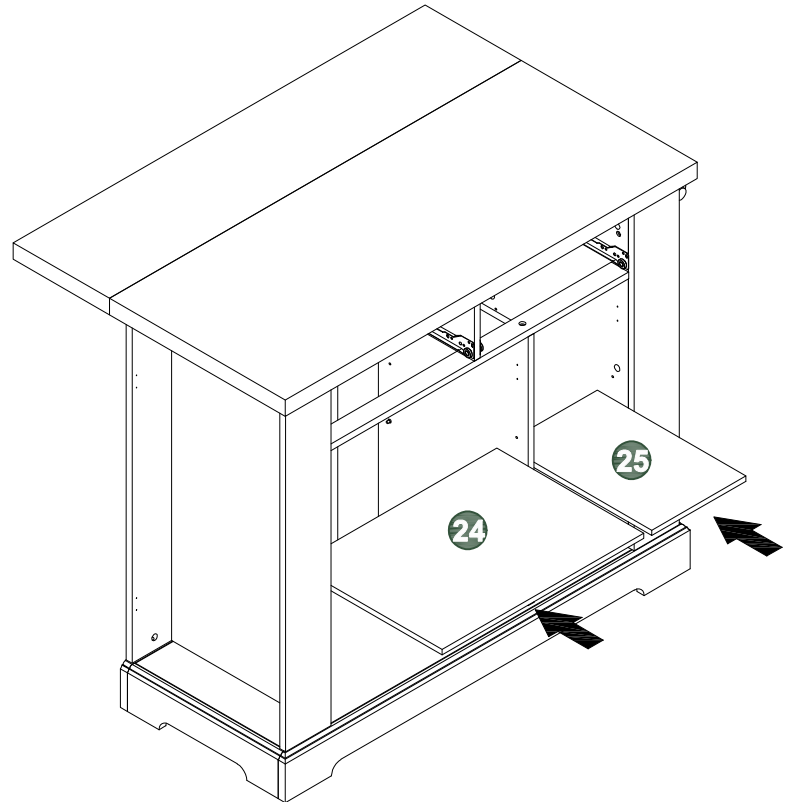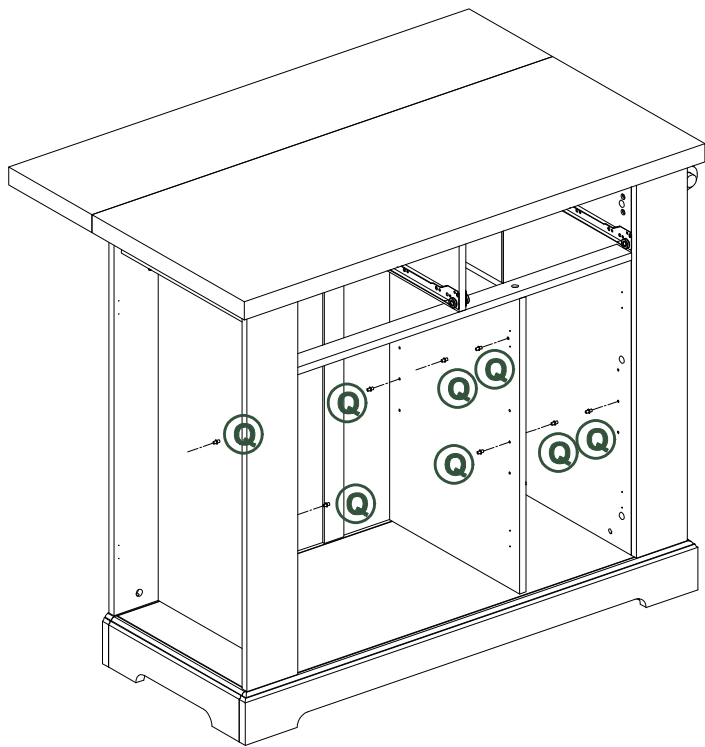


33(X3).


34.

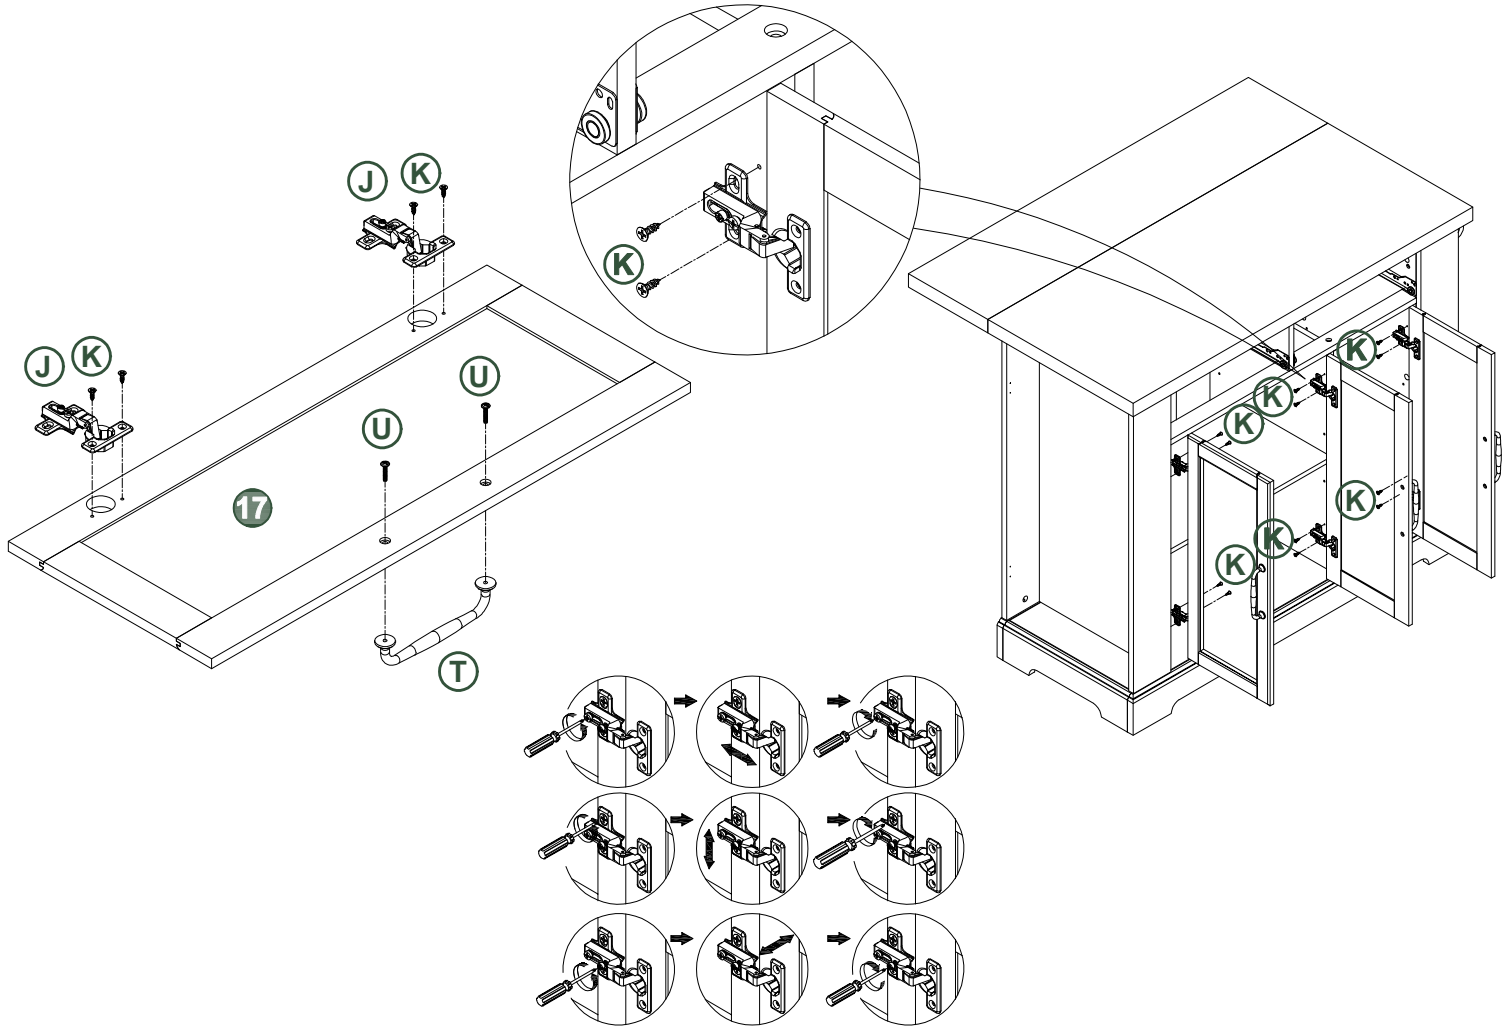


35.

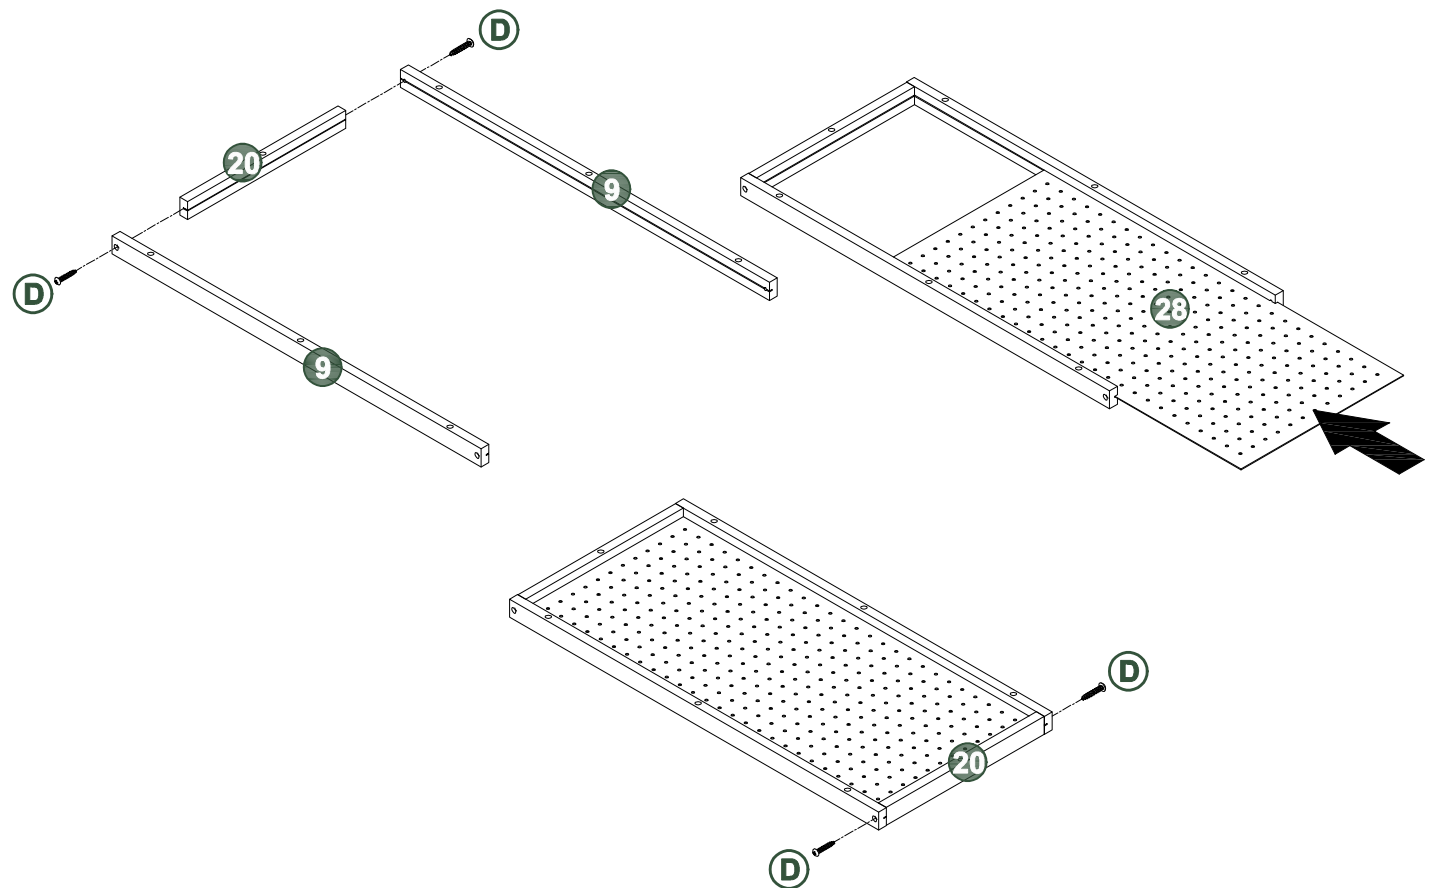


36.

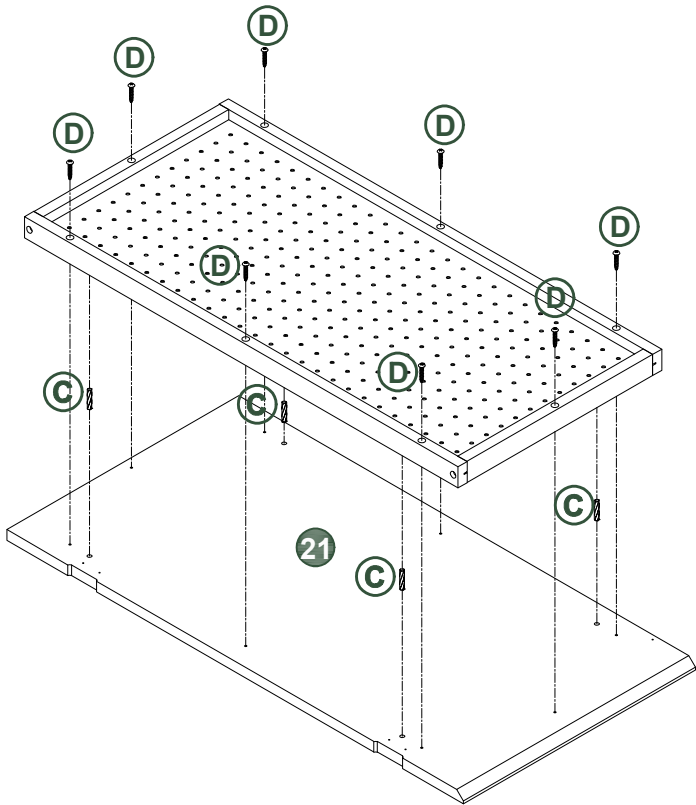






37.

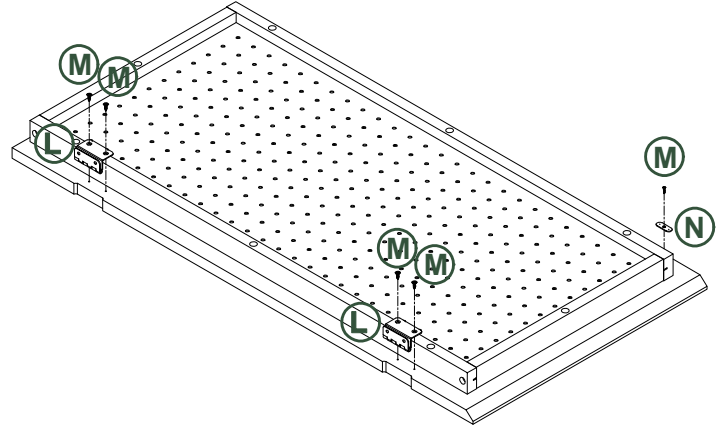






38.




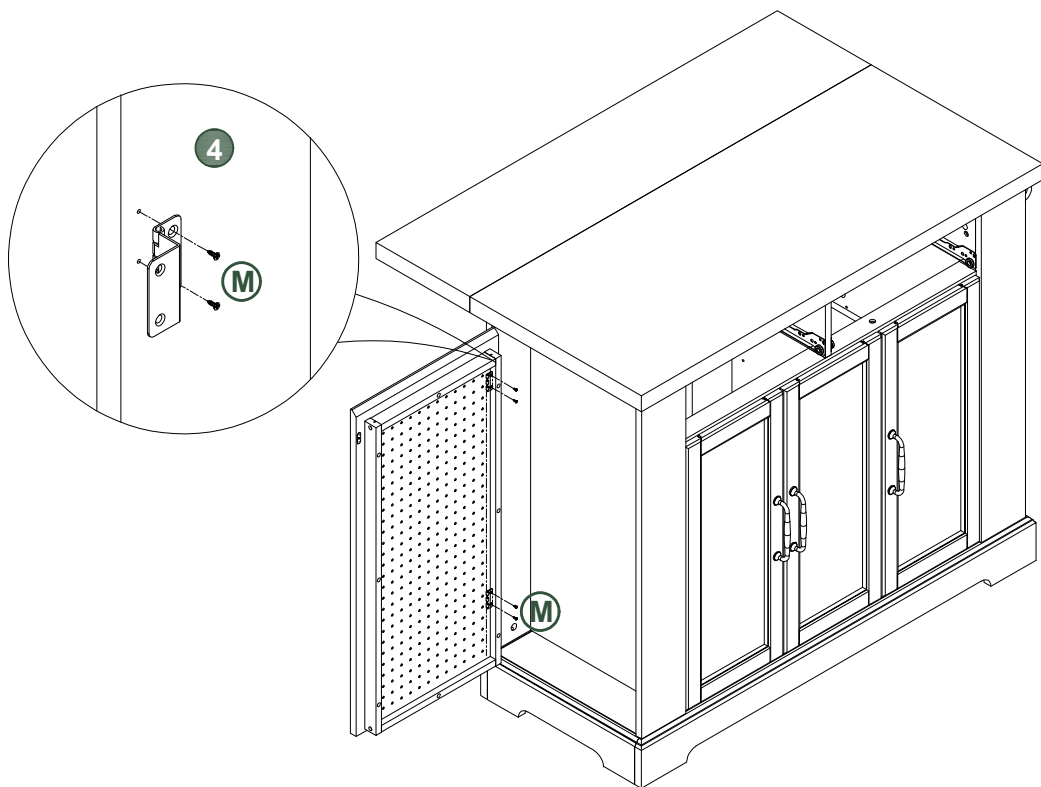


39.

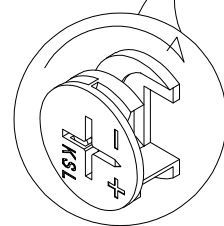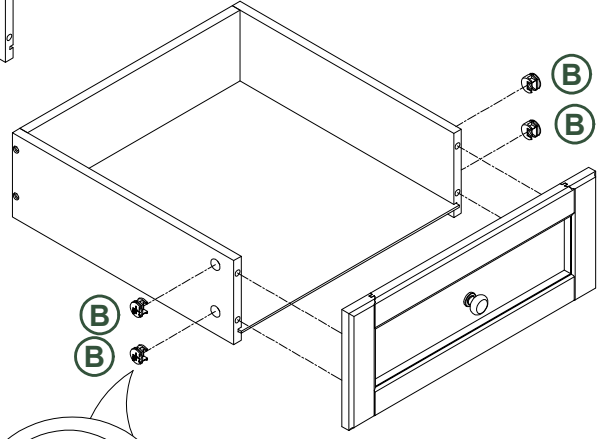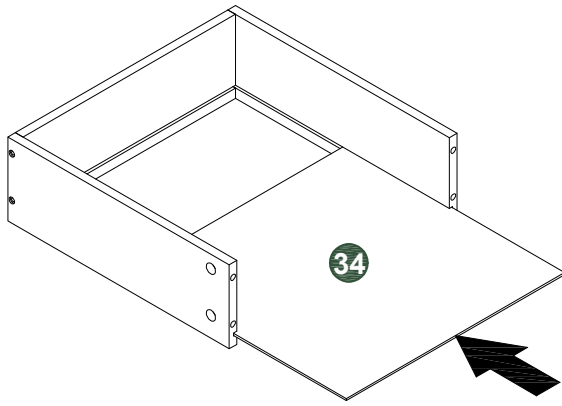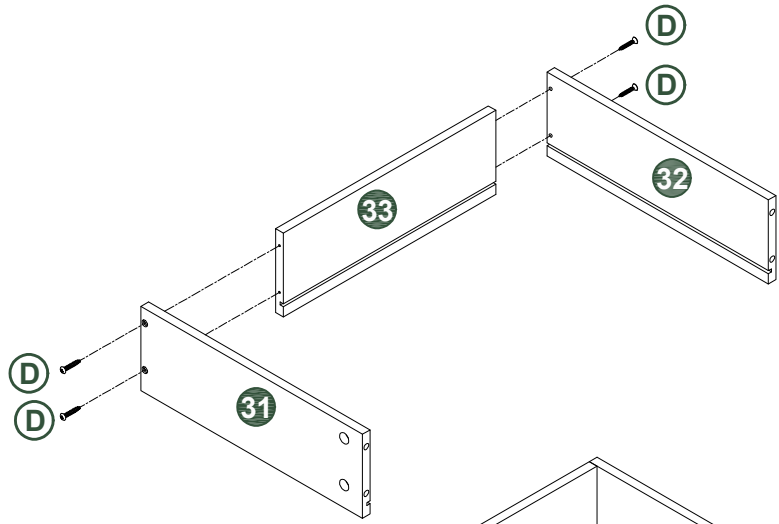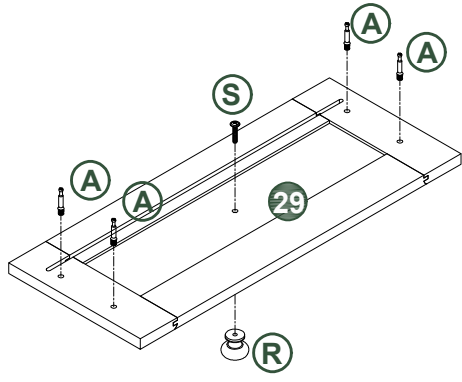

40.

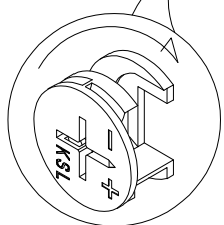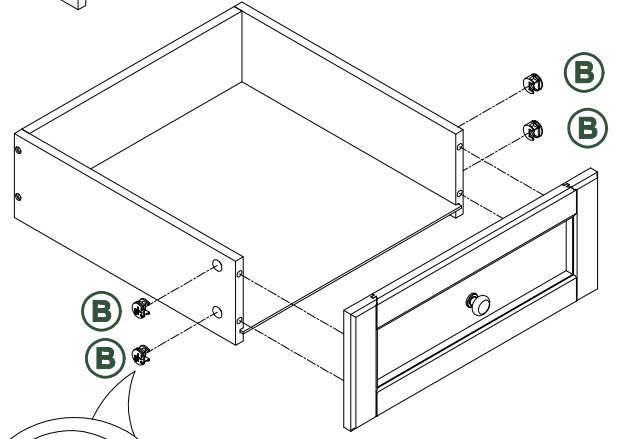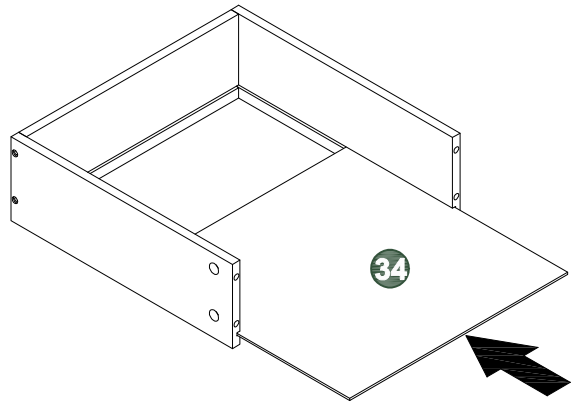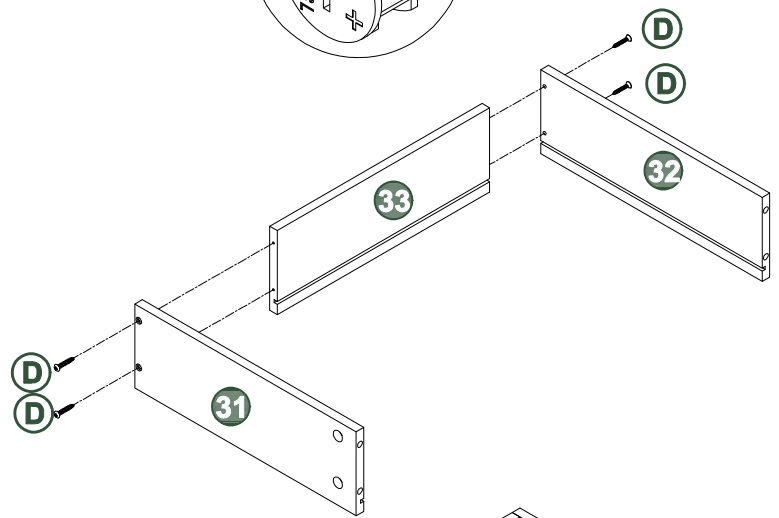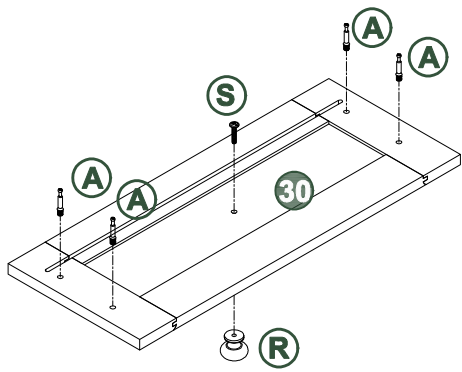

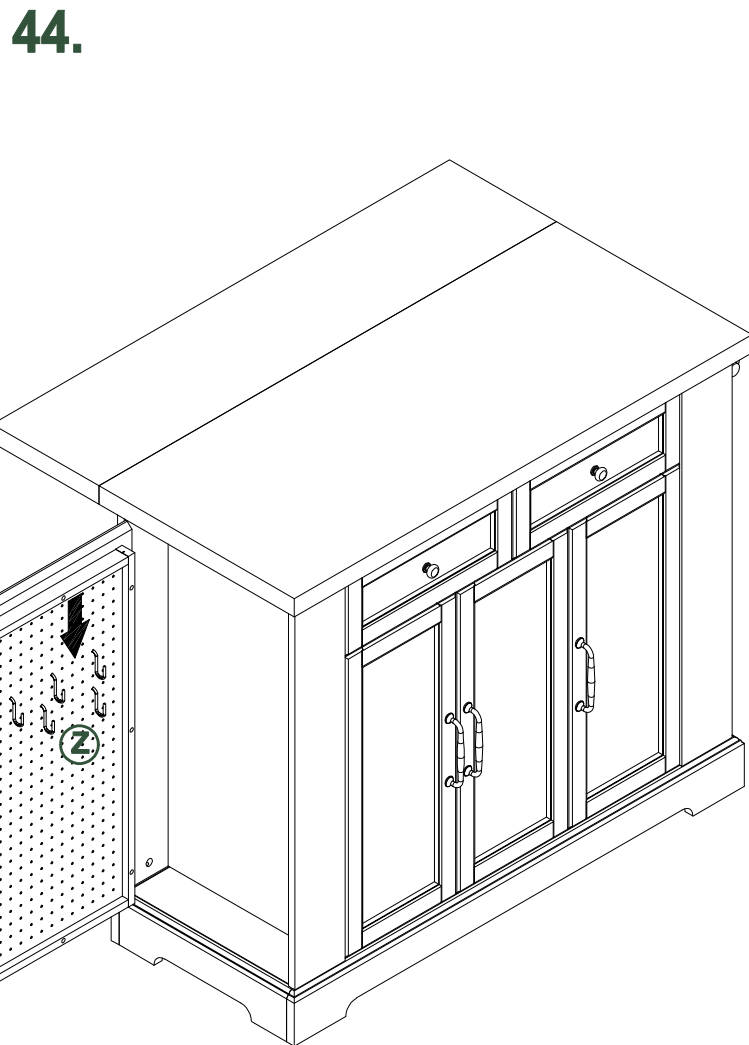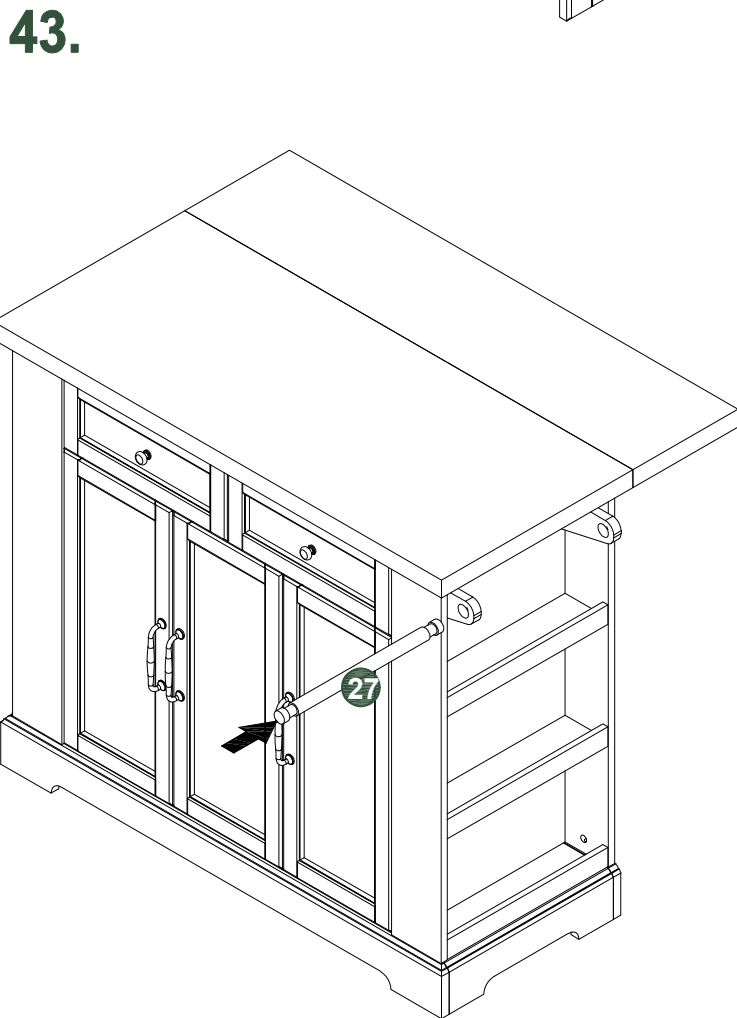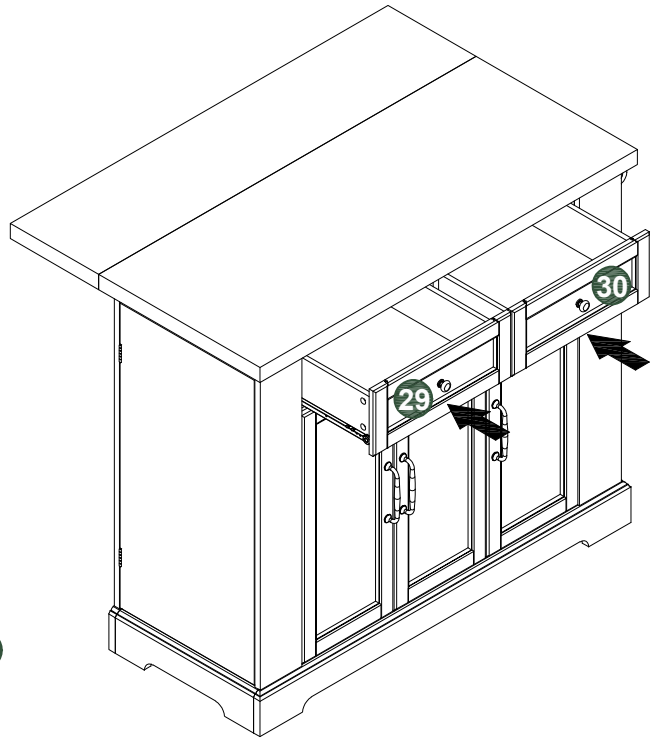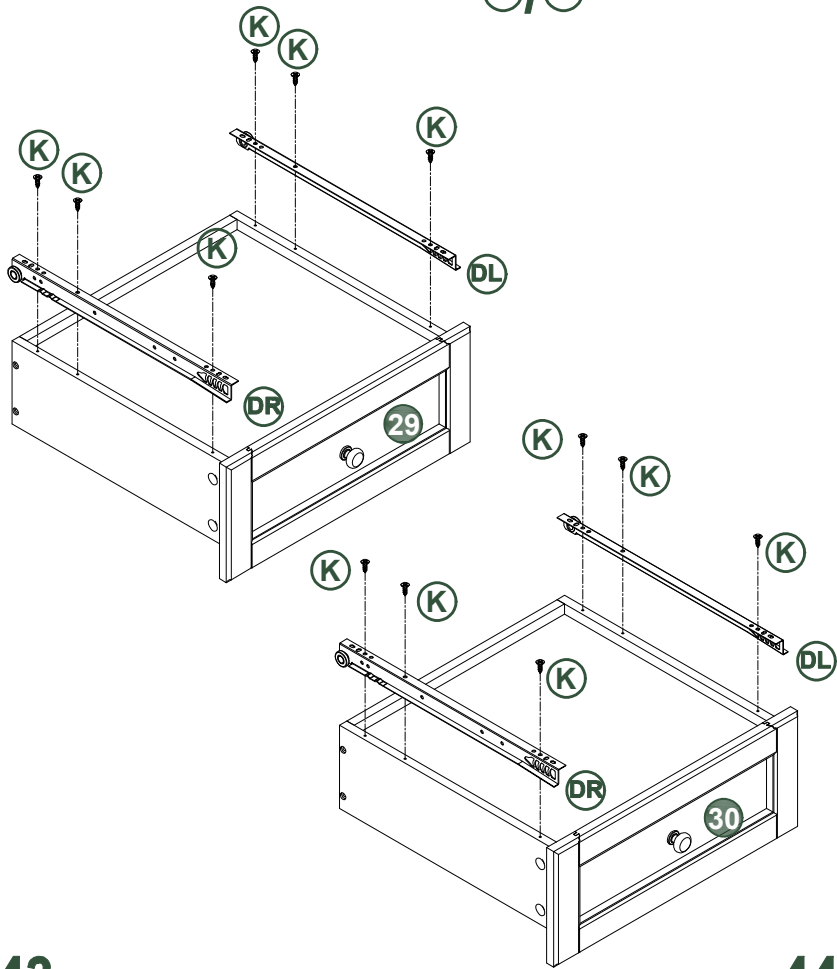



Scan the QR code to
share your review