



Assembly & Operation Instructions

Parts Included:

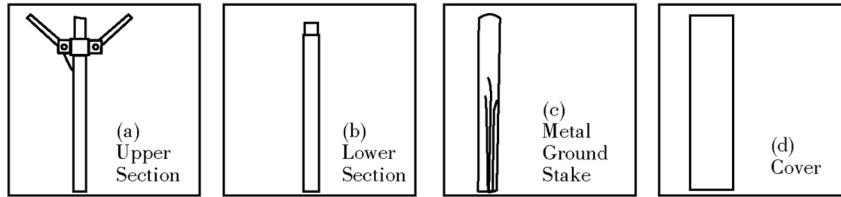


Installation steps:


1. Insert the ground stake into ground

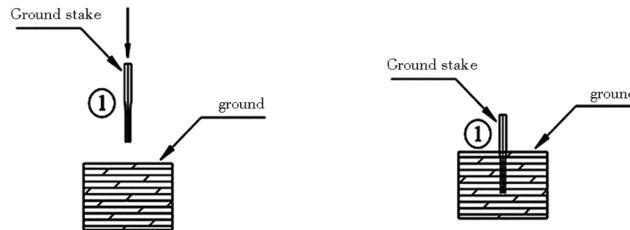

2. Insert supporting pole into the ground stake

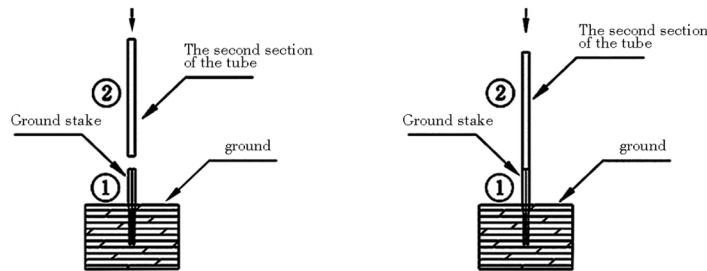

3. Carefully insert the main pole into the supporting pole, Sorting out the clothesline to make it in the correct line part, make sure all line keep parallel, please note avoid any line entanglement, then using the lift mechanism raise and open the arms

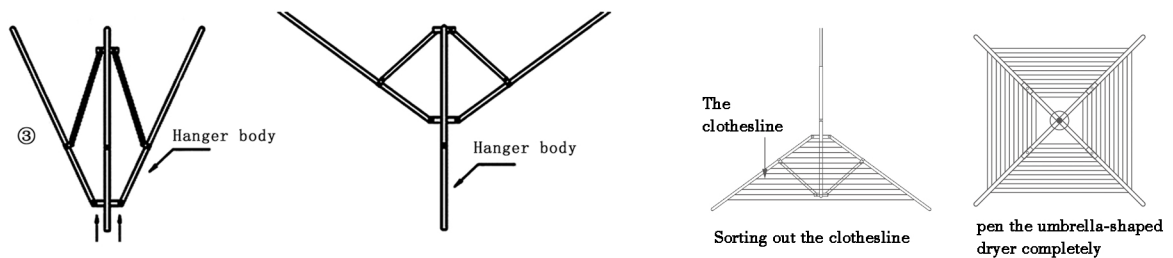

4. Once locked in place, your washing line will be ready to use



Permanent Fixing

- Dig a hole 20cm square and 40cm deep
- Partly fill the hole with concrete and place the spike upright in the centre
- Complete filling with concrete and ensure when installing the ground spike that it is firmly located in the vertical position
- Allow 48 hours for setting before use

Non-Permanent Fixing

- Using a piece of wood to protect the top of the spike, strike it with a hammer, driving your spike into to ground, stopping occasionally to check the spike always maintains a vertical position
- Continue driving your spike into the ground until the top of the spike is at ground level

NOTE: please use responsibly. Distribute the weight of washing evenly on the line across all sides. Place heavier items of clothing on the lower lines to prevent the airer from tipping over. Watch your fingers when putting up & taking this product down. Protect from weather elements that may cause corrosion of metal elements over the time. Cover with parasol cover when not in use.