


wind stop instructions

Assembly

Remove all parts from the carry bag and ensure all are present before commencing your journey. We also recommend a practice pitch to ensure you understand your windbreak and that it is in full working order:

A


Assemble the three poles sections and lay them out on the ground.

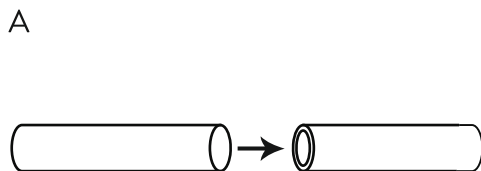

B

Lay the wind stop sheet out on the ground. So all are sleeves straightened out as flat and straight as possible. Insert each pole through the Sleeve in turn, pulling the eyelets over the metal Top sections on the poles.


B

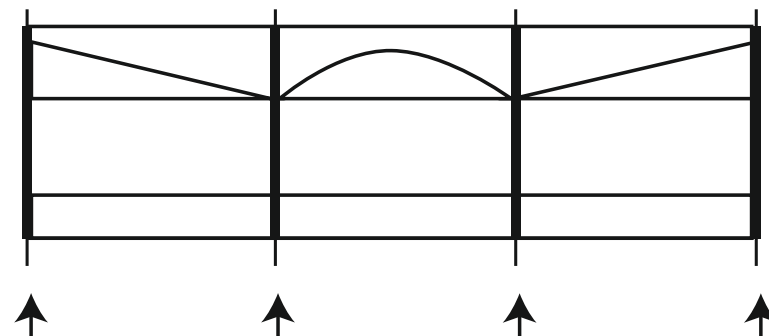

C

For optimum hold, pegs should be hammered into the ground at approx 45 degree angle. Guyropes should be 90 degrees to the peg.


C

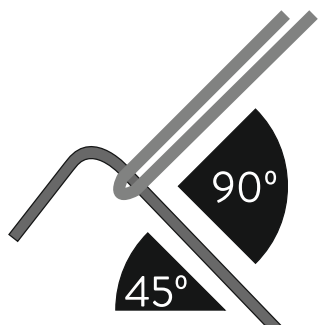

D

Peg out all guyropes and tension to allow the wind stop to stand firmly.

D

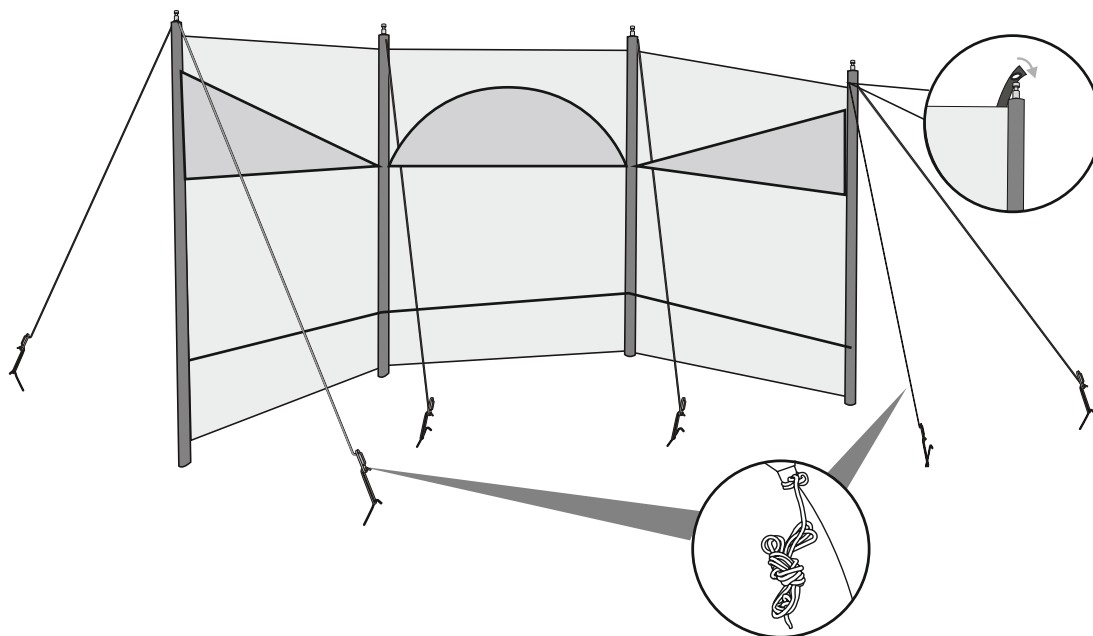

Always allow the tarp, poles and pegs to fully dry before packing, otherwise immediately after returning home.

Fold fabric neatly to fit into bag.

Please do not use this product in extreme wind conditions

Do not cook close to this product. Keep away from heat sources.