





Rose Handle Fitting Instructions

Upgrade your interior doors with ease by following this simple step-by-step guide. These instructions are designed for replacing existing handles where a **tubular latch is already fitted**.

Tools You Will Need:

-  Screwdriver
-  Drill (with suitable drill bit for bolt-through holes)
-  Pencil
-  Tape measure or ruler

Before You Begin: Ensure the work area is clean and free from dust. Check that the existing latch is in good working condition.

Step-by-Step Installation

1. Check the Tubular Latch

- Make sure the tubular latch is already installed in the door.
- Test it to confirm it operates smoothly before proceeding.

2. Insert the Spindle

- Pass the spindle through the door, ensuring it goes through the centre of the tubular latch.

3. Position and Align the Handles

- Attach the lever-on-rose handles to both sides of the spindle.
- Hold them in place and ensure they are straight and properly aligned.

4. Mark the Fixing Points

- Use a pencil to mark the bolt-through fixing holes via the openings in the rose plates.
- These marks will indicate where to drill for secure fixing.

5. Remove Handles and Latch

- Take off both handles carefully.
- Remove the tubular latch to prevent damage during drilling.

6. Drill the Holes

- Drill holes at the marked positions.
- Ensure they are straight and clean so the bolt-through fixings can pass through easily.

7. Reinstall the Tubular Latch

- Place the latch back into the door.
- Ensure it sits flush and is correctly aligned.

8. Reassemble and Secure the Handles

- Insert the spindle back through the latch.
- Refit both handles onto the spindle.
- Secure them using the provided bolt-through fixings, tightening with a screwdriver.

9. Test the Handle

- Operate the handles to check the latch retracts and returns smoothly.
- Make any minor adjustments needed to ensure proper alignment and function.



1. Check Tubular Latch Position



2. Insert the Spindle



3. Position & Align the Handles



4. Mark Bolt-Through Fixing Points




5. Remove Handles & Latch



6. Drill Bolt-Through Holes



7. Reinstall the Tubular Latch

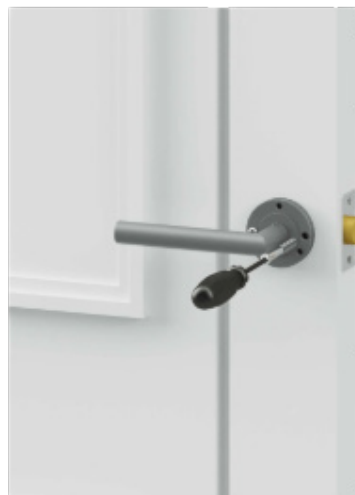

8. Reassemble & Secure the Handles



9. Test the Handle Functionality