



GOLBAL PROCUREMENT AND MARKETING LIMITED

HOME VENETIA SHOE CABINET

Assembly instruction- Please keep for future reference

SHOVENSON SHOVENGRY

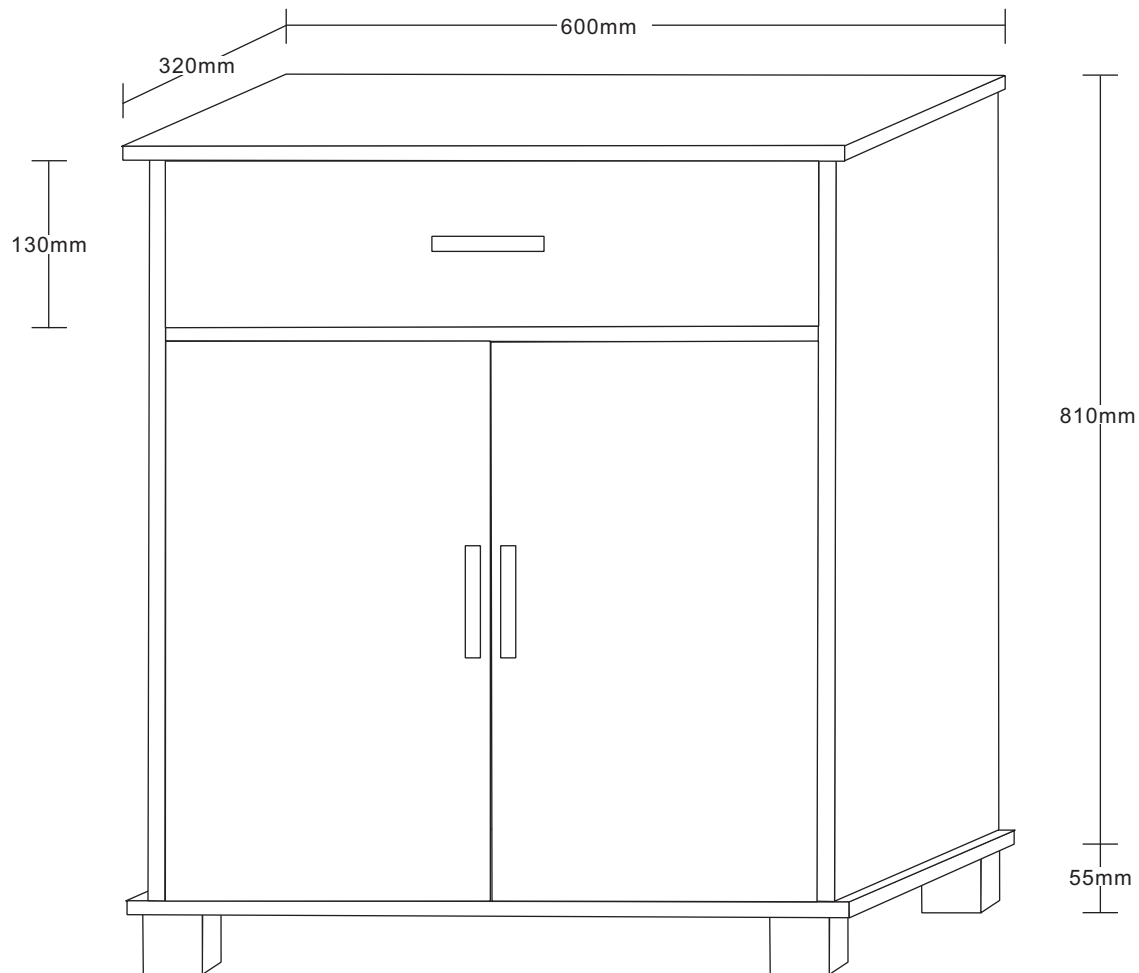

Dimensions	No. People	Assembly Time	OW#
Width: 60 cm Depth: 32 cm Height: 86.5 cm		45 mins (approx)	SHOVENSON SHOVENGRY

thank you

For purchasing this
GPM Limited
product

Important

- PLEASE READ THESE INSTRUCTION FULLY BEFORE STARTING ASSEMBLY.
- PLEASE DO NOT THROW THE PACKAGING AWAY UNTIL YOU ARE SATISFIED WITH PURCHASE, GOODS NEED TO BE RETURNED IN ORIGINAL PACKAGING.

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

⚠ Safety and Care Advice

Important-Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2,3 and 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screw, as this could damage the unit. only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.




Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

If you are unhappy with the product and wish to return it, please following the retailer's returns procedure.

Components - Panels

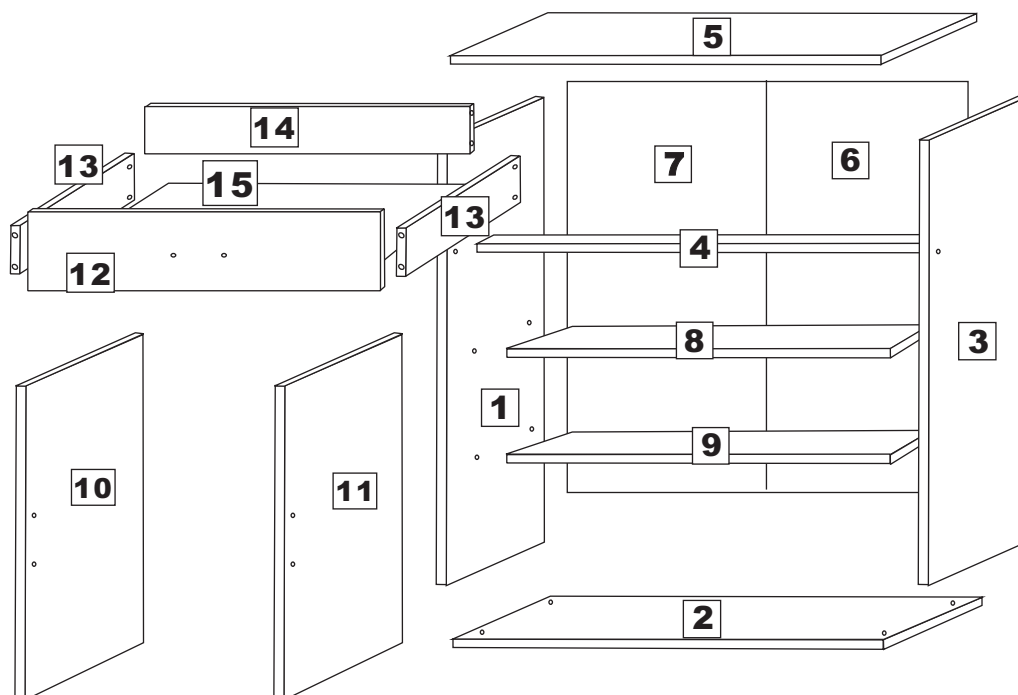



















Components - Fixings

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

Please check that you have all the components listed below before constructing your item.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


HARDWARE				
(A)  JCBC M5 X 40mm X 6	(B)  M4 X 32mm X 10	(C)  M3.5 X 14mm X 46	(D)  Bolt Nut MiniFit X 2 set	(E)  Nail X 32
(F)  Dowel (M8 X 25) X 6	(G)  Plastic Shelf Support X 8	(H)  Handle X 3	(I)  Plastic Leg X 4	(J)  L-Bracket X 2
(K)  Hinges X 4	(L)  Drawer Slide 12" X 1 set	(M)  Allen Key X 1		

ANTI - TIPPING KITS				
(N)  M4 X 32mm X 2	(O)  M3.5 X 20mm X 2	(P)  Wall Plug X 2	(Q)  Bracket X 2	(R)  Strap X 1

Tools Required (Not Provided)



Ruler - Use this to measure your screws (mm)



Important-Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

Assembly Instructions


If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

Step 1

Attach drawer slide rail (L) to Panel boards 1 & 3 with screw (C) onto the specific pre-drilled pilot holes as shown below.

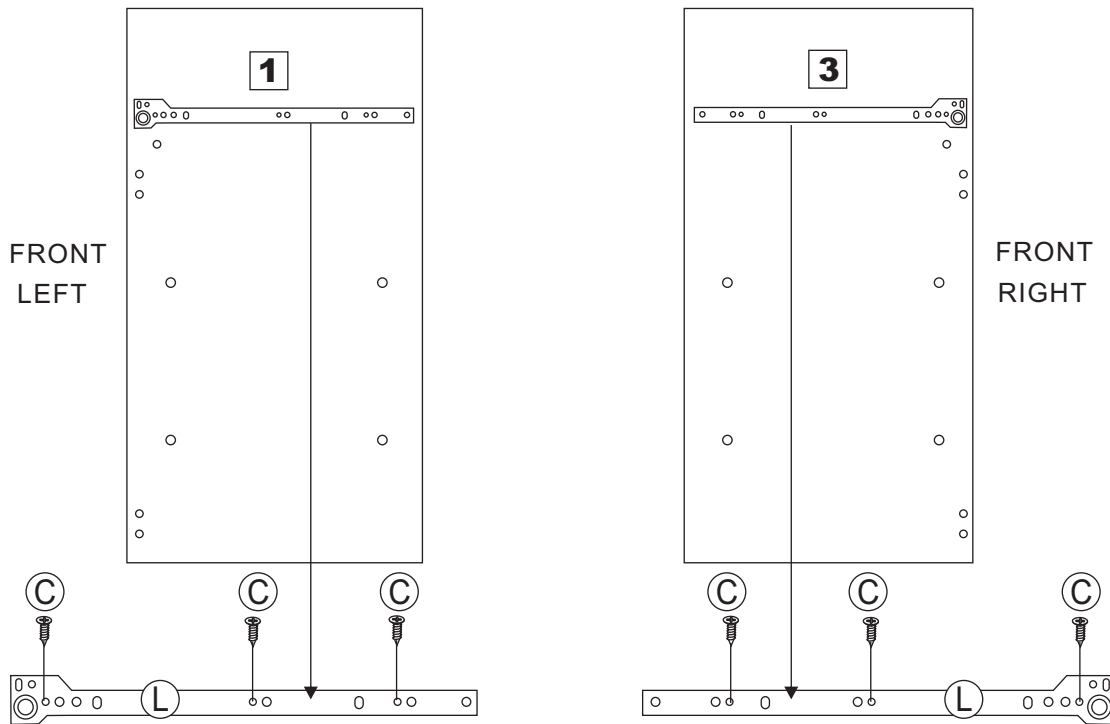


Step 2

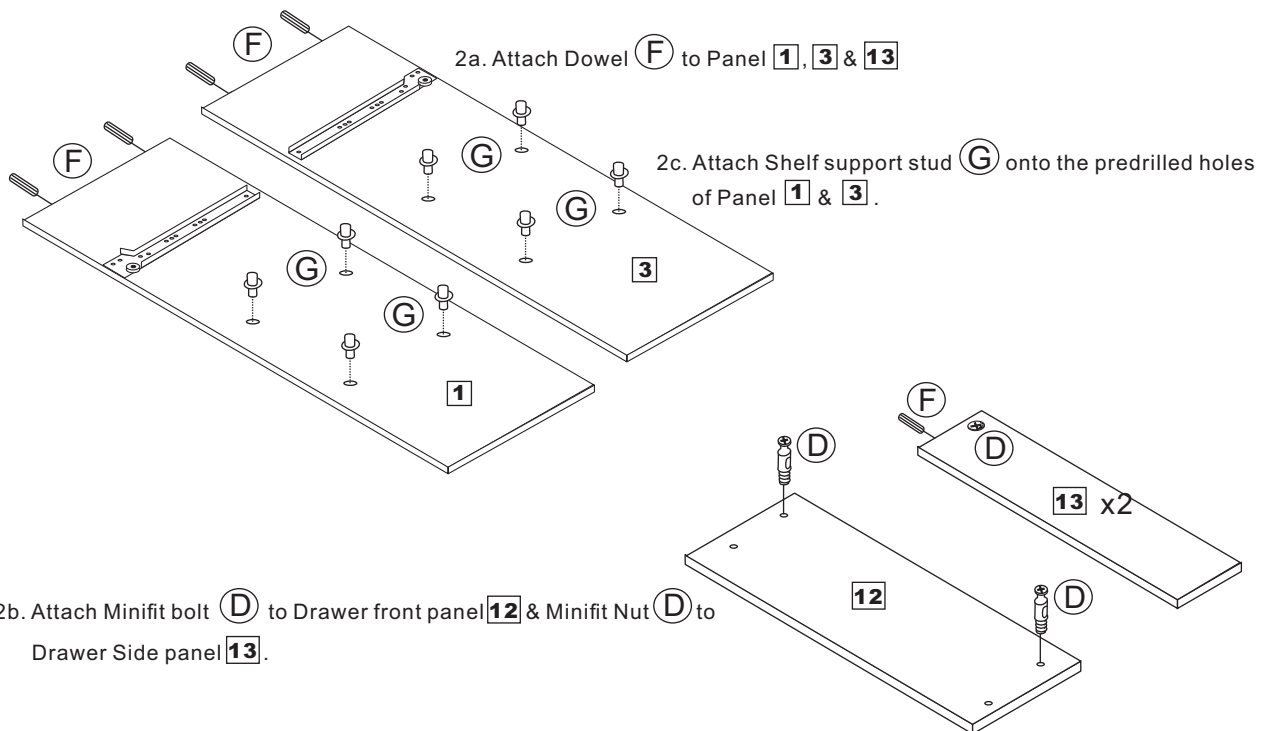


Step 3

3a. Attach Handle (H) to drawer Front panel (12) with Screw (B) and tighten with Screw driver.

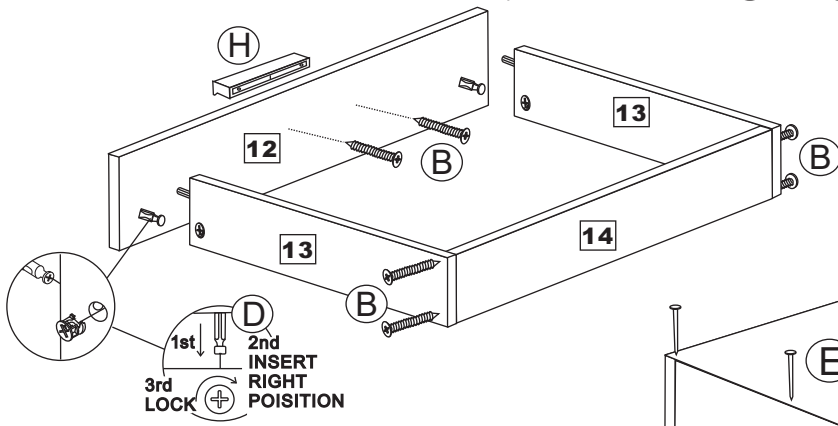


3c. Attach base board (15) with Nail (E) to the drawer base using a small hammer.

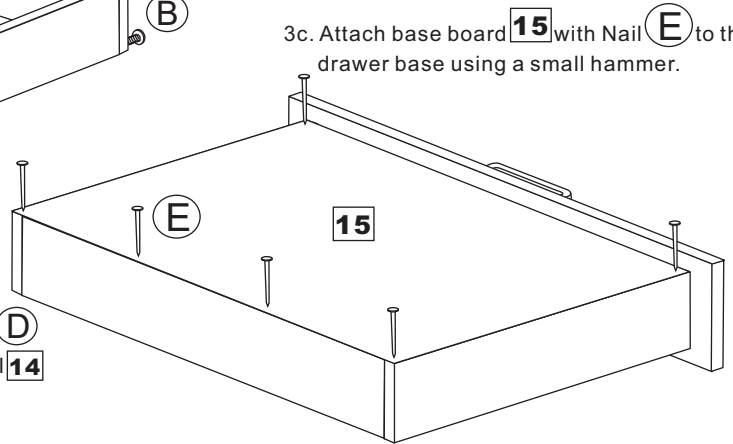

3b. Fasten drawer side panel (13) to front panel (12) to minifit (D) using Screw driver to lock. Secure the drawer back panel (14) with screw (B) using a screw driver to tighten.


Step 4

Attach drawer slide rail (L) to drawer base with screw (C) and tighten with screw driver.

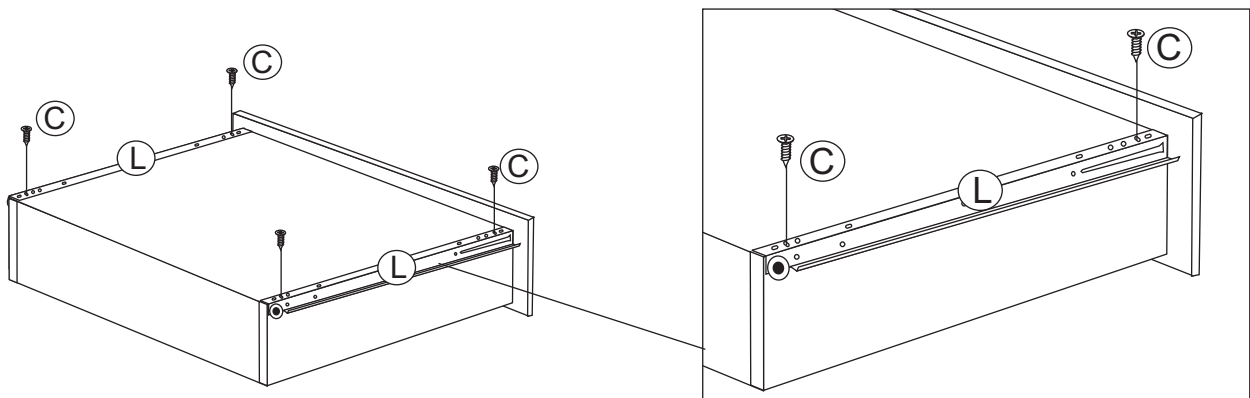

Step 5


5a. Attach Panel (1), (2), (3), (4) & (5) with Screw (A) using Allen key to tighten.

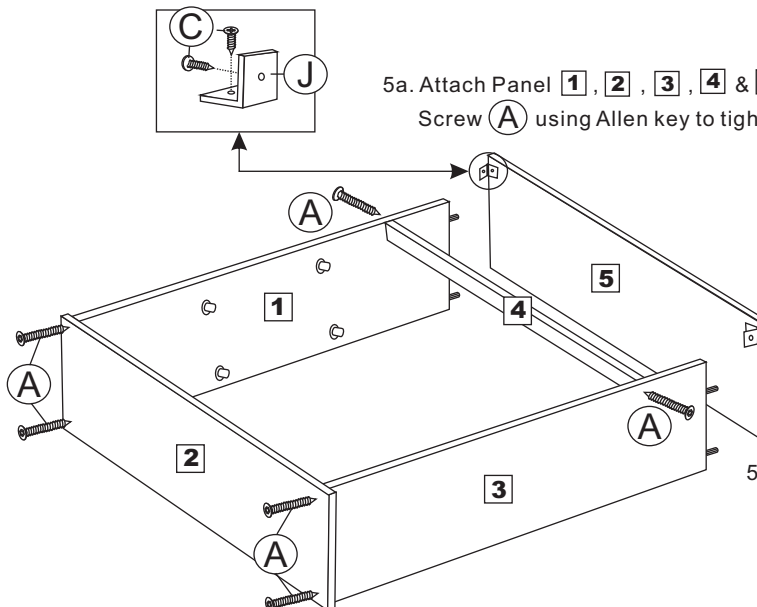

5b. Attach Top panel (5) using L-Bracket (J) with Screw (C)


Step 6

6a. Attach back board **6** & **7** to the back of cabinet, with Nail **E** using a small hammer.

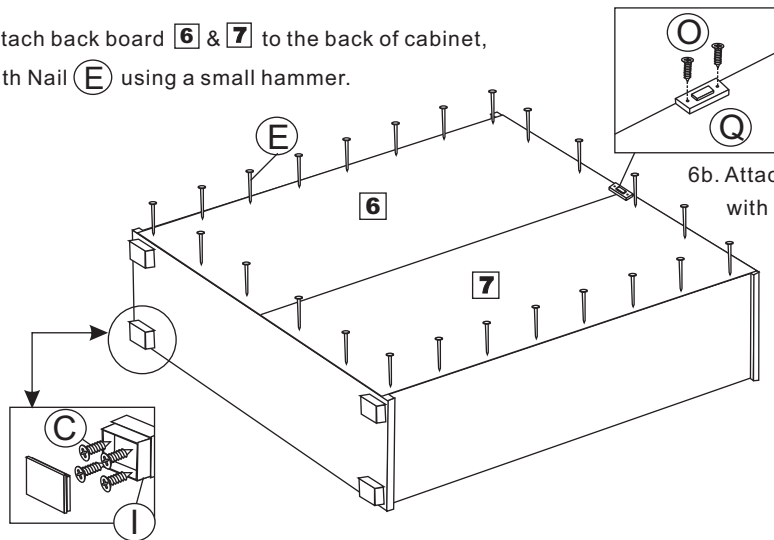


6b. Attach Anti tipping kit bracket **Q** with Screw **O**

6c. Attach Leg **I** with screw **C** as shown.

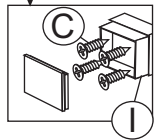


Step 7

Lay on Shelf panel **8** & **9** as shown

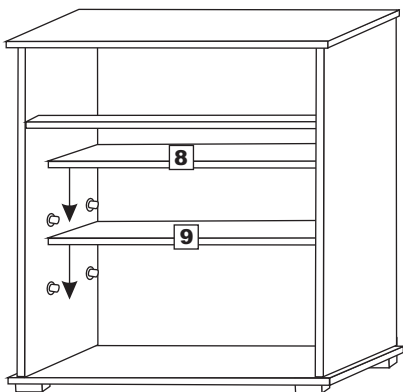


Step 8





Slide assembled Drawer unit into place.

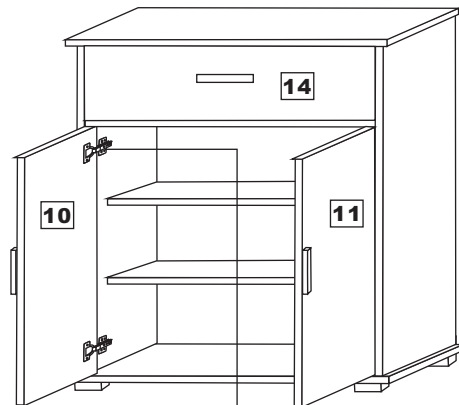

Install Door hinger **K** with Screw **C** using Screw driver to tighten.

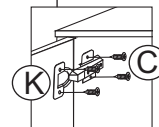

Step 9

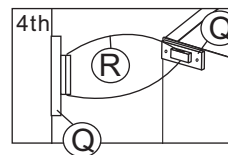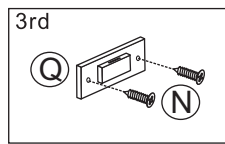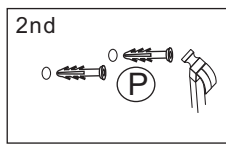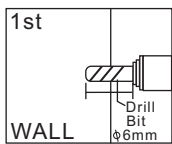

Attach the Anti-tipping kit onto wall following the steps as shown.

