



ASSEMBLY INSTRUCTION

GENTS WARDROBE


No	Hardware	Qty
1	Bolt M6 x 35 	8
2	Washer Ø7/Ø19 x 2 	8
3	Allen key K4 	1
4	Screw Ø4 x 35 	20
5	Screw Ø4 x 45 	3
6	Wood dowel Ø8 x 30 	1
7	Handle with bolt 	2 set
8	Screw Ø4 x 20 	6
9	Bracket 	2
10	Tie 	1

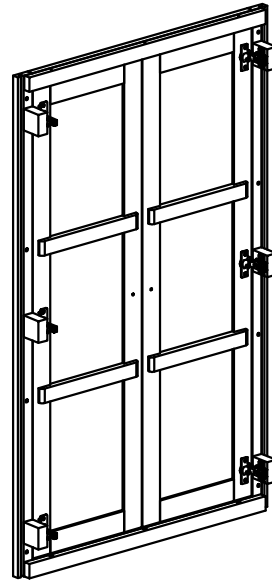


A - Front Frame x1




B - Side Frame x2 (left -right)

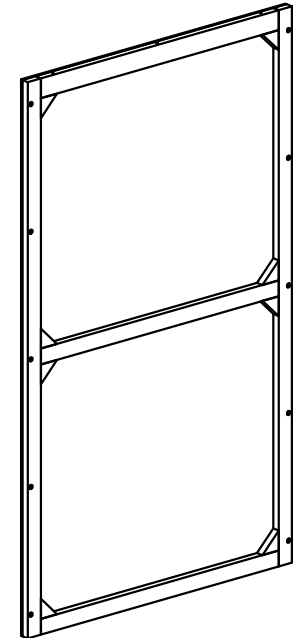


C - Back Frame x1

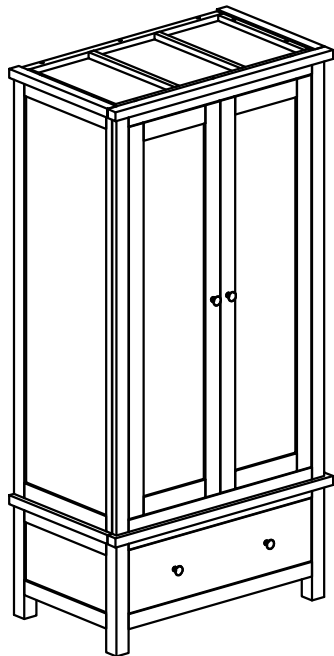


D - Top frame x 1

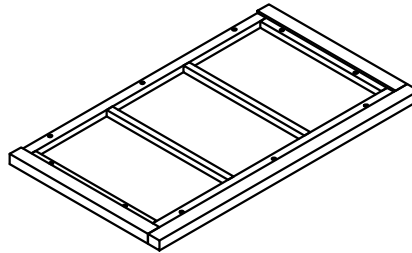


E - Hanging rail x 1




F - Base

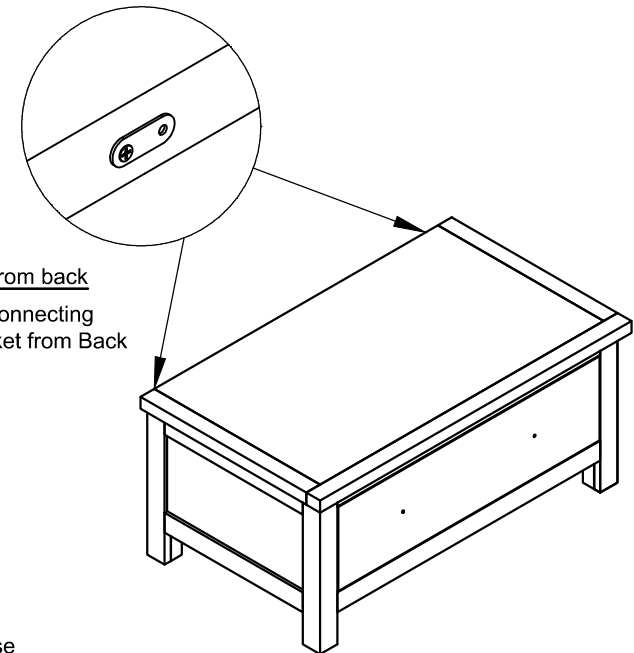


STEP 1:

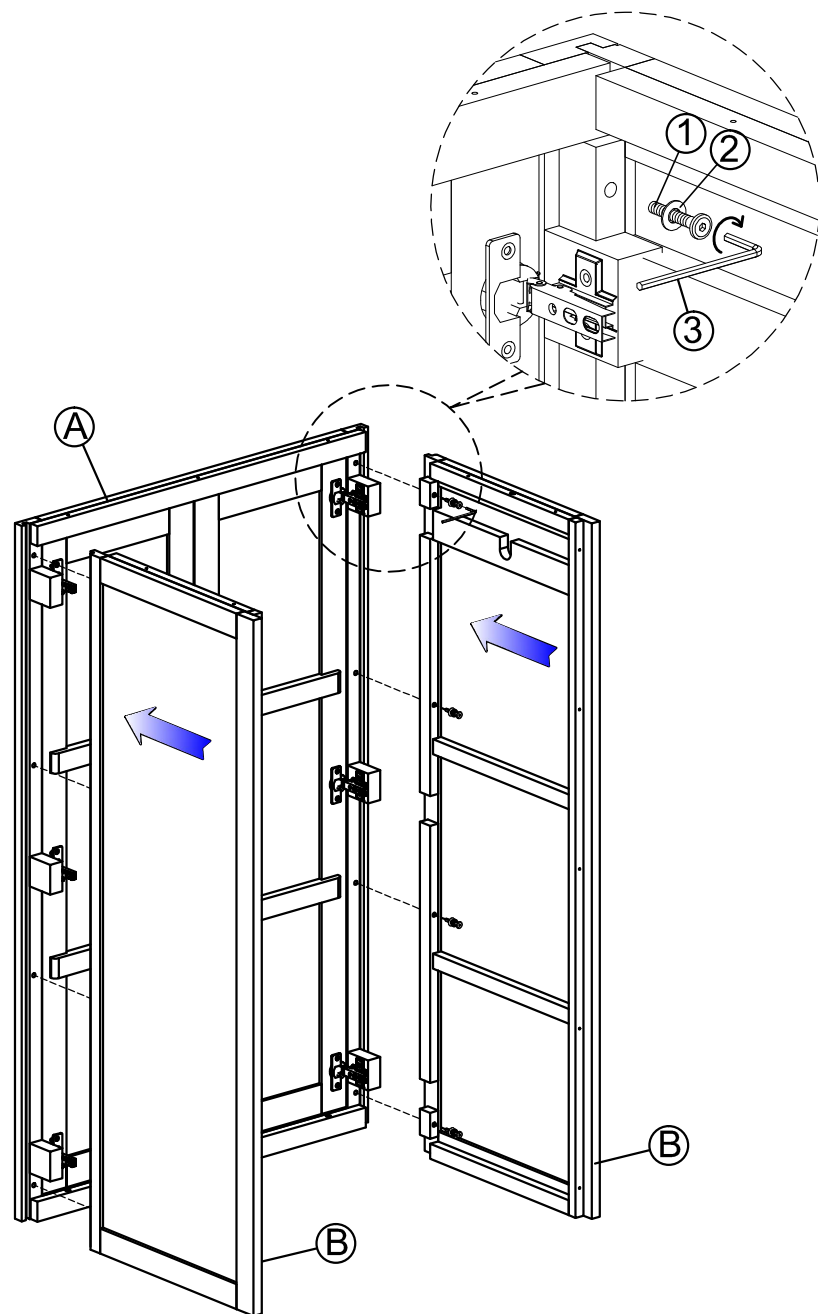


STEP 2:

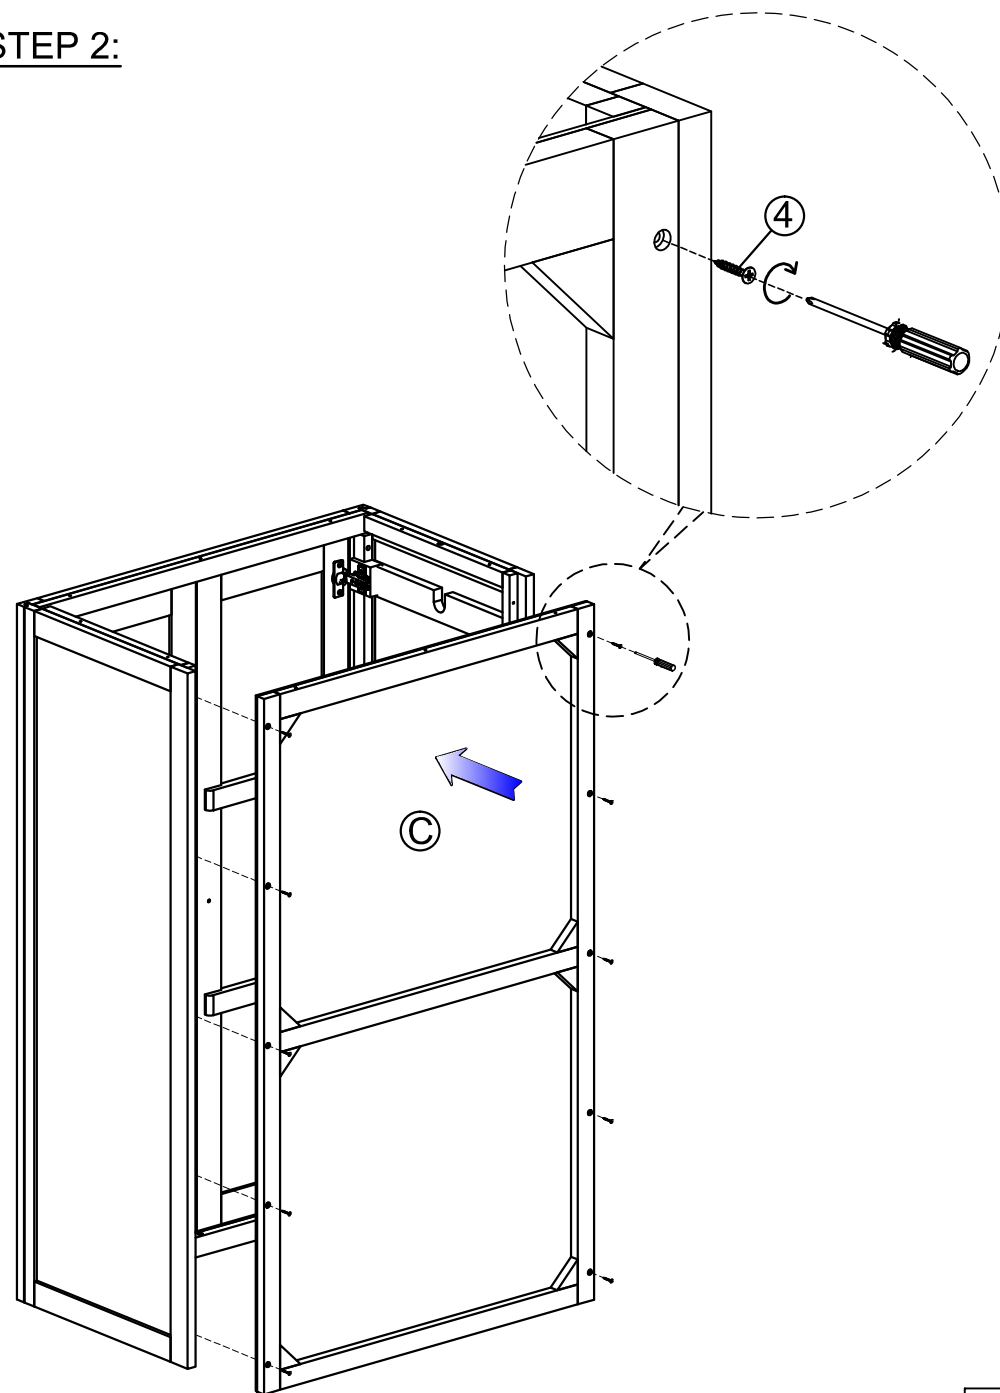



STEP 3:

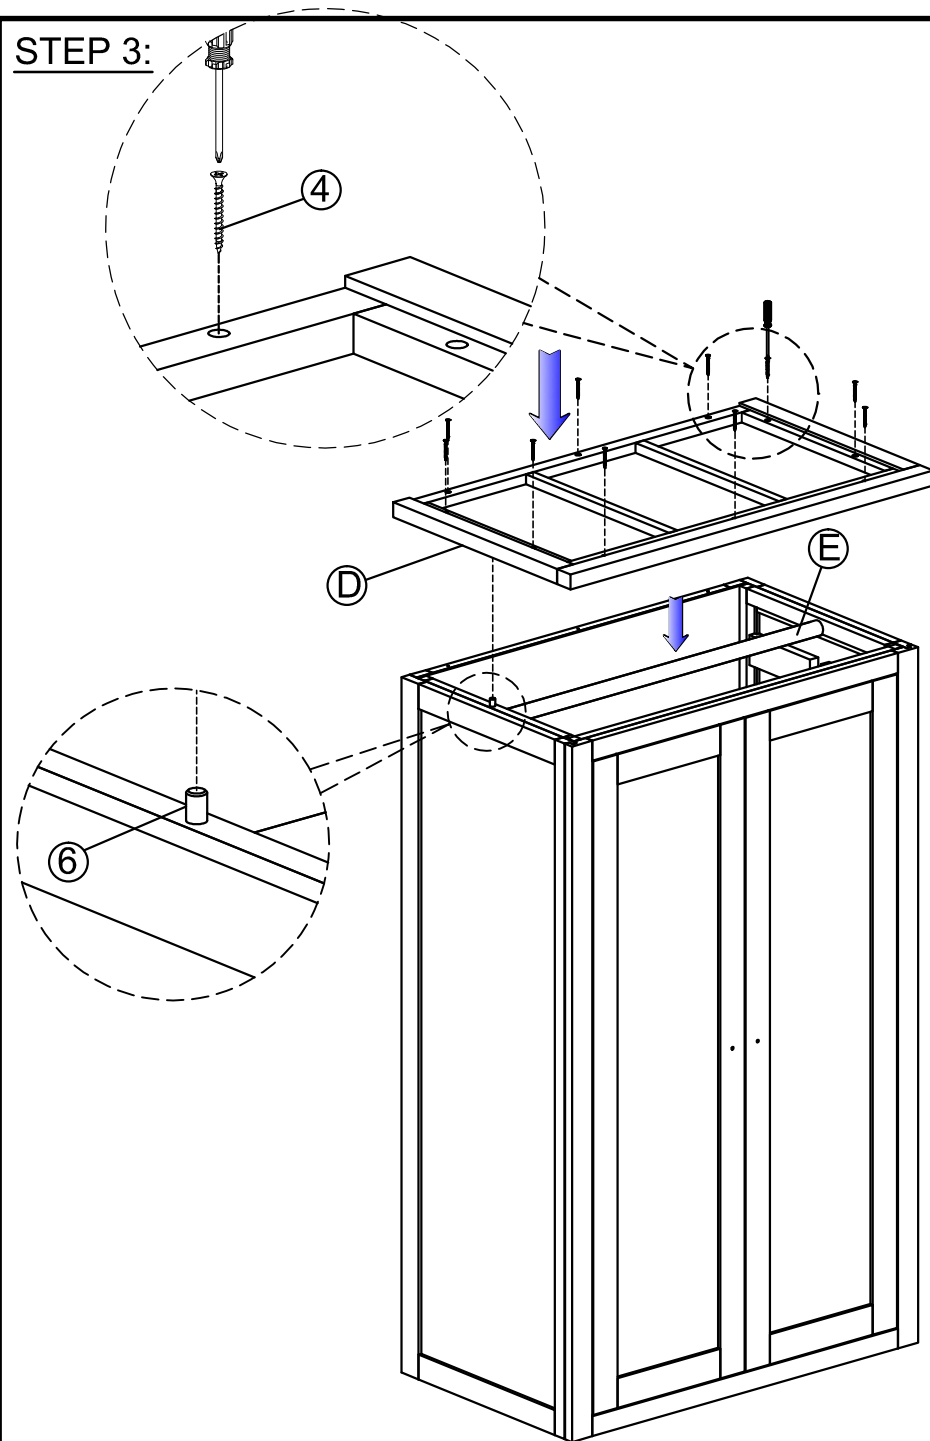

STEP 4:

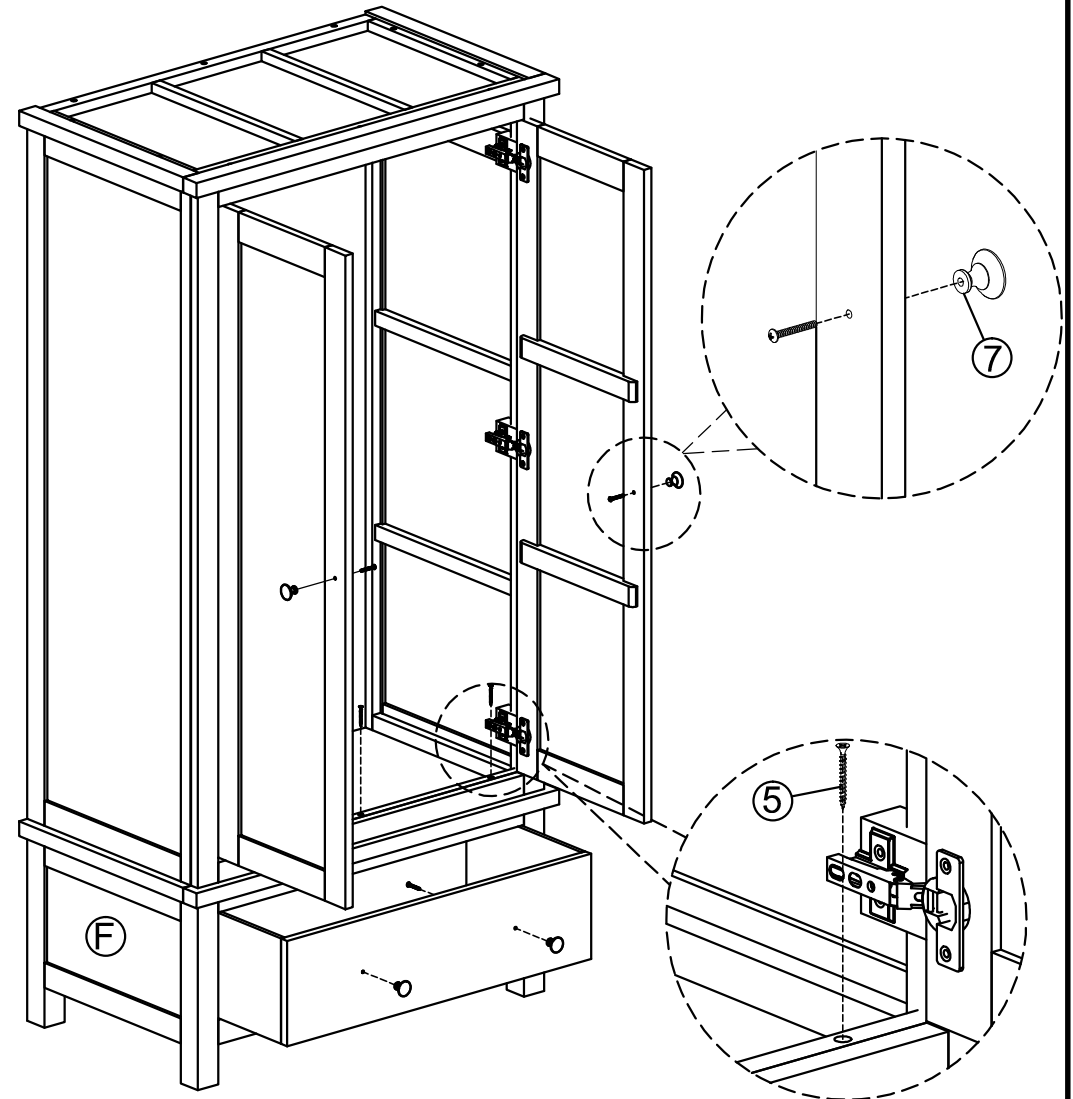


STEP 5:

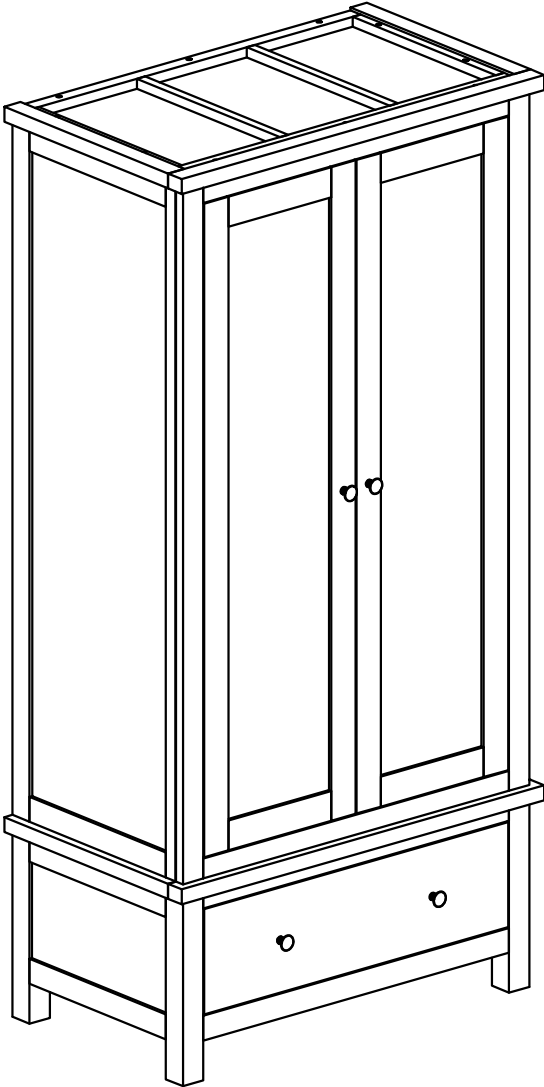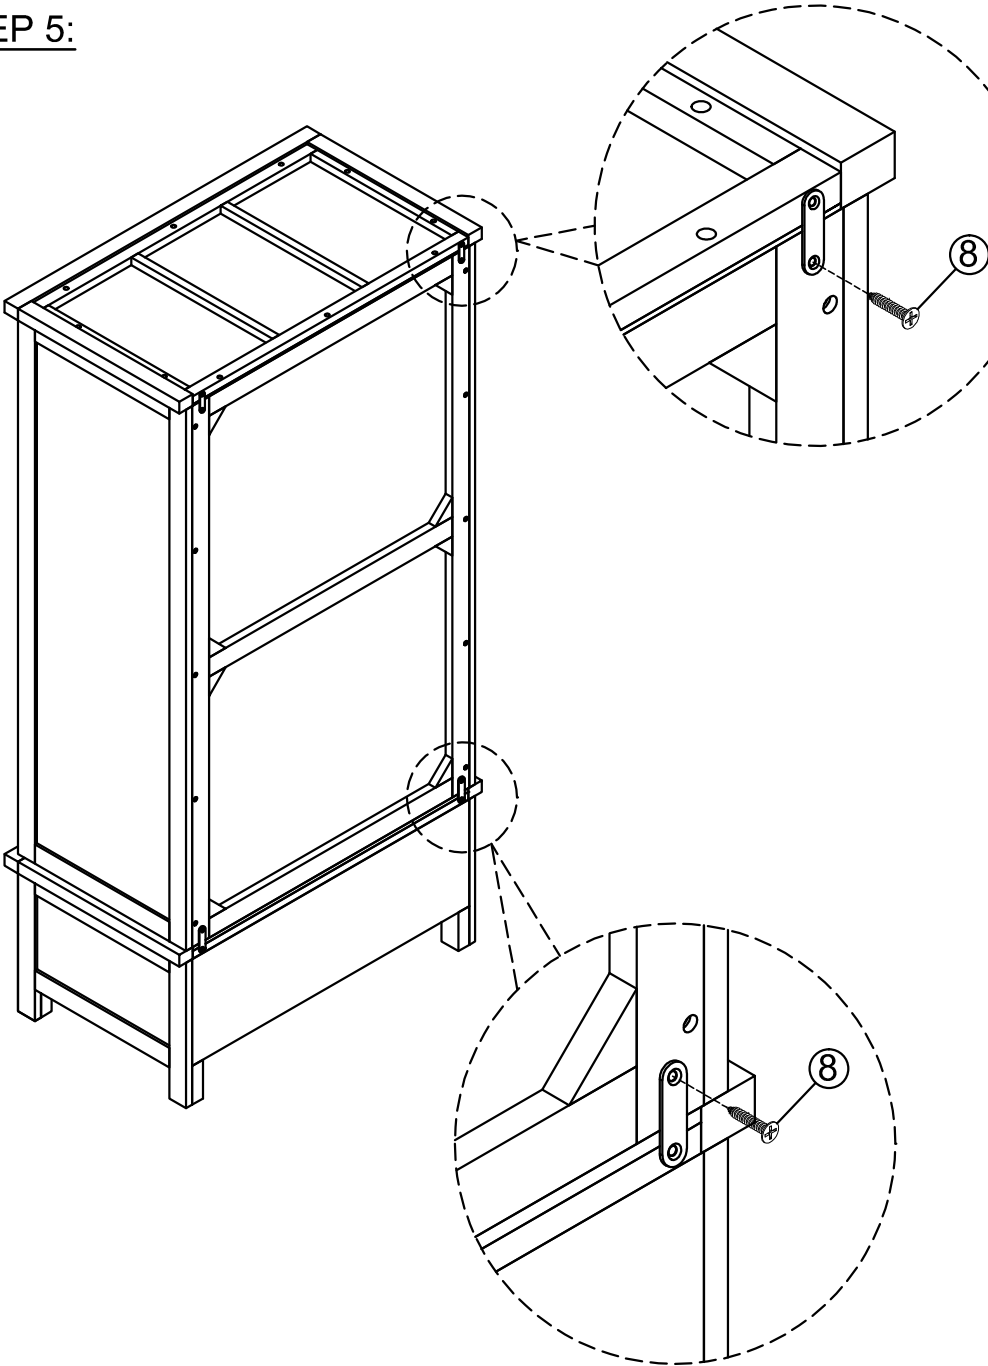

HINGE ADJUSTMENT INSTRUCTIONS


LATERAL ADJUSTMENT

by screw adjustment.

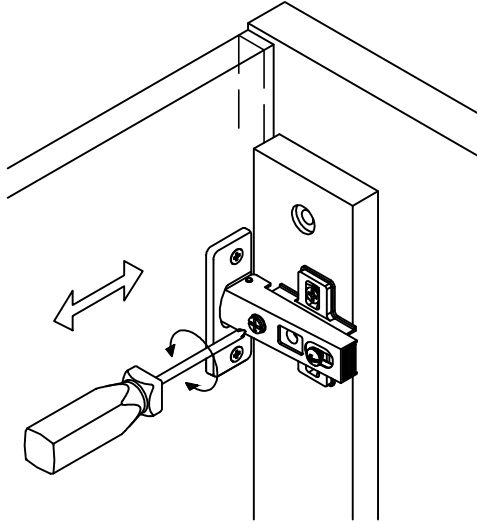


FRONT-TO-BACK

by slackening and retightening the hinge-arm mounting screw.

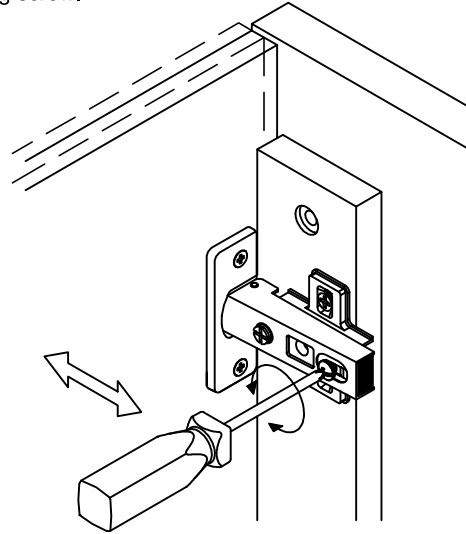


VERTICAL ADJUSTMENT


via slots on mounting plate by slackening and retightening the screws on mounting plate

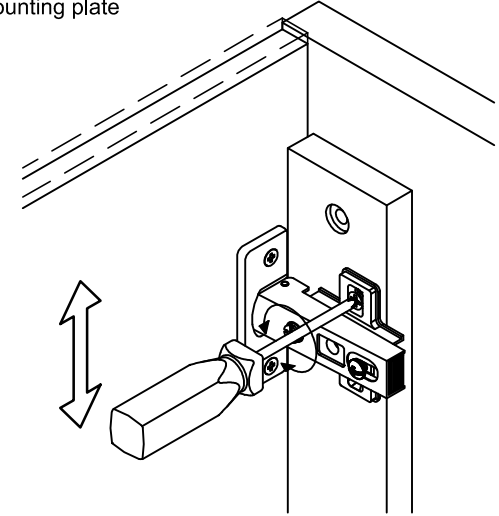

ASSEMBLY

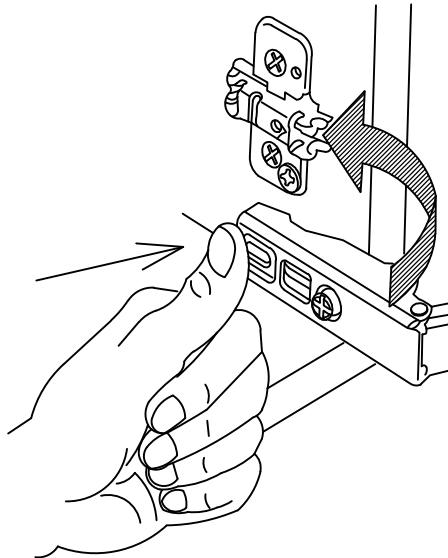

DISASSEMBLY

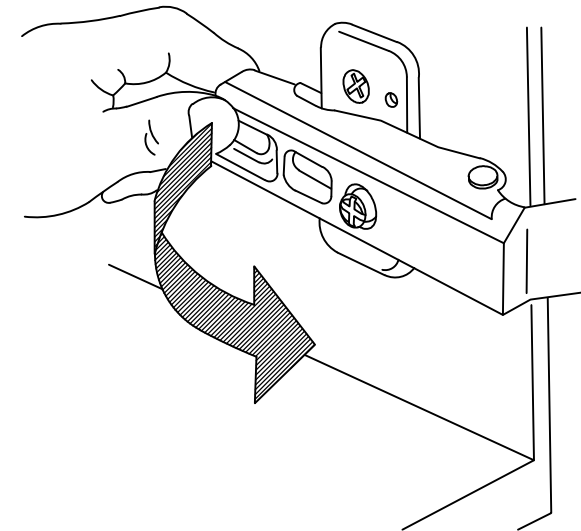

STEP 6:

