

Wrap it

How to Vinyl Wrap Kitchen Doors

Before



After



Tools for the job

- * d-c-fix® application kit (with craft knife and smoother)
- * Tape measure

- * Scissors
- * Pencil
- * Ruler

- * Screwdriver
- * Household cleaner and cloth
- * Hairdryer

STEP 1




Remove doors and handles and clean thoroughly

STEP 2



Measure

STEP 3

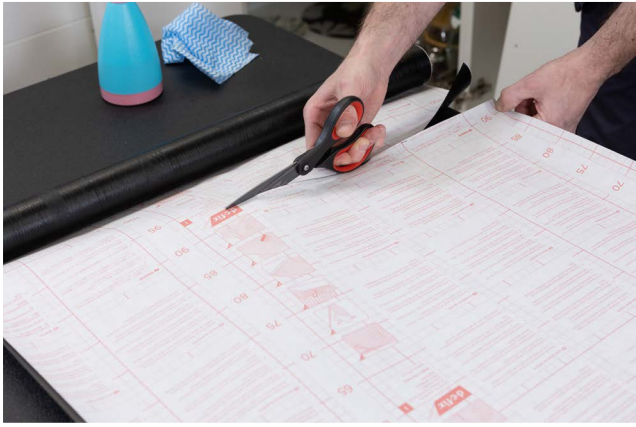

Cut to size allowing enough overhang to wrap around the edges (at least 3cm each side).

STEP 4




Peel back a section of backing paper

STEP 5




Smooth into place moving from the centre to the edges

STEP 6

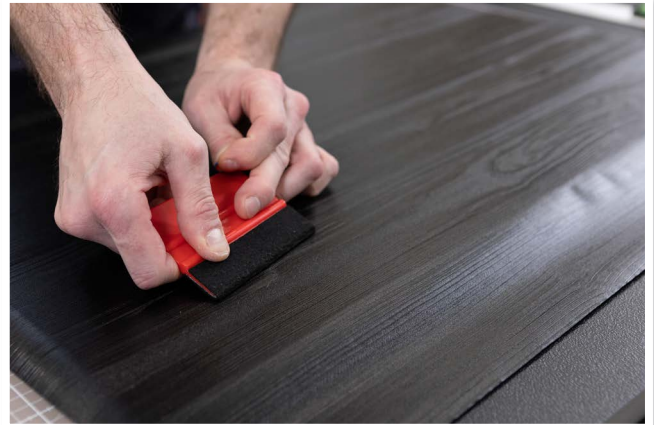

Prick any air bubbles with a pin and smooth out to the edge

STEP 7

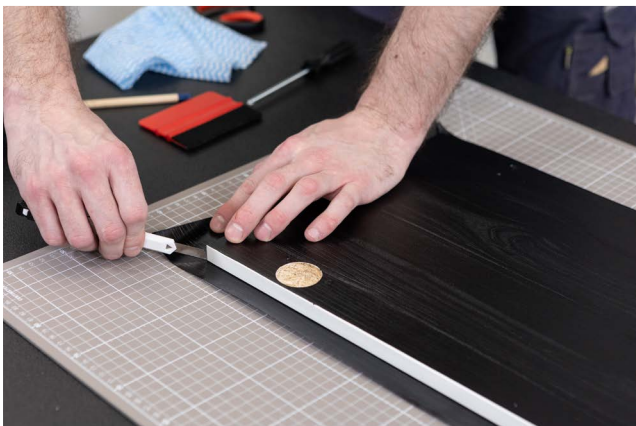

For neat corners cut a diagonal line into the corner

STEP 8



Smooth one of the flaps around the corner of the door

STEP 9



Trim away excess film

STEP 10




Fold the second flap around the corner and trim away excess film

STEP 11



Use a hairdryer to help secure the film around the corners and edges

STEP 12

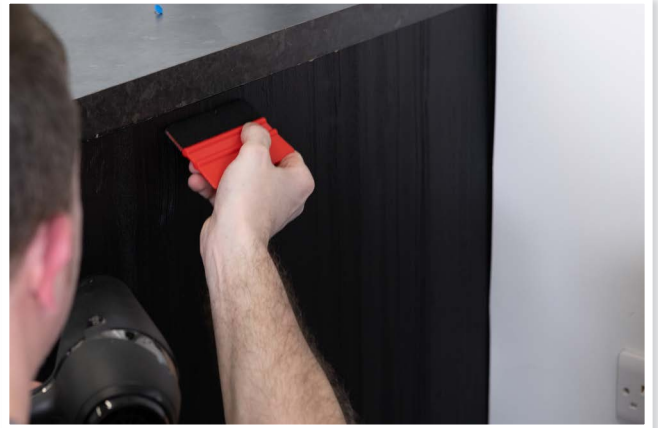

Cover sides of the units

STEP 13



Cover plinths

STEP 14



Replace doors and handles



Tips!

- Use a d-c-fix® application kit containing felt smoother (to eliminate creases and bubbles without damaging the vinyl) and craft knife (with snap-off blade for easy, neat trimming). All available on our website.
- Applying heat from a hairdryer can soften the adhesive, making it more pliable for wrapping around curved edges. This can also help when it comes to removing the film once it's been stuck down for a while.
- Spray glossy surfaces with water to help the film glide into place and minimise air bubbles.
- For shaker style doors, apply the film in sections to cover the 4 sides and centre panel instead of one piece. Overlap each section by 2mm and use a hairdryer to seal joins.
- Depending on your preference, either cover the inside of the door to match the outside or trim edges neatly with a craft knife.

