


Wrap it

How to Vinyl Wrap Worktops

Before



After

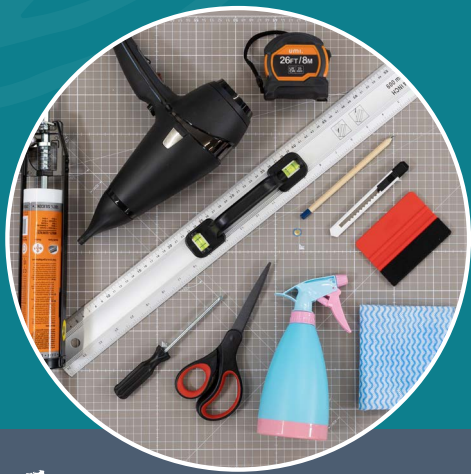


Tools for the job

- * d-c-fix® application kit (with craft knife and smoother)
- * Tape measure

- * Scissors
- * Pencil
- * Ruler
- * Screwdriver


- * Household cleaner and cloth
- * Hairdryer
- * Silicone sealant

STEP 1

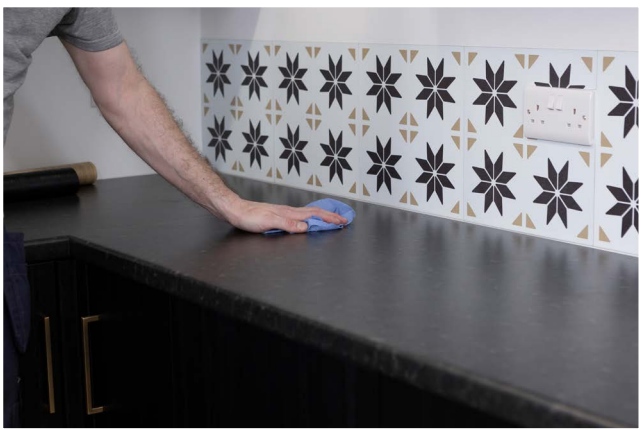

Clean worktop thoroughly removing any dirt/dust

STEP 2

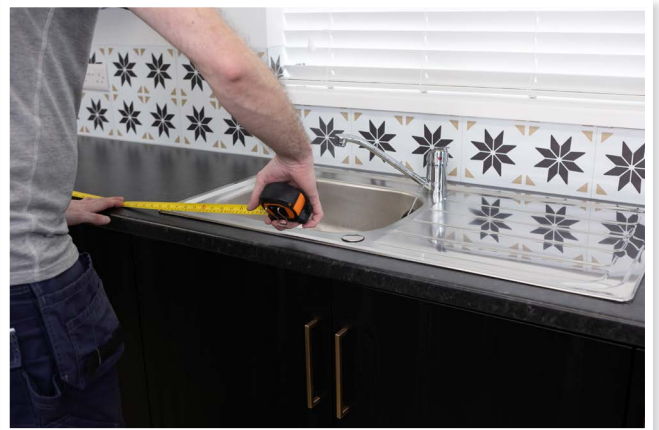

Measure length and depth. Allow extra to wrap around the front and side edges

STEP 3



For sink area, measure and cut hole to feed tap through

STEP 4



Peel away backing paper

STEP 5



Smooth into place, working from side to side. If you get a crease or bubble peel back and re-apply

STEP 6



Wrap the film tightly over the edges by pulling gently on the vinyl and using the smoother

STEP 7



Cut an X shape over the drainer then use a hairdryer to push the film into the edges around the sink

STEP 8



Trim away the excess vinyl using the craft knife, run it along the edges

STEP 9



For neat corners, cut a 45 degree line in towards the corner of the worktop. Fold flap around, stick into place and trim

STEP 11




Seal around the sink with silicone

STEP 13



Apply your next length of film with a 2mm overlap (for woodgrain designs check the grain is running in the right direction). Make an incision into the corner

STEP 10

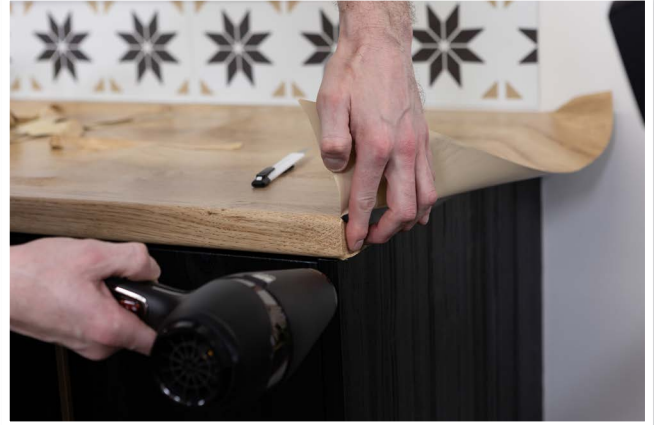

Use a hairdryer to secure in place then fold the second flap around and trim away excess vinyl

STEP 12



If there is an adjacent worktop to cover, cut the film in line with the existing joint

STEP 14



Wrap the film over the front edge then trim as required



Tips!

- Use d-c-fix® application kit containing felt smoother (to eliminate creases and bubbles without damaging the vinyl) and craft knife (with snap-off blade for easy, neat trimming). All available on our website.
- Spraying water onto the surface can help the film glide into place and minimise air bubbles.
- d-c-fix® is heat resistant to 75C, hot cups and plates will be fine, but NO hot pans – use worktop savers to protect your vinyl and keep 12” away from naked flames.
- Remove any liquids eg. curry that will easily stain your vinyl immediately.
- If joining the vinyl, overlap by 2mm to allow for any shrinkage.
- Use silicone sealant around sinks and hobs to make it water tight.
- Heat from a hairdryer can be used on curved edges, giving a better finish (no baggy edges).
- When you want to remove the film, use heat from a hairdryer to soften the adhesive.

