


470 - Latest Bath

BATH VIDA

MILANO TALL MIRRORED BATHROOM CABINET

ASSEMBLY INSTRUCTIONS

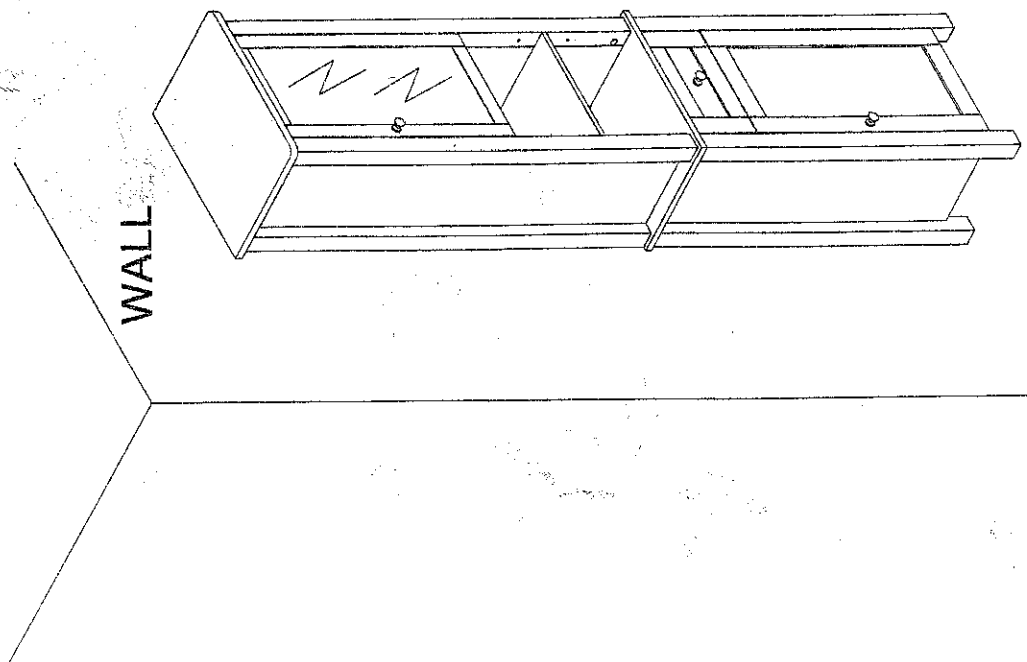

Hardware:


Letter	Draw	Number
A		74 pcs
B		50 pcs
C		50 pcs
D		8 pcs
E		4 pcs
F		2 pcs
G		8 pcs
H		3 pcs
I		2 pcs
J		1 pc

Components:


Letter	Draw	Number
1		1 pc
2		2 pcs
3		1 pc
4		1 pc
5		1 pc
6		1 pc
7		1 pc
8		1 pc
9		1 pc
10		1 pc
11		1 pc
23		1 pc
24		1 pc
25		1 pc
26		1 pc
K		3 pcs
L		12 pcs
M		27 pcs
N		2 pcs
O		4 pcs
P		1 pc
Q		4 pcs
R		2 pcs
S		2 pcs
T		8 pcs
12		1 pc
13		1 pc
14		1 pc
15		1 pc
16		1 pc
17		1 pc
18		1 pc
19		1 pc
20		1 pc
21		2 pcs
22		1 pc
27		1 pc
28		1 pc
29		1 pc
30		1 pc

LOSSIC


www.lossic.co.uk

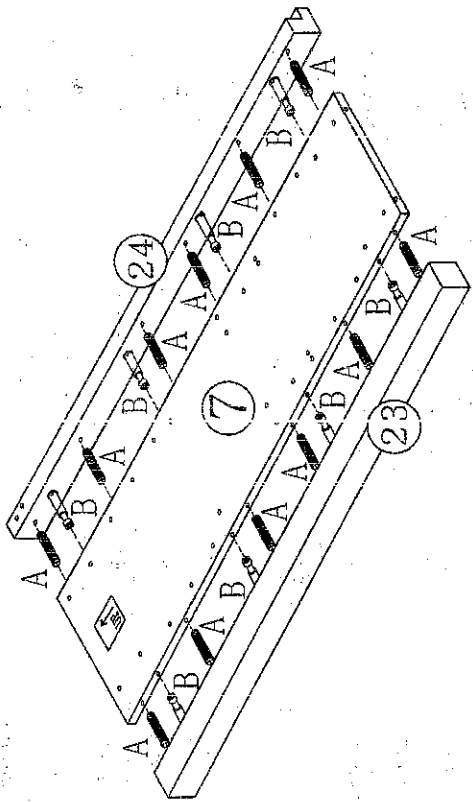


Step 1

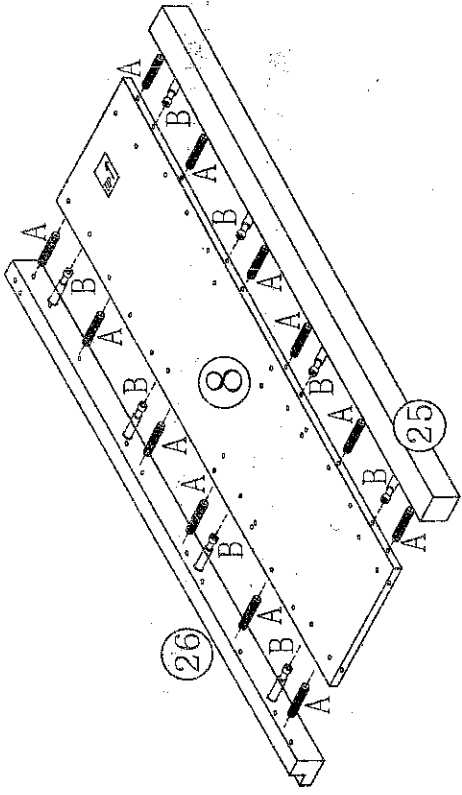


Step 2

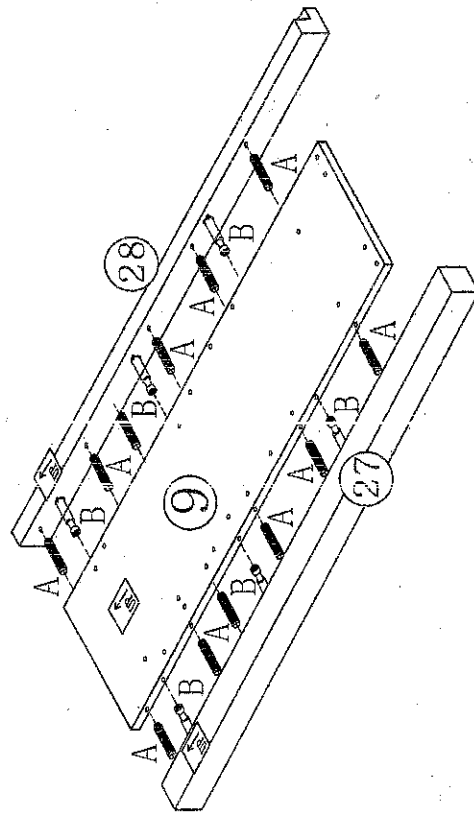


Step 3

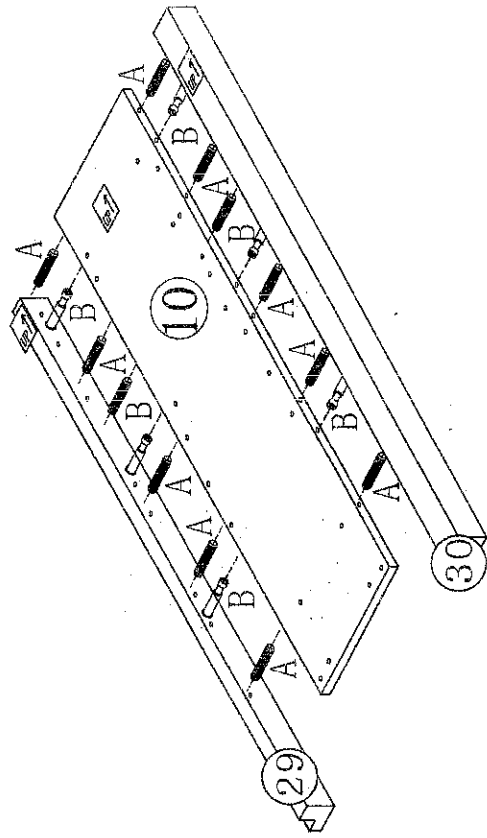


Step 4

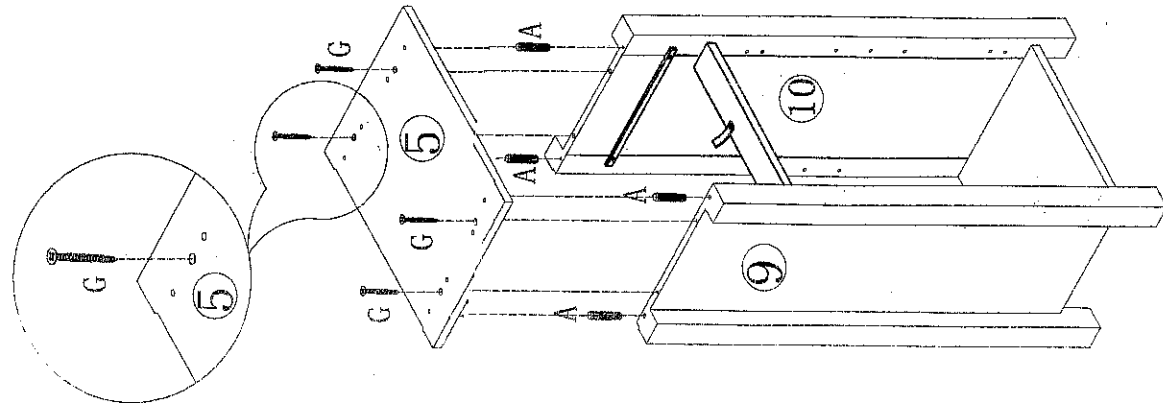


Step 11

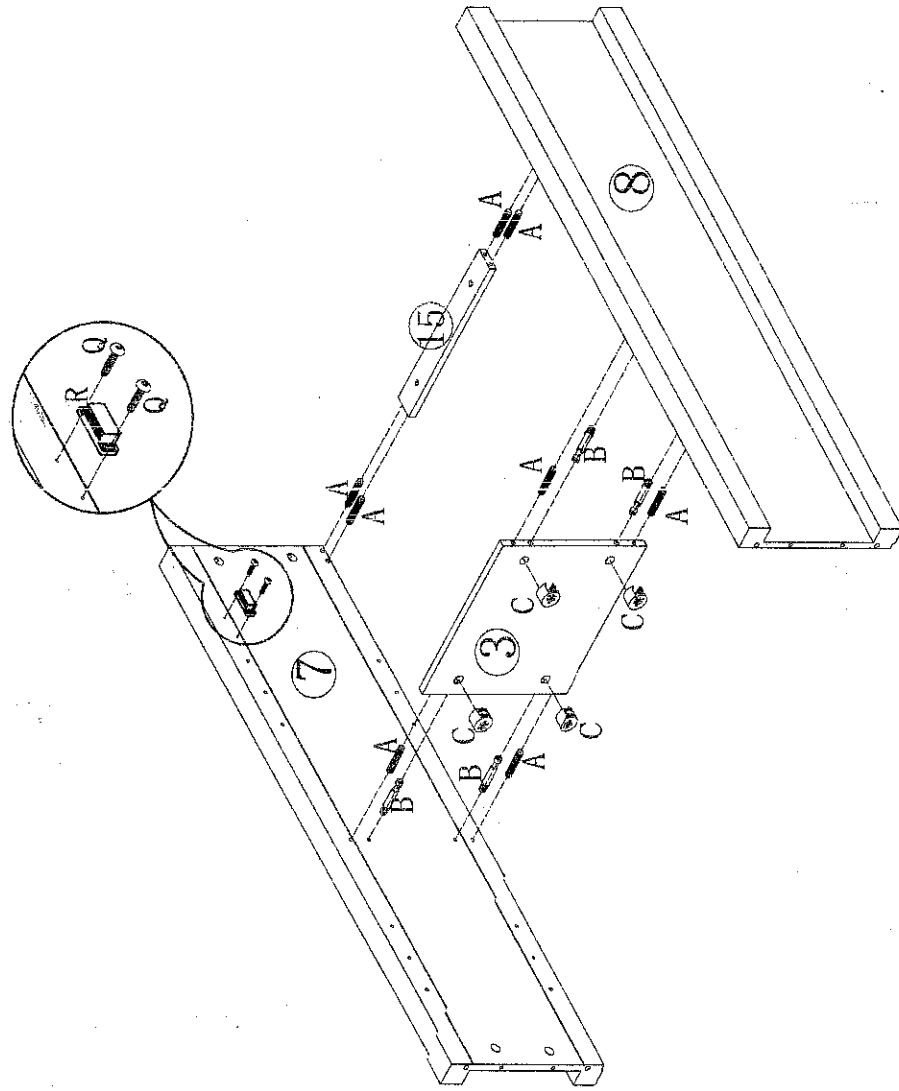


Step 12

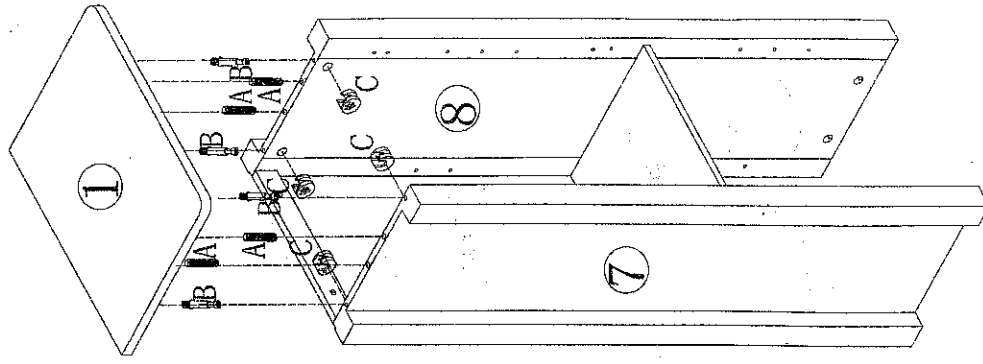


Step 13

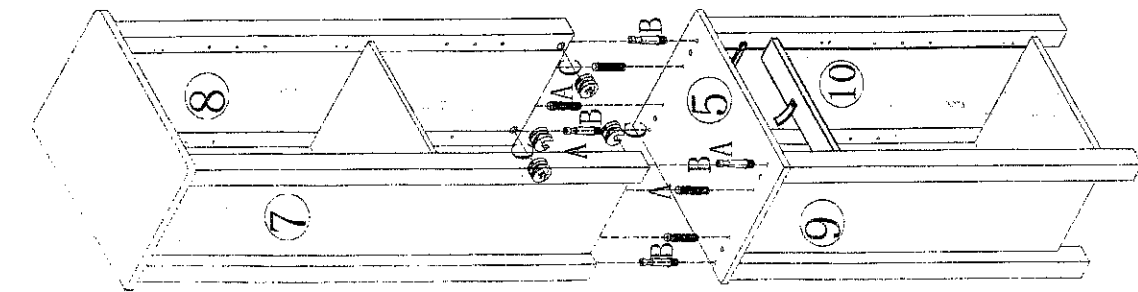


Step 14

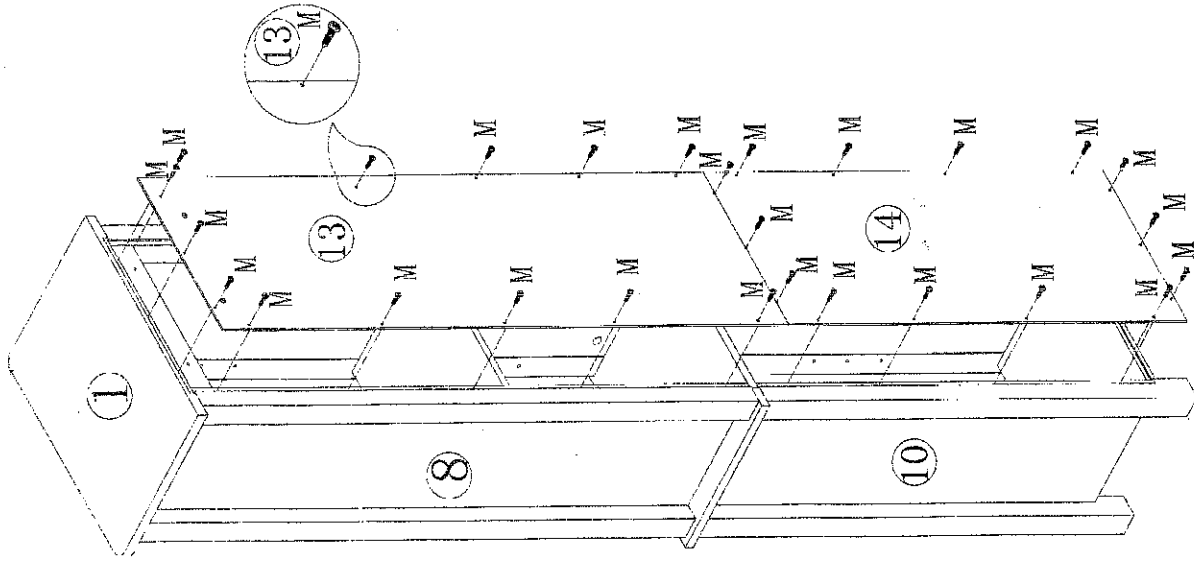


Step 15

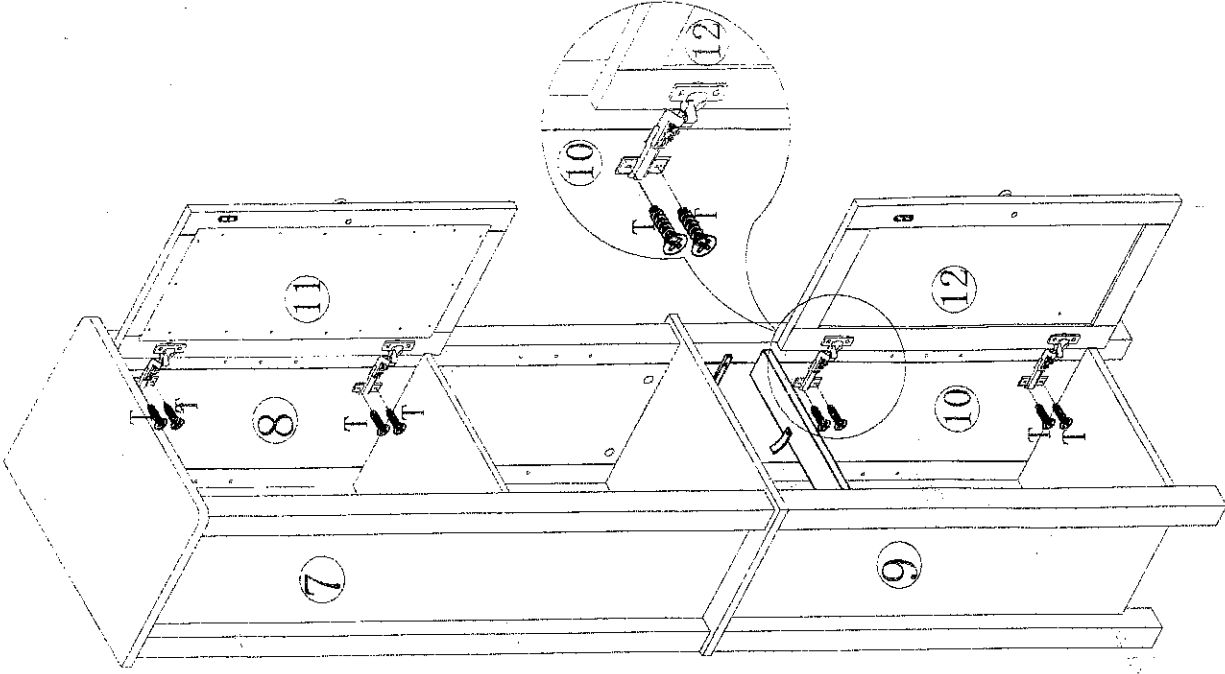


Step 16

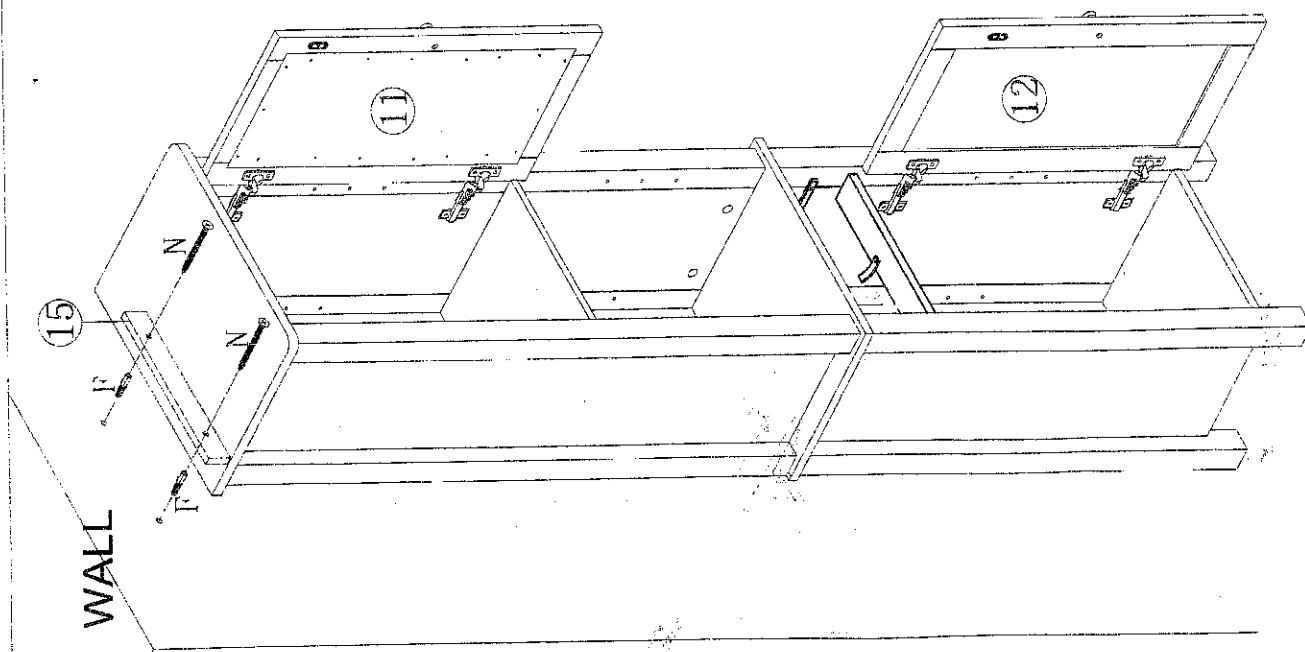

Step 17

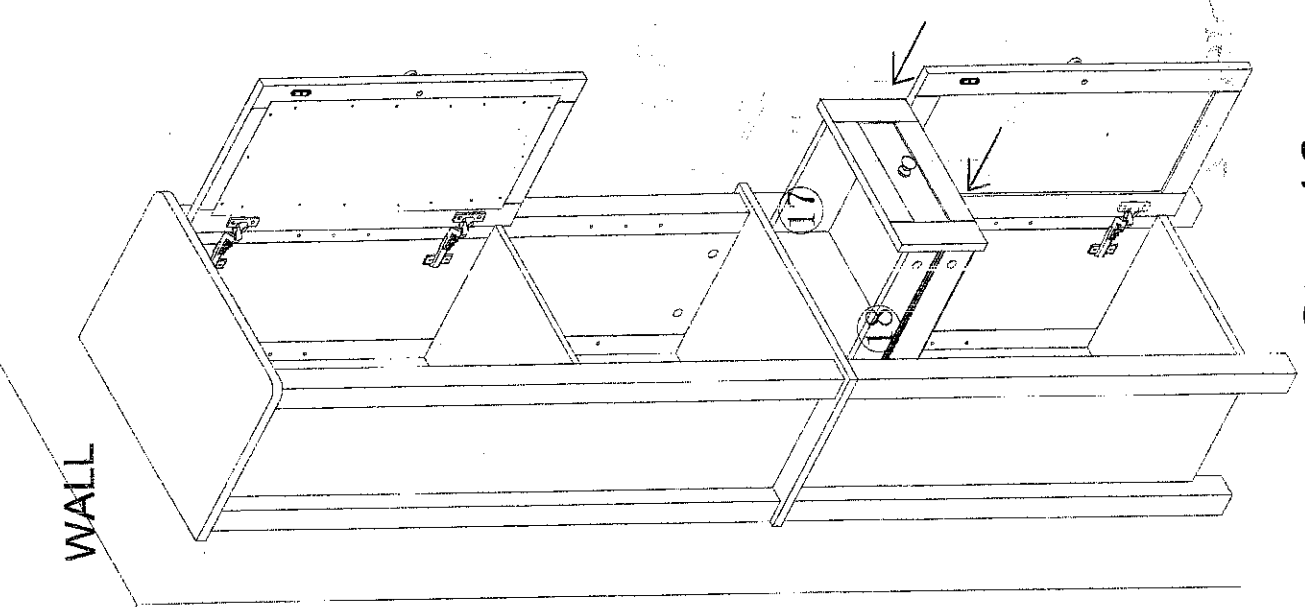

Step 18

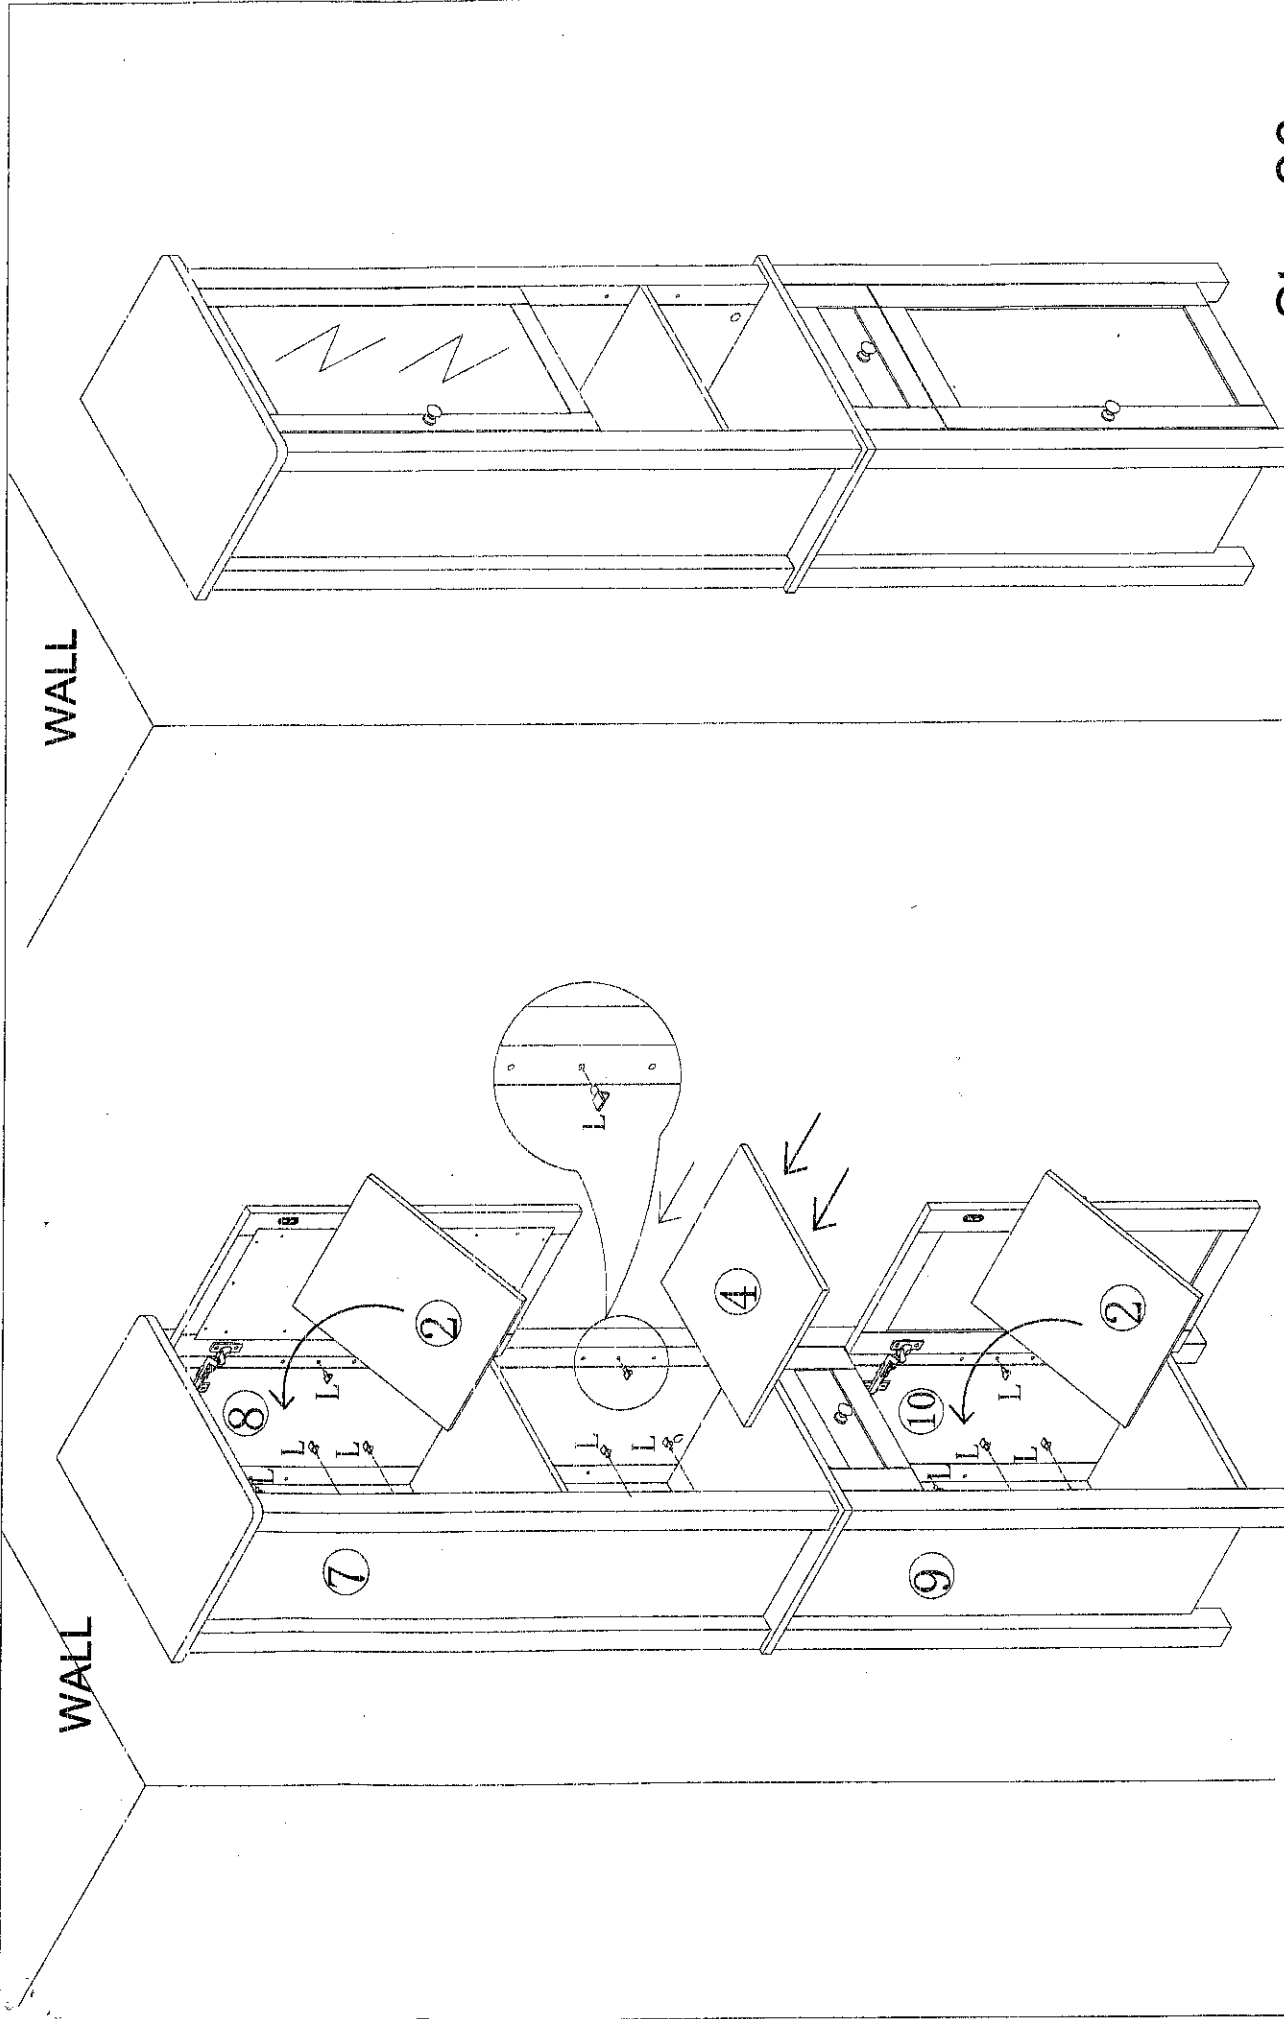

Step 20

Step 19