



UK Custom Covers[®]
Custom Designs For Ultimate Protection

Fitting Instructions – Audi A4 Avant 2015 Onwards (QBL258UKCC) 5th Generation

Thank you for purchasing your boot liner from our family-run business. Please follow the steps below to install your liner.

This is a 2 part liner.

PART 1 – THE MAIN LINER

1. Before you start you'll need to cut the supplied Velcro as follows for the main liner: 6 x 2" long pieces, and 2 x 30" long pieces.
2. Now lay the liner in approximate position in the boot of your vehicle. The panel with the UK Custom Covers label attached sits against the back of the rear seat, facing outward.

ATTACH THE BASE FIRST ...

3. Ensure that the base is positioned to match the shape of the boot floor. The Velcro sewn in to the base of the liner attaches directly to the carpet.

NOW FOR THE BACK OF THE SEATS ...

4. At the top of the seat area of the liner are 6 straps. Attach each strap around each headrest pole and secure back on to itself.

NOW THE SIDES ...

5. Attach the pieces you cut earlier to the Velcro that is sewn on to the liner sides (see sketch A). Carefully position the side panels neatly into place, peeling off each backer piece as you go.

PART 2 – OPTIONAL TAILGATE PROTECTOR

6. If you install this piece, before you start you'll need to cut the supplied Velcro as follows: 16 x 2" pieces. Attach the pieces of Velcro that you've cut directly to the sewn in Velcro points on the tailgate protector, and attach to the tailgate.

PLEASE NOTE: YOU MUST UNFASTEN THE VELCRO HEADREST STRAPS BEFORE PLACING THE REAR SEATS FORWARD


Velcro Fixing Kit – 72" for the main liner, 32" for the optional tailgate protector.
104 inch Velcro strip supplied, please cut to required lengths

IMPORTANT PREPARATION NOTES

Before attaching the self-adhesive Velcro to any car plastics/metal trim (NOT carpet); it is very important to remove any silicone film from the trim to ensure a good bond. Silicone is found in many valeting products and is also applied during manufacture. To remove any silicone build up the surface must be thoroughly cleaned using a silicone remover, we recommend 'Intensive tar remover' made by AutoGlym however a white spirit will also work just as well. Leave the area to dry for 10 minutes and wipe off any residue with a dry clean cloth after cleaning before applying the self-adhesive Velcro. ONCE THE VELCRO HAS COME INTO CONTACT WITH SILICONE RESIDUE IT CANNOT BE REUSED. THE VELCRO ADHESIVE TAKES 24HRS TO REACH FULL ADHESION.

SKETCH A

GREY INDICATES AREAS WHERE ADHESIVE-BACKED VELCRO
NEEDS TO BE APPLIED

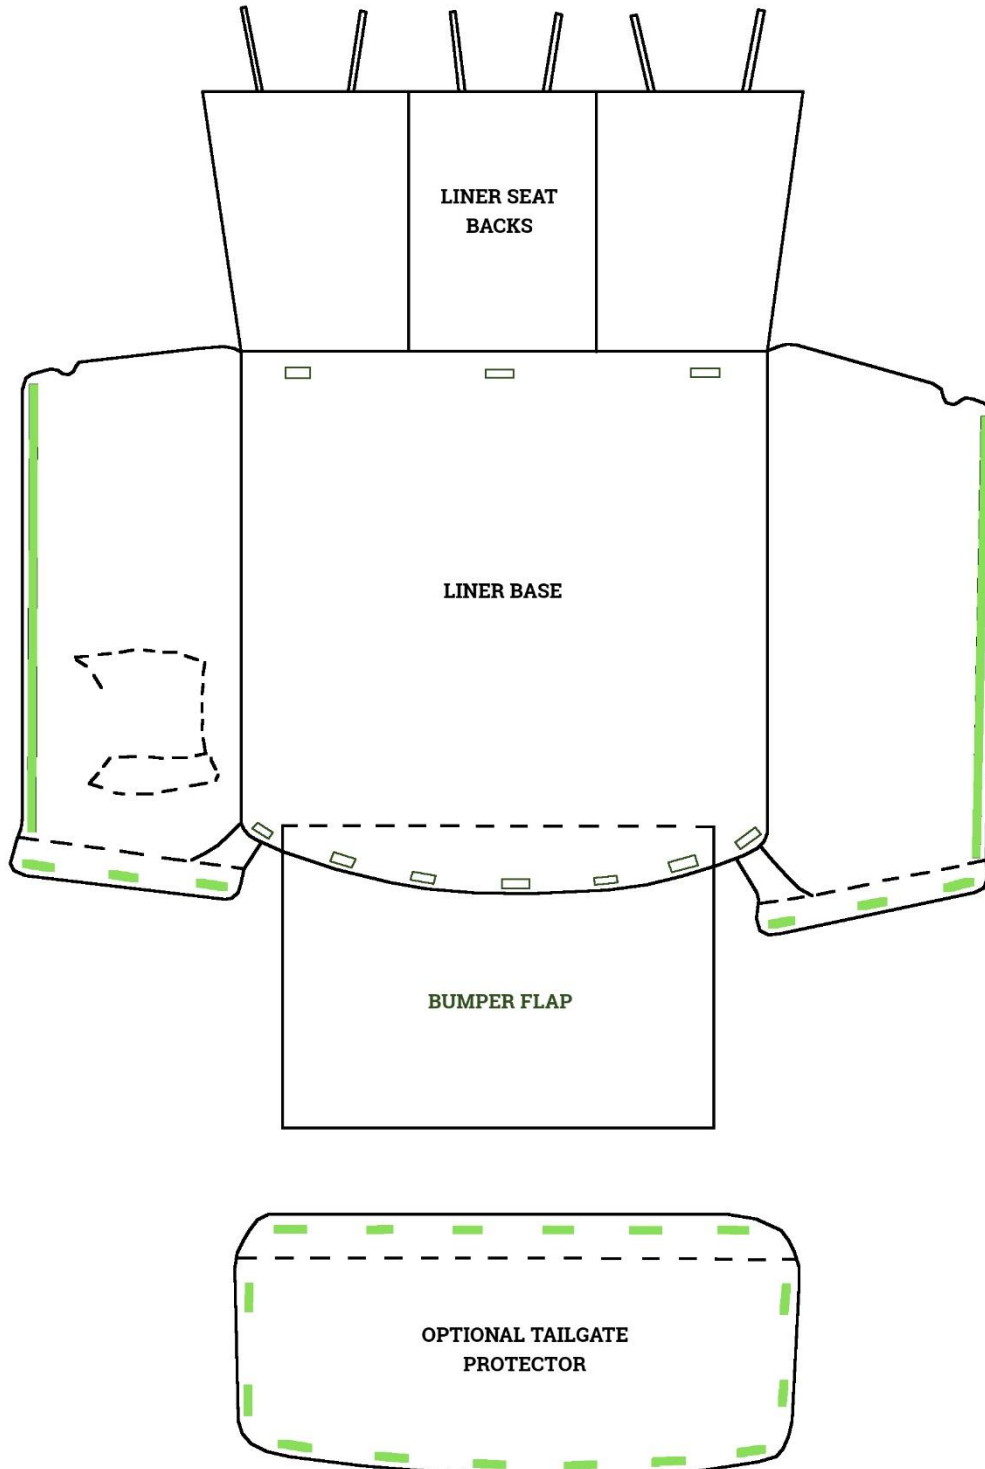

Velcro Fixing Kit – 72” for the main liner, 32” for the optional tailgate protector.
104 inch Velcro strip supplied, please cut to required lengths