


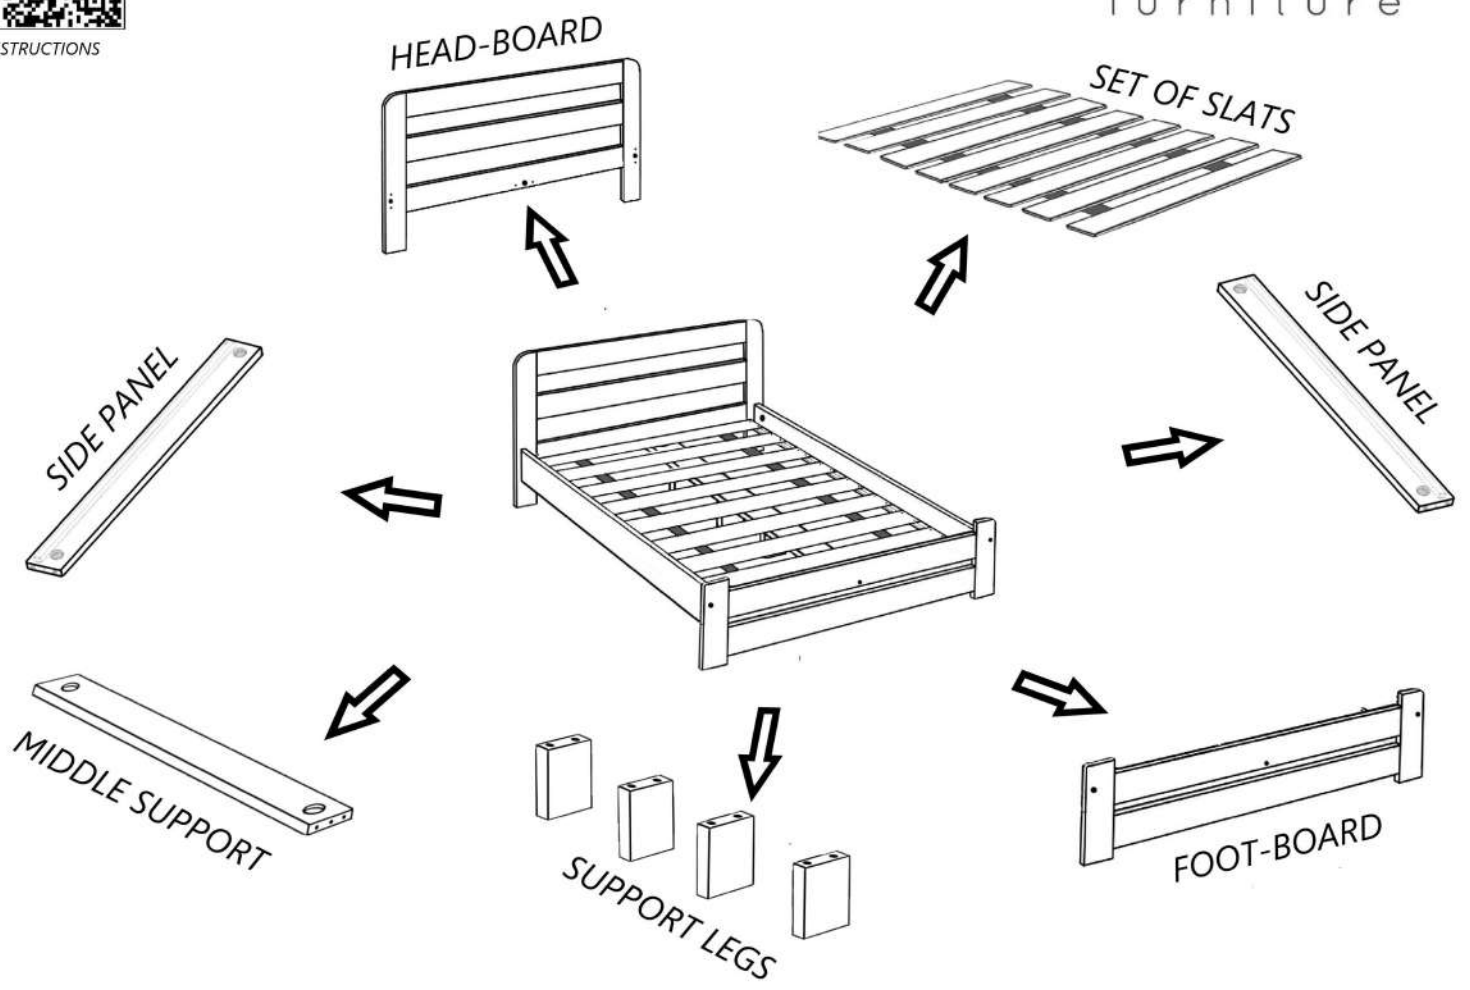

INSTRUCTIONS



No.1	No. 2	No. 3	No. 4	No. 5	No. 6	No.7
for side panels and central support	for side panels and central support	for side panels and central support	for slats	for support legs	Use for No.1 and No. 5 screws	Mounted to middle support
6 pcs.	6 pcs.	12 pcs.	8 pcs.	8 pcs.	1 pcs.	4 pcs.

**IMPORTANT WARRANTY POLICY RULES ,REQUIRED AND RECOMMENDED TOOLS**

**STEP 1**

Only single beds don't require support legs. so if you want to use Nodax under-bed drawer with a single bed mount middle support only. Otherwise the drawer wouldn't fit. This will not affect the warranty Bigger bed sizes (4ft-6ft) must be assembled with these legs.

**STEP 4**

To mount the slats to the side panels by wood screws No.4 you must use a manual or electric screw driver and they are NOT INCLUDED There is no need to screw in every single slat, but at least first slat (nearest the Head-board) and the last slat (nearest the Foot-board must be connected to the side panels by provided wood screws No.4 to ensure adequate stability

THIS PRODUCT COMES IN THREE BOXES, AND EACH BOX CONTAINS THE FOLLOWING PARTS

BOX No.1	Head -bord & Foot-board , 4x Support legs & Fittings ,
BOX No.2	2x Side Panels & Middle support plank
BOX No.3	Set of Slats & Wood Screws (6ft Beds come with two sets of slats 90cm in length )

REQUIRED & RECOMMENDED

**NOT INCLUDED**

SCREWDRIVER ELECTRIC SCREWDRIVER HAMMER



The warranty will not cover damages caused by failure to follow this manual assembly instruction , and returns will not be accepted for products incorrectly assembled.

**STEP 1 MOUNTING FOUR SUPPORTIVE LEGS TO THE MIDDLE PLANK** FOR STEP 1 YOU WILL NEED

Allen key

No. 3 No. 2 No. 5

Middle support

4 x support legs

8 x No. 5

2 x No. 2

4 x No. 3

**STEP 2 MOUNTING THE MIDDLE SUPPORT TO THE HEAD-BOARD & FOOT BOARD** FOR STEP 2 YOU WILL NEED

Head-board

Foot-board

2 x No. 1

Allen key

**STEP 3 MOUNTING THE SIDE PANELS TO THE HEAD-BOARD & FOOT BOARD** FOR STEP 3 YOU WILL NEED

Side panel

Side panel

4 x No. 1

4 x No. 2

8 x No. 3

Allen key

**STEP 4 MOUNTING THE SET OF SLATS TO THE SIDE PANELS** FOR STEP 4 YOU WILL NEED

NOT INCLUDED OR NOT INCLUDED

Set of slats

8 x No. 4