

INSTRUCTIONS

VIDEOS




Make sure your stairs are clean and free from any other finishes, furnishings, gripper rods or vinyl
If your stairs are painted you need to sand the treads and risers with rough sand paper as a key for the adhesive



SCAN ME

Cut your nosing tread to width and actual nosing to depth
Use a sharp knife or chapsaw
ALLOW FOR 1mm GAPS

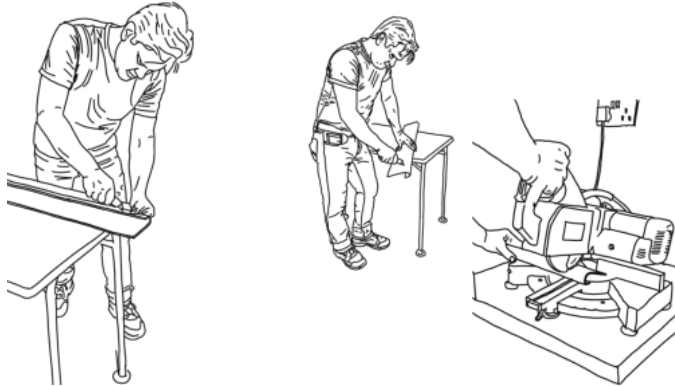


SCAN ME

Cut your secondary tread to width and length
ALLOW FOR 1mm GAPS




SCAN ME

Apply KwikFix adhesive to your stair tread
Make 4 straight lines and a wavy line in the centre also apply it to the inside of the nosing

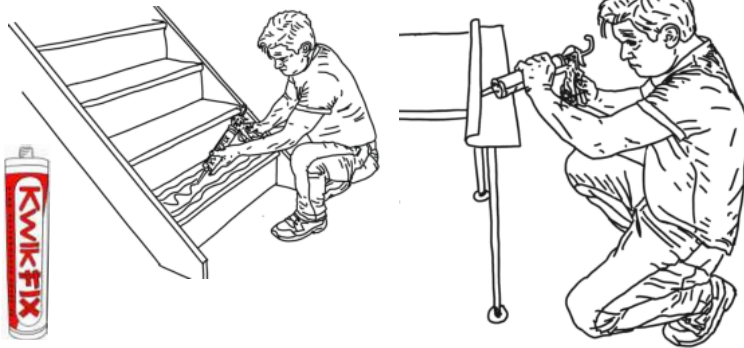


SCAN ME

Carefully click the nosing tread and the secondary tread together
Secure them to the tread by pressing firmly where you have just applied the adhesive
DO ALL TREADS FIRST

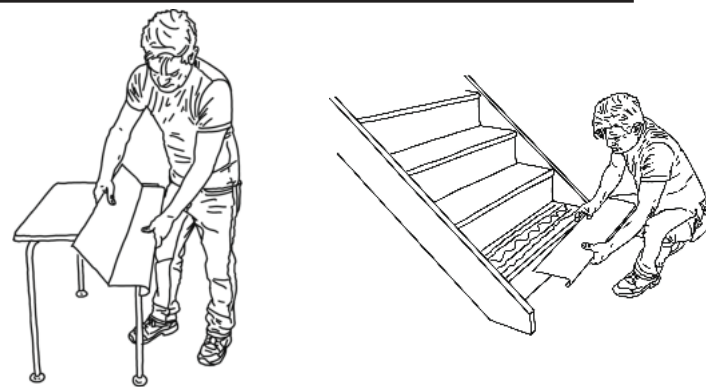


SCAN ME

If you have any winder treads or landings you will need the additional 1.2m² flooring pack(s)

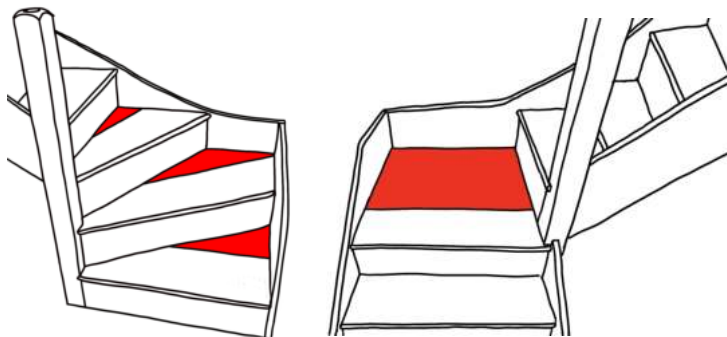


SCAN ME

Cut the riser piece to width and height
The riser fits inbetween the treads as detailed above
ALLOW FOR 1mm GAPS

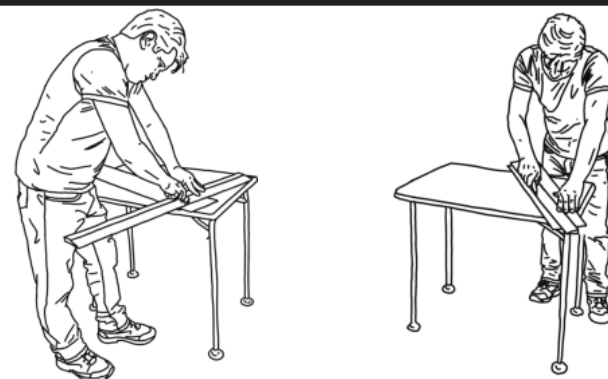

SCAN ME

Apply 3 wavy lines of KwikFix adhesive to your stairs then secure the riser in its place by pressing firmly all over

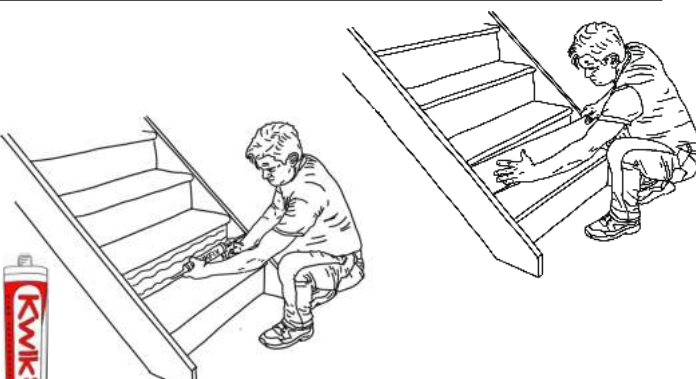

SCAN ME

If required you can apply a non slip tape to your KwikClad tread
(Purchase separately)