


# GALICIA PAIR OF WALL HANGING BEDSIDES ASSEMBLY INSTRUCTIONS

Thank you for purchasing this pair of Galicia Bedside Chests.

Please read the instructions carefully to ensure safe operation of this product, especially the installation warnings shown in Page 2 of this guide.

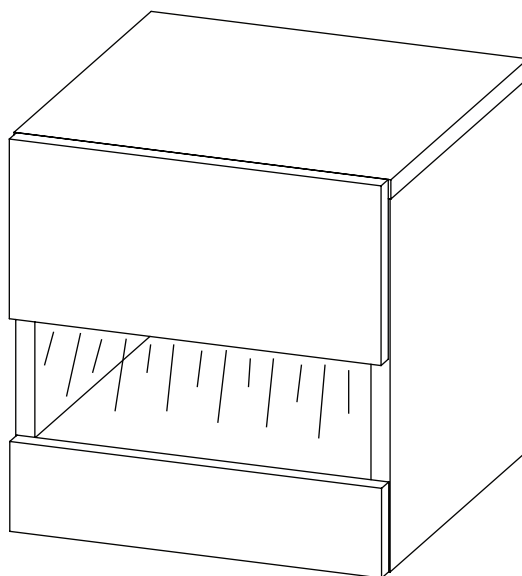

Size: 29.6 x 30 x 30.6cm (WDH)

Colour: White or Grey or Black

Finish: Melamine Cabinet with Gloss Fronts





---

**PLEASE READ** this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

**CAUTION:** There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking.

---

## Tools Required

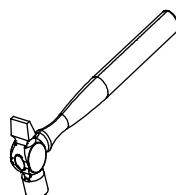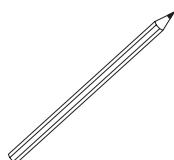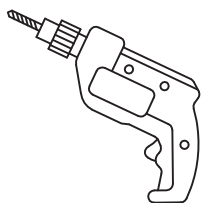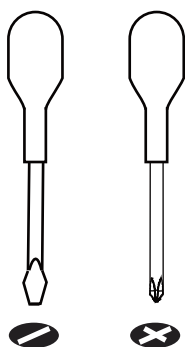

1 1/4 Hour  
Set Up

Version 3 - 220217

PO No: \_\_\_\_\_

## **IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

### **INFORMATION**

- This product is designed to hold 15 Kg in total, spread evenly over the whole unit.
- Do not exceed this weight.
- We recommend that this unit is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent them from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- Tools not included unless specified in parts list.

### **WARNINGS**

- DO NOT use power tools to construct this product.
- DO NOT tighten screws until parts are assembled or as advised in this guide.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- This Bedside is designed to hang from the wall, only use the support provided.
- In order to prevent the cabinet falling down this product must be installed with the wall hanging support provided - do not use any other means to hang the product.
- Carefully assess the suitability of the wall to ensure that the fastening devices will withstand the load and forces generated. Walls can be quite different in construction so fixings are not supplied - choose the most suitable fixing for your wall type - if in doubt consult an expert.
- When drilling the wall always be sure the area to be drilled is free from hidden electrical wiring, water or gas pipes.
- The assembly of this product must be done carefully following the detailed stages in this Assembly Instruction.
- Installation of this product needs to be carried out in accordance with the following instructions, see Steps 9 & 10.


### **CARE INFORMATION**

- To clean, wipe with a damp cloth.
- Never use scourers, abrasives or chemical cleaners.
- Do not use solvent based cleaners or detergents as they can bleach or damage the product.

## Parts and Fittings Checklist

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from children.

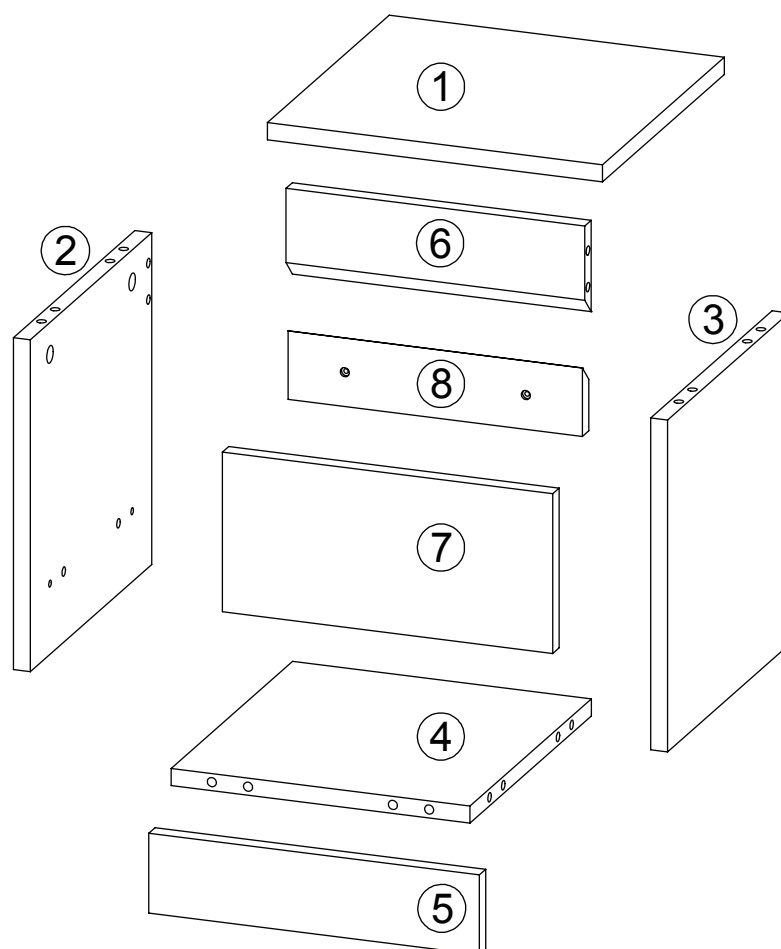


All parts for two bedsides - all are packed in one carton

1	2	3
Description: Top Panel Qty: 2 Size: 296 x 285 x 15 mm Carton No: 1/1	Description: LH Side Panel Qty: 2 Size: 291 x 284 x 15 mm Carton No: 1/1	Description: RH Side Panel Qty: 2 Size: 291 x 284 x 15 mm Carton No: 1/1
4	5	6
Description: Base Panel Qty: 2 Size: 264 x 284 x 15 mm Carton No: 1/1	Description: Fascia Rail Qty: 2 Size: 292 x 70 x 15 mm Carton No: 1/1	Description: Back Rail Qty: 2 Size: 264 x 80 x 15 mm Carton No: 1/1
7	8	
Description: Decor Flap Qty: 2 Size: 292 x 140 x 15 mm Carton No: 1/1	Description: Wall Hanging Rail Qty: 2 Size: 260 x 60 x 15 mm Carton No: 1/1	


Fittings (to scale)

Code	Item	Quantity
A	Cam Bolt (38mm overall)	20
B	Cam Lock	20
C	Dowel (8x30mm)	28
E	Screw for fitting hinge and back panel (4x12mm)	16





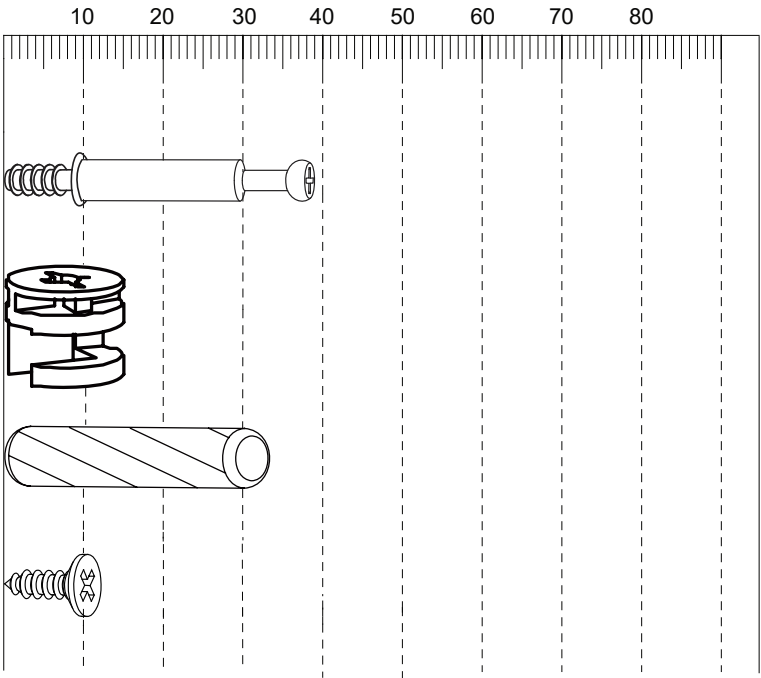


Fittings (not to scale)

Code	Item	Quantity
Q	Flap Hinge & Hinge Plate Set 26	4
X	Flap Buffer	4

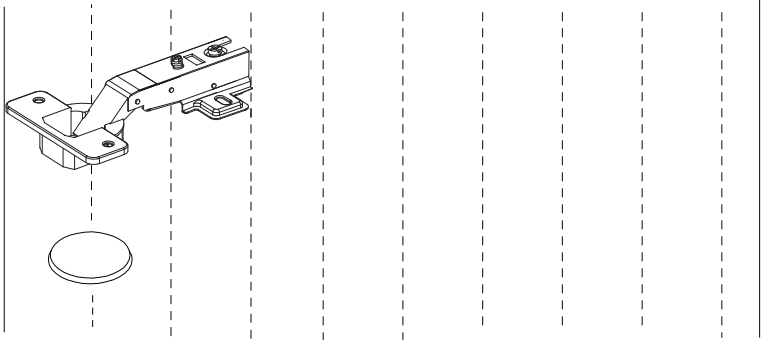


General Hints & Tips

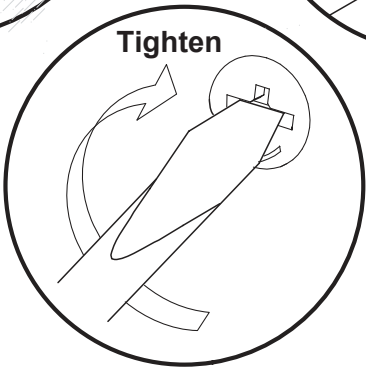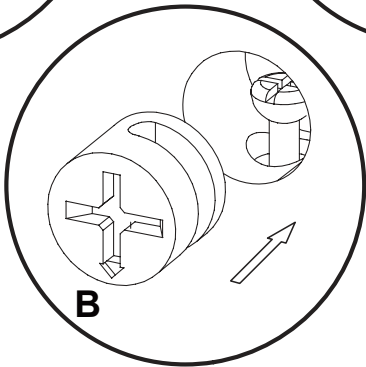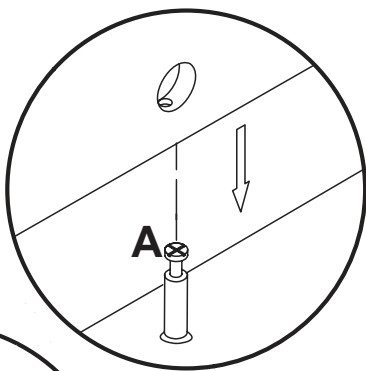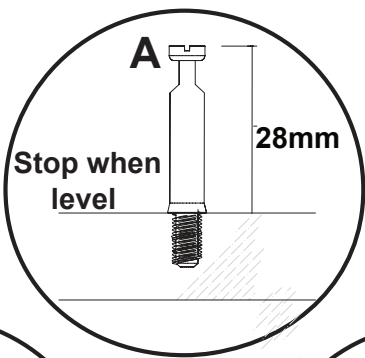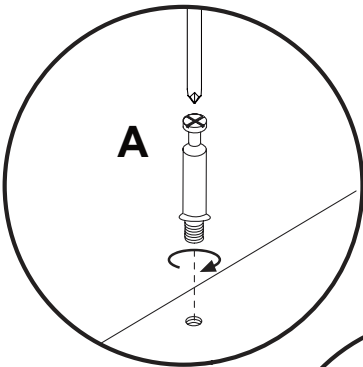

GALICIA PAIR OF WALL HANGING BEDSIDES ASSEMBLY INSTRUCTIONS.


Fittings packed in each LED pack. Note; there are two packs per set.

Code	Item	Quantity
G	Screw for LED & Cable Clips	3
H	Battery Box and Blue LED Strip (25 cm)	1
J	LED Clip	1
K	Cable Clip	1
T	Sticky Pad	1

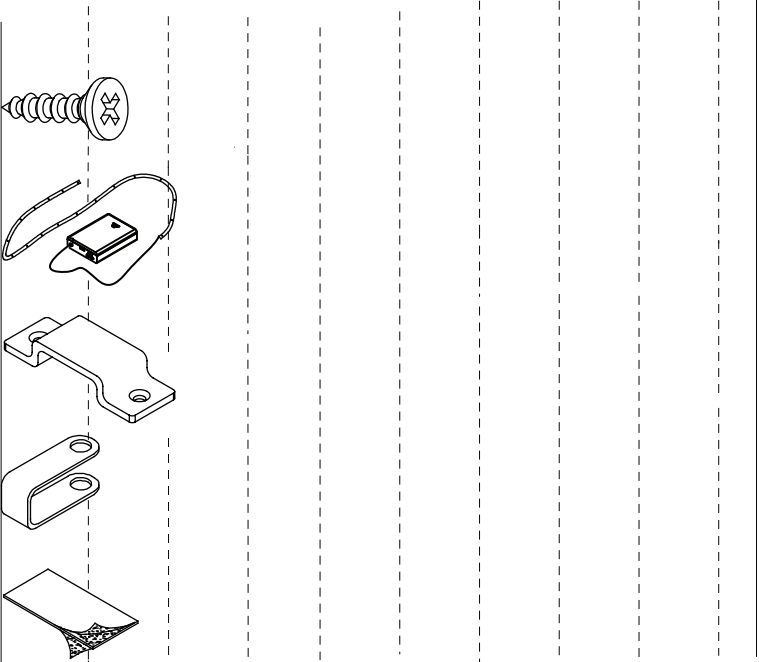

STEP 1


x2

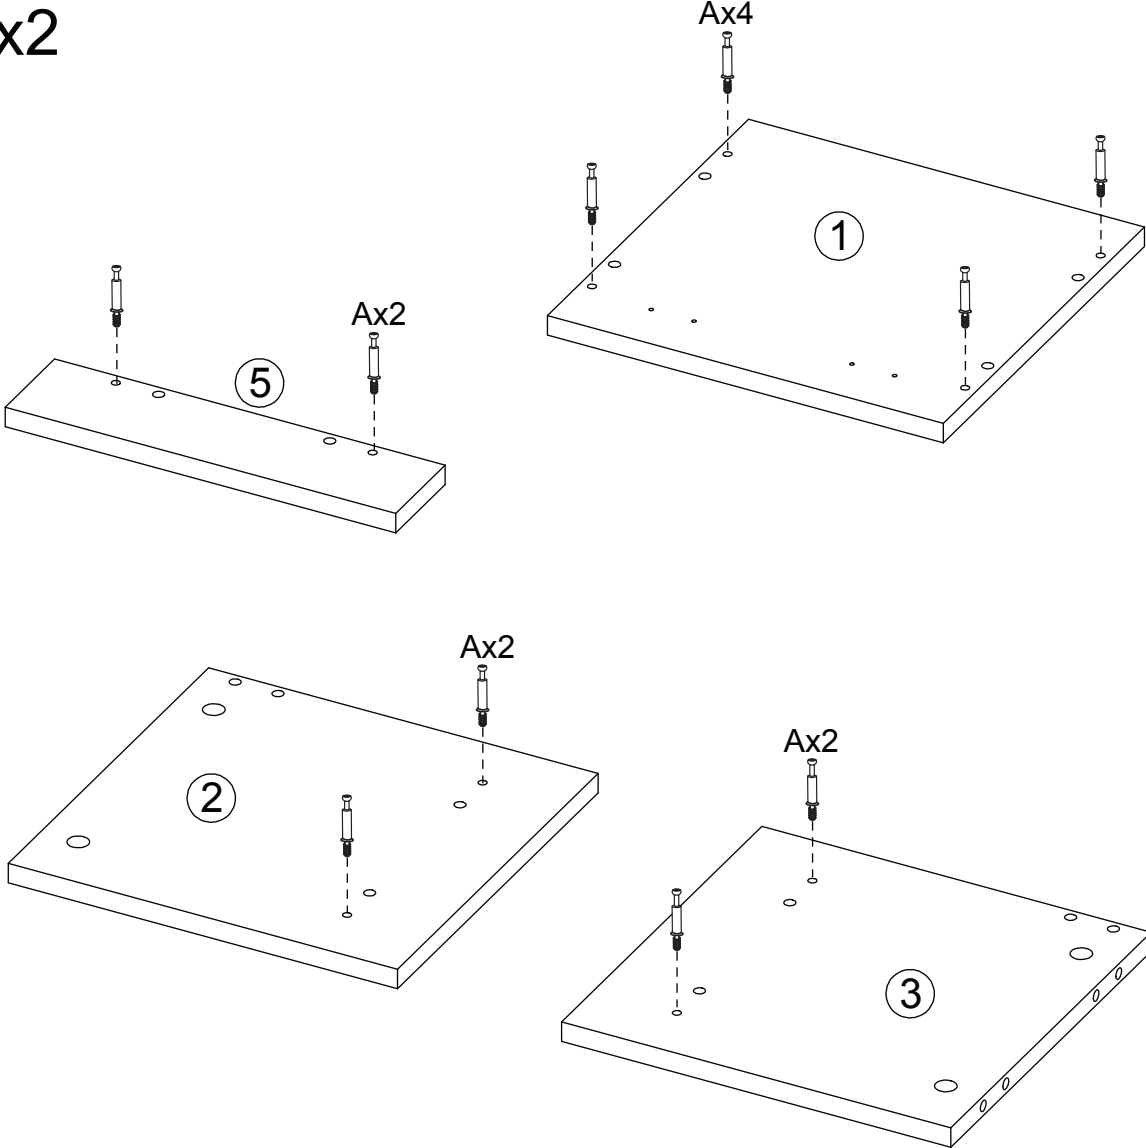









For this step:  
*Tools required*

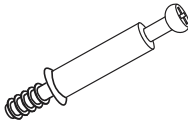

*Fittings required*

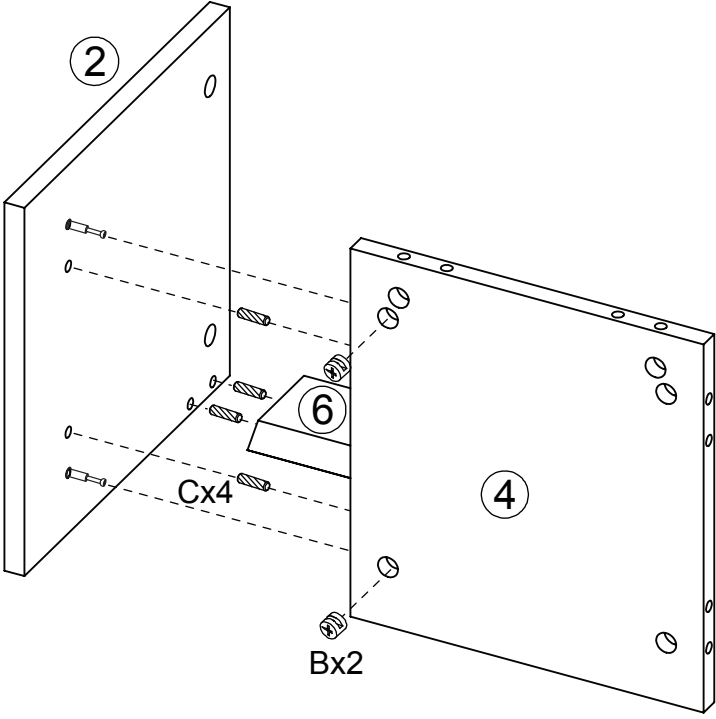


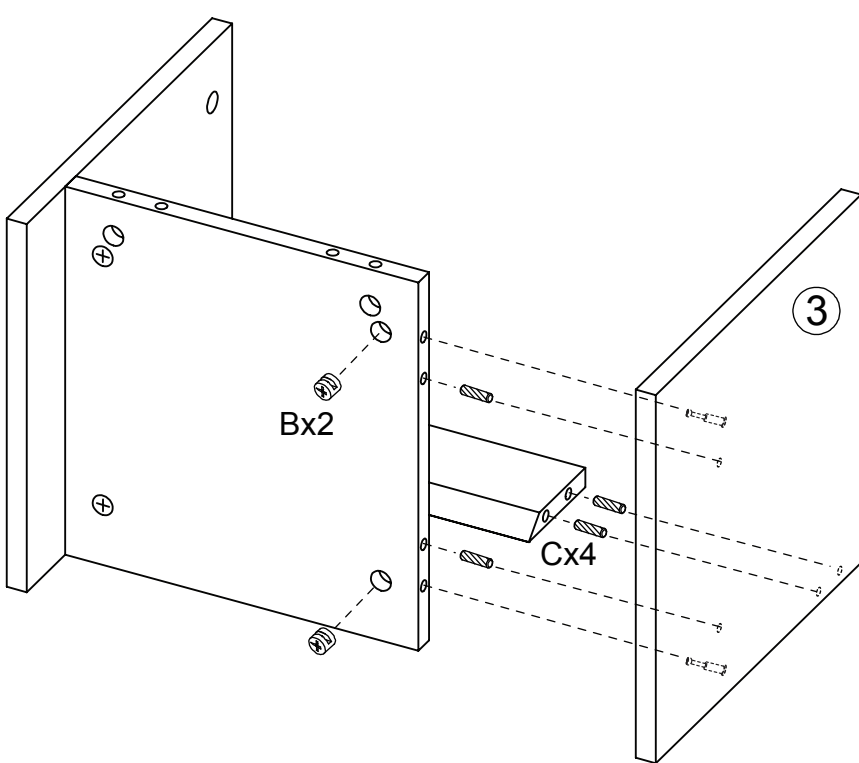
A x20

STEP 2		
<div>x2</div> <div></div>		<div>For this step:</div> <div><b>Tools required</b></div> <div></div> <div><b>Fittings required</b></div> <div> B x4</div> <div> C x8</div>
STEP 3		
<div>x2</div> <div></div>		<div>For this step:</div> <div><b>Tools required</b></div> <div></div> <div><b>Fittings required</b></div> <div> B x4</div> <div> C x8</div>

STEP 4		
<div>x2</div> <div></div>		<div>For this step:</div> <div>Tools required</div> <div></div> <div>Fittings required</div> <div></div> <div>B x4</div> <div></div> <div>C x4</div>
STEP 5		
<div>x2</div> <div></div>		<div>For this step:</div> <div>Tools required</div> <div></div> <div>Fittings required</div> <div></div> <div>B x8</div> <div></div> <div>C x8</div>


## STEP 6

x2

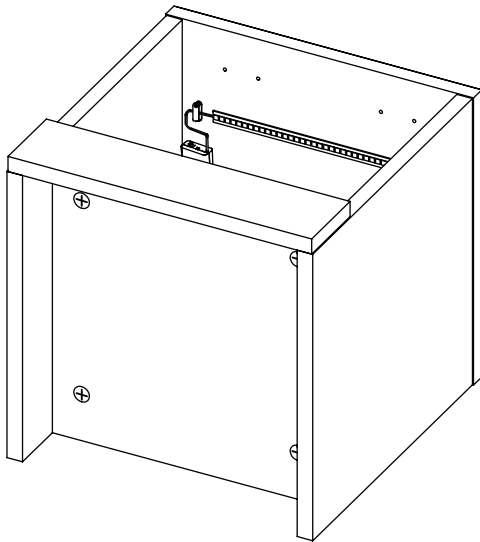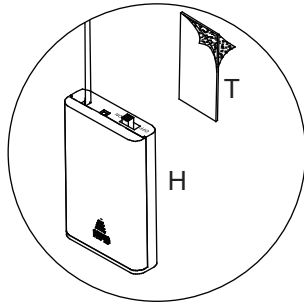




i.

Peel off cover from sticker (T) and adhere to back of battery box then adhere to side panel.

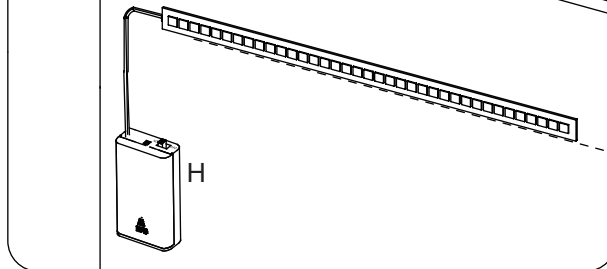


ii.

Position wires and fit LED Clip (J) and Cable Clip (K) using screws (G).

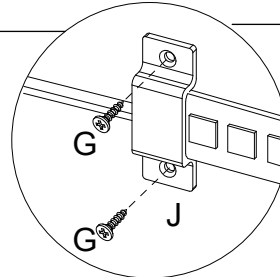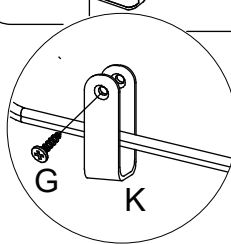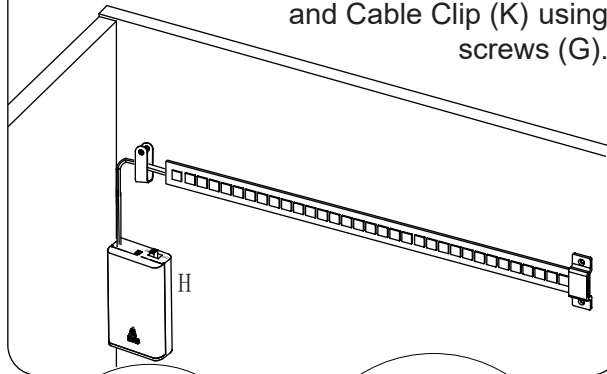


For this step:


**Tools required**




**Fittings required**




H x2




G x6

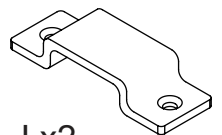

J x2

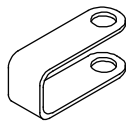



K x2




T x2

## STEP 7

x2

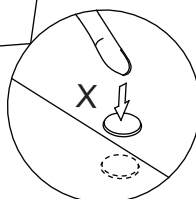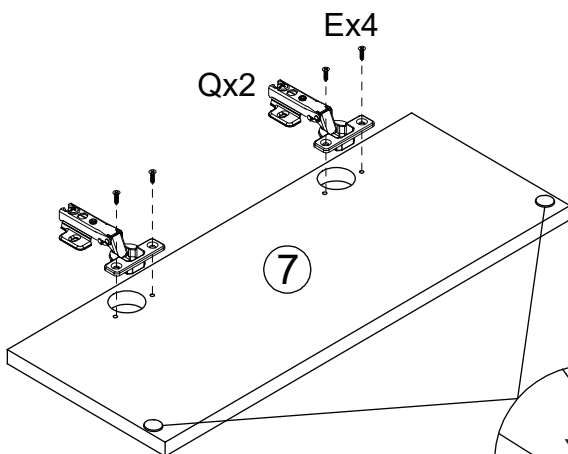

x2

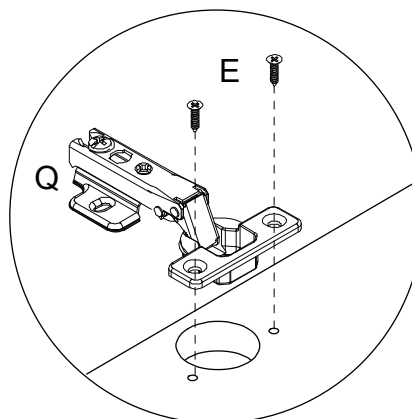


For this step:


**Tools required**



**Fittings required**



E x8






Q x4

X x4



## STEP 8


x2

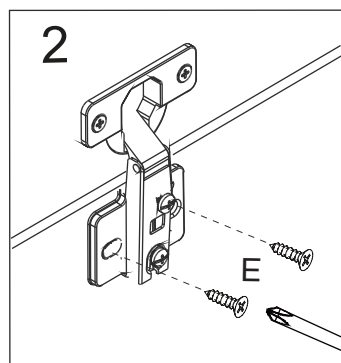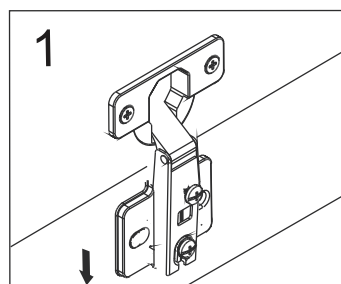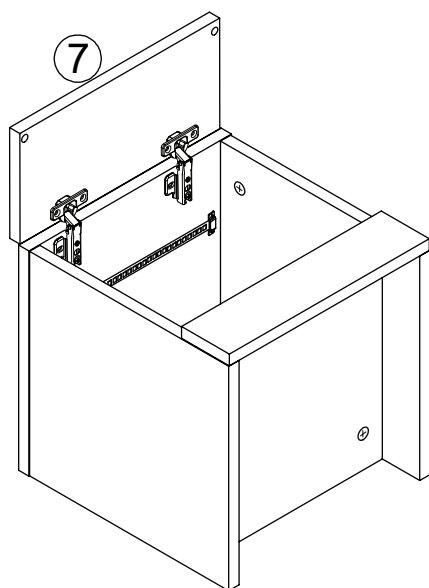











For this step:  
**Tools required**



**Fittings required**



E x8

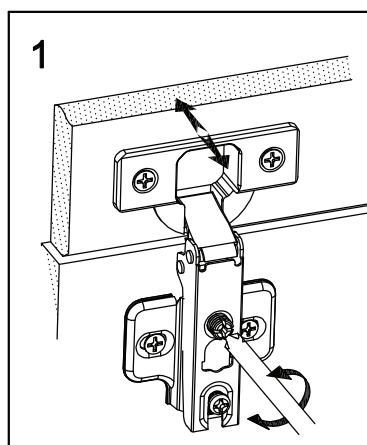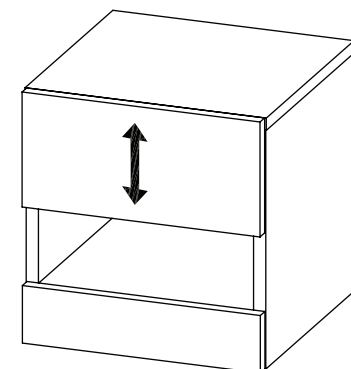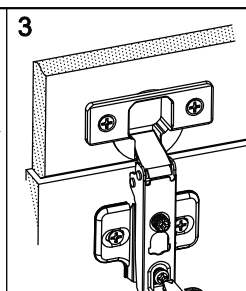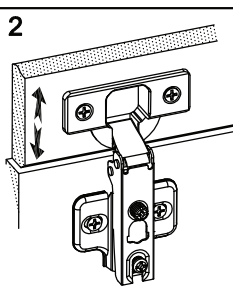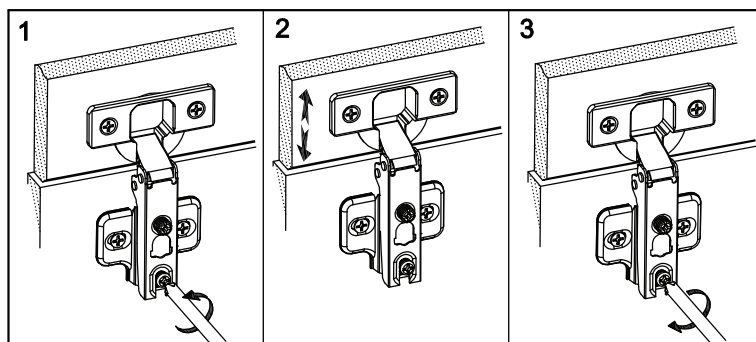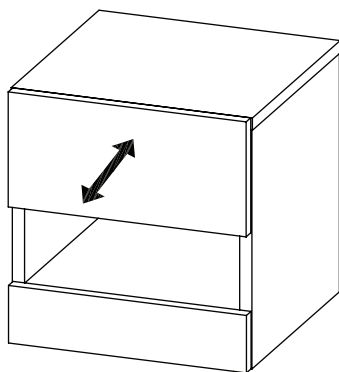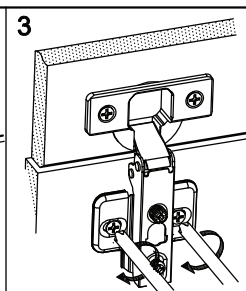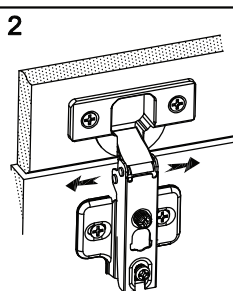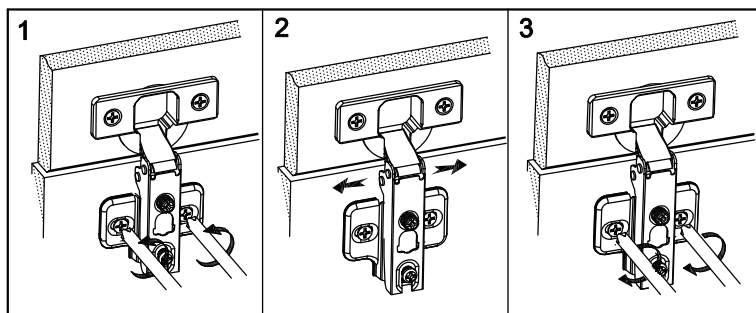
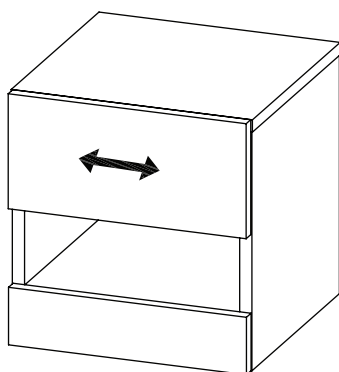


Once flaps have been adjusted, tighten screws (E) to secure hinge mounting plates in their final position.

## STEP 9




x2

Parallel to  
the ground

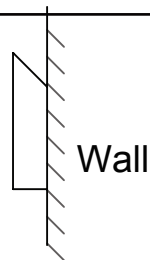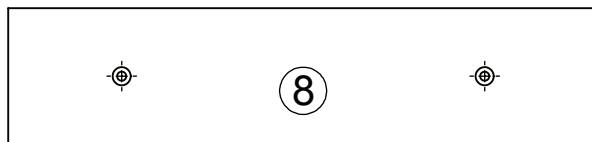


For this step:

**Tools required**

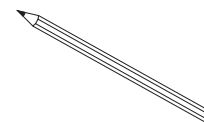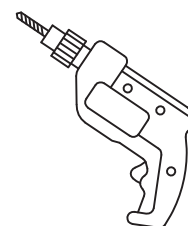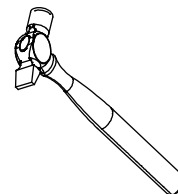


## RECOMMENDATION FOR A NORMAL BLOCK WALL

Item	Quantity
Screw (Ø4x45mm)	4
Wall Plug (Ø6x30mm)	4

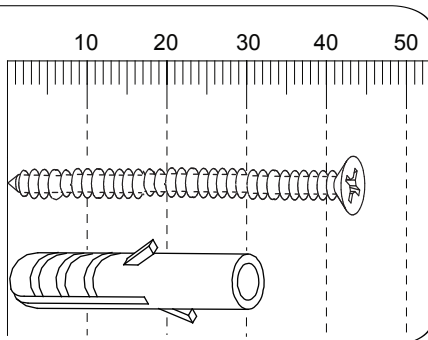


Warning: Always ensure the area to be drilled is free from hidden electrical wires, water or gas pipes.


1.

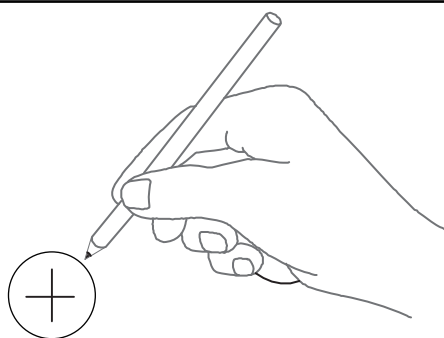

11.

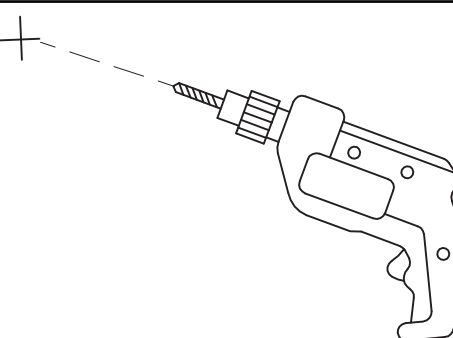


III.

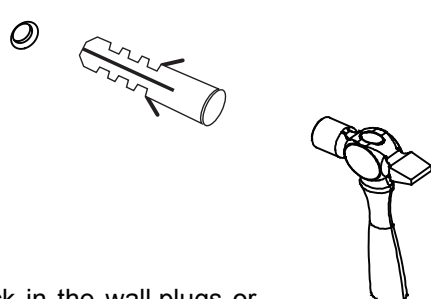

Knock in the wall plugs or other suitable wall fixings.

IV.


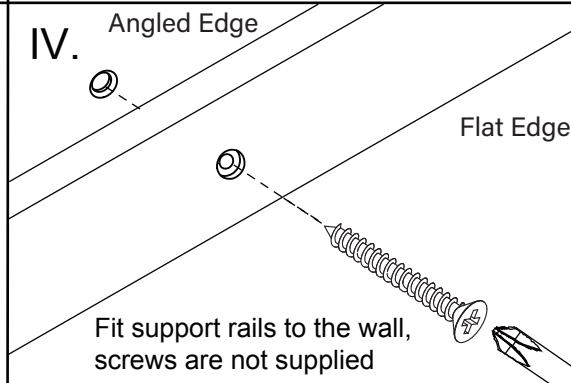


Fit support rails to the wall,  
screws are not supplied

**Fittings required**

## STEP 10

x2

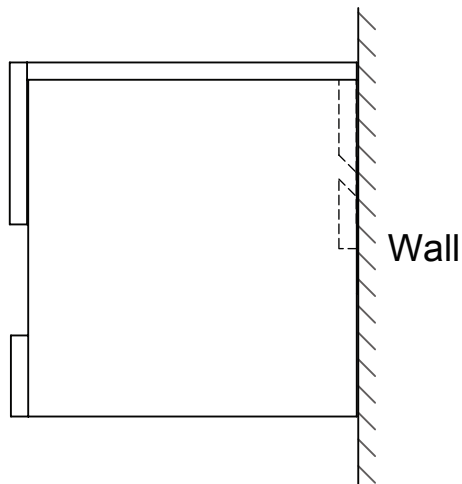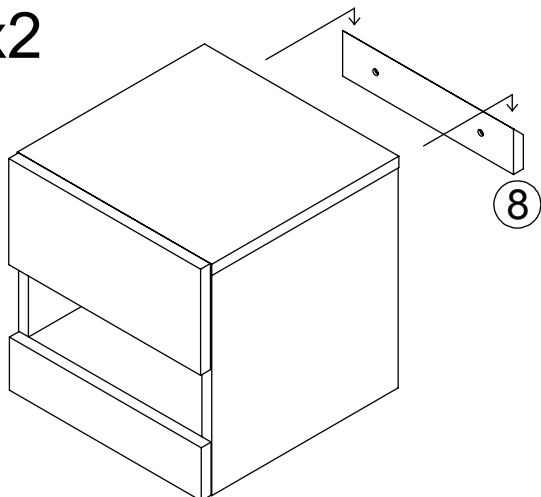


For this step:

**Tools required**


### ***Fittings required***

## CHANGING THE BATTERIES


SLIDE OFF THE LID

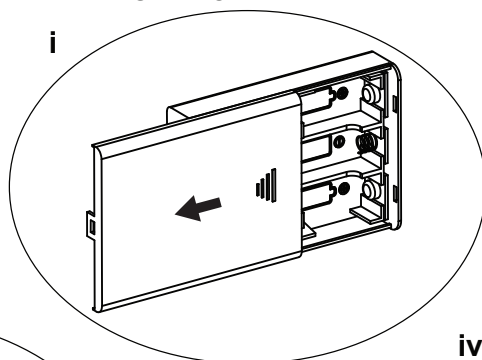


CHANGE BATTERIES

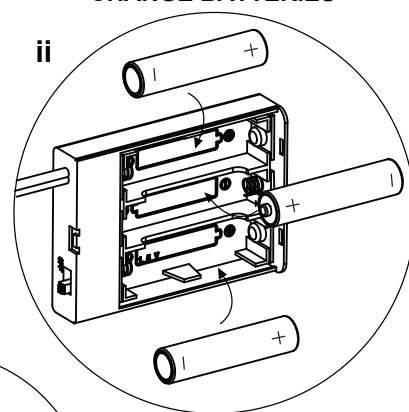

SLIDE LID BACK ON

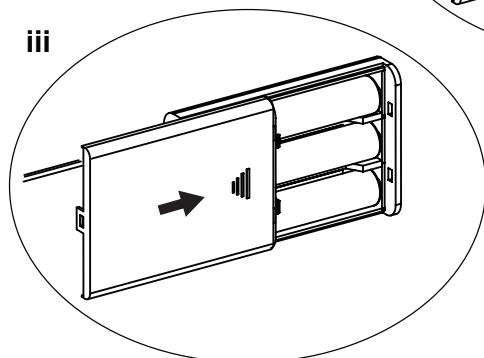


iv

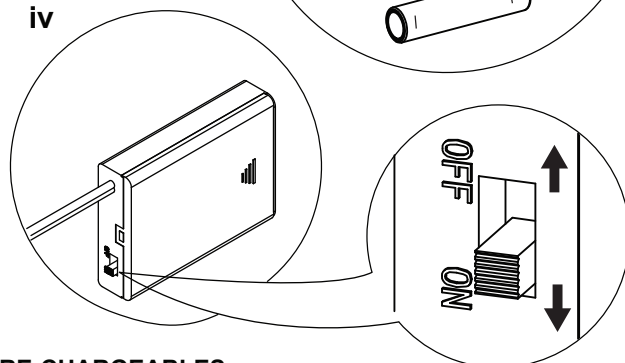

USE GOOD QUALITY AA BATTERIES. FOR BEST RESULTS USE RE-CHARGEABLES.

## Assembly Completed

Your Galicia Bedside Chests are now completely assembled.  
Periodically check to ensure that the components are in their proper position, free from damage.  
Also, make sure the connectors are tight and secure.

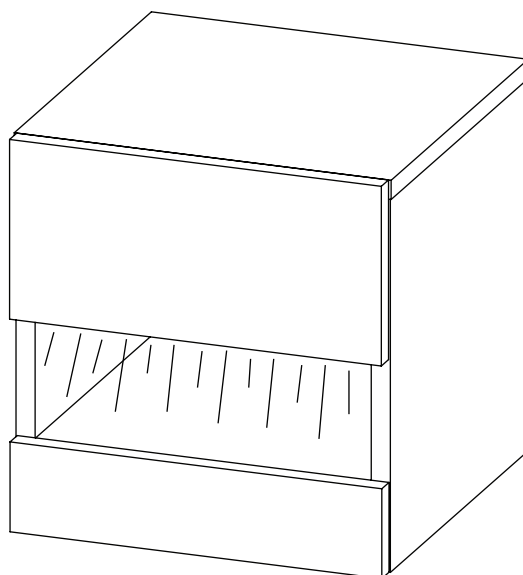

Keep instructions for future reference

