
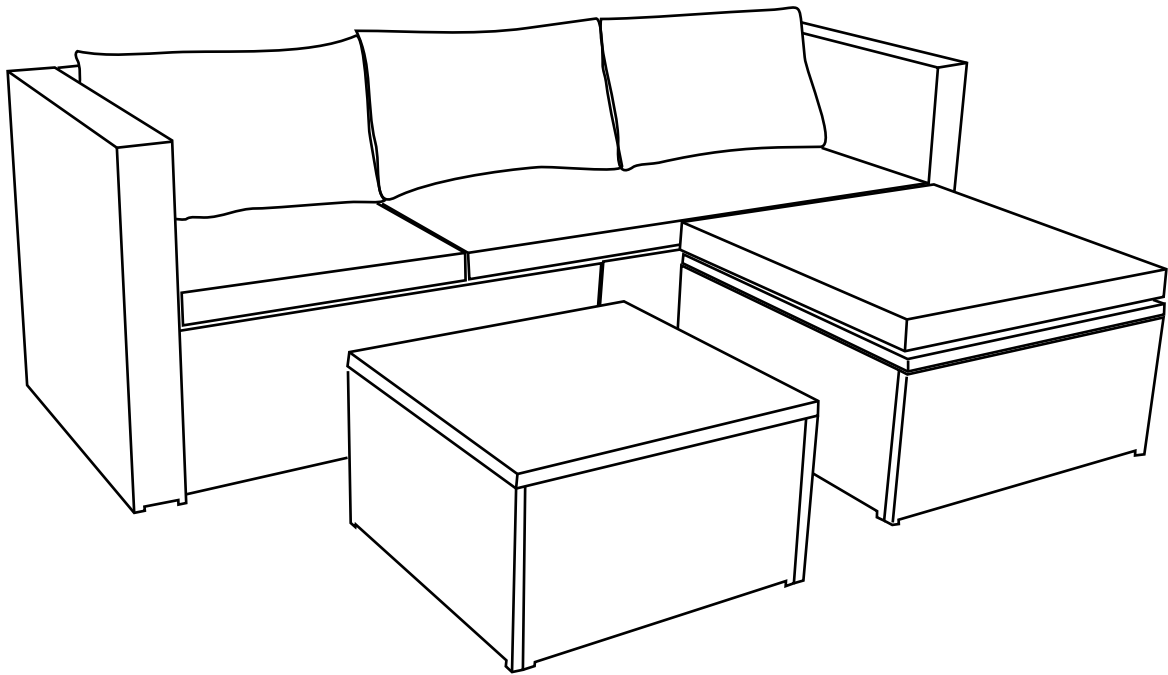




Victoria 4 Piece Corner Assembly Instructions




**Please read and retain for future reference,
Do not discard any of the packaging until you have checked that you have all the
parts and the pack of fittings.**


PART LIST

					
A1x1	B1x1	C1x1	A2x1	B2x1	C2x1
					
M6 x 35mm	M6 x 40mm				
Fx8	Gx8	Hx16	Jx1		


Step1

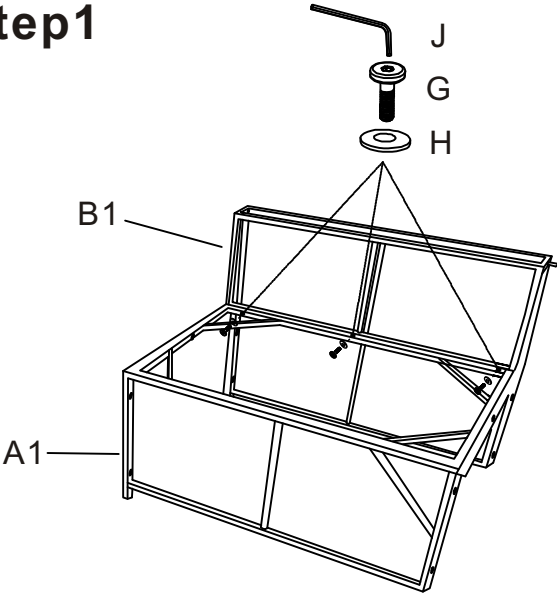


Step2

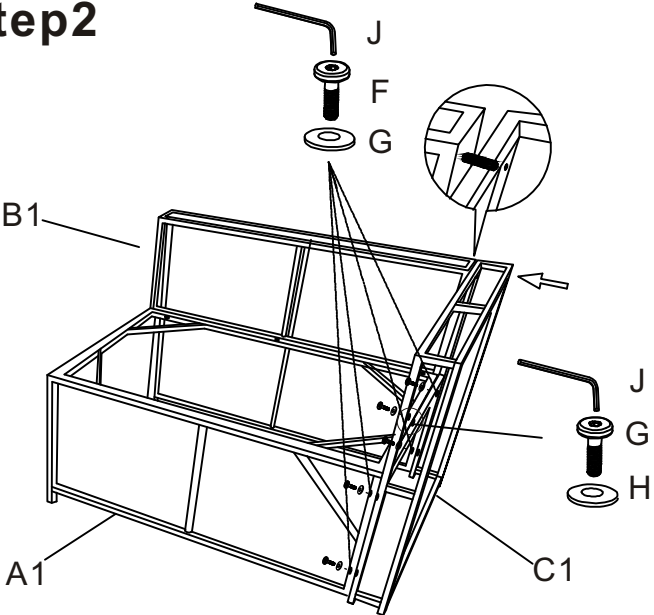


Step3

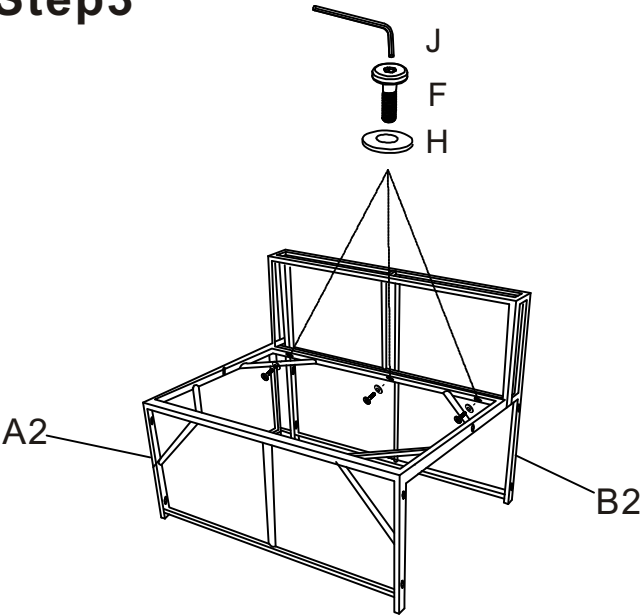


Step4

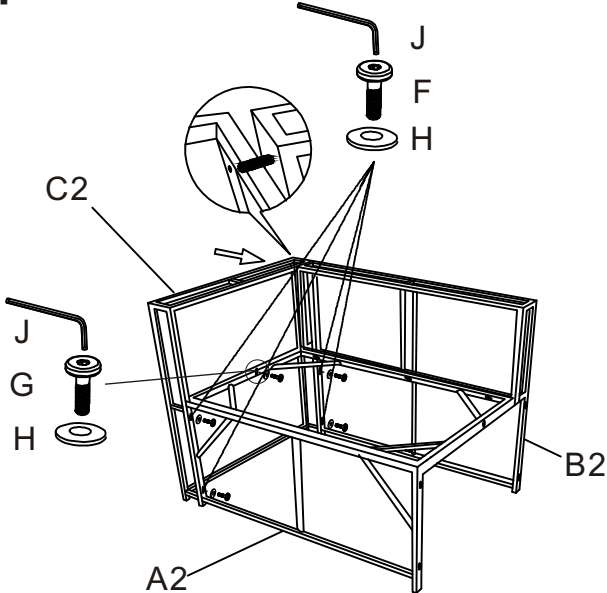


PART LIST

				 M6 x 40mm	 M6 x 15mm
D1X3	E1X3	Hx7	Ix1	Gx3	Kx4


Step1

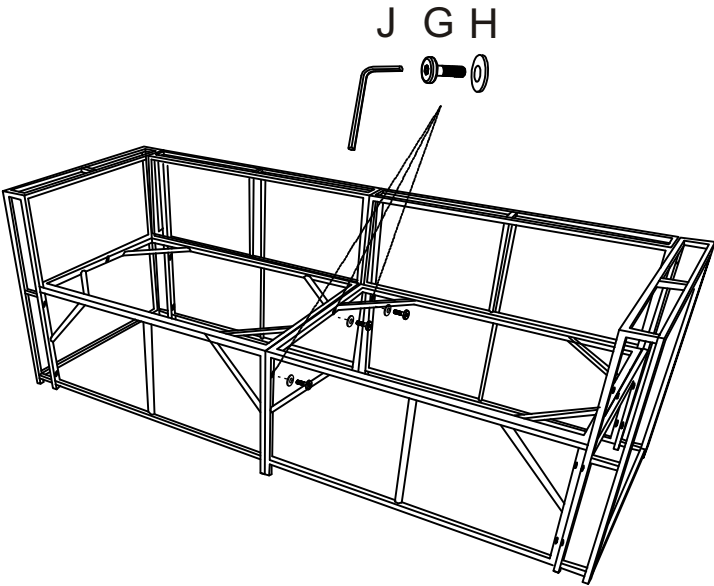



Step2

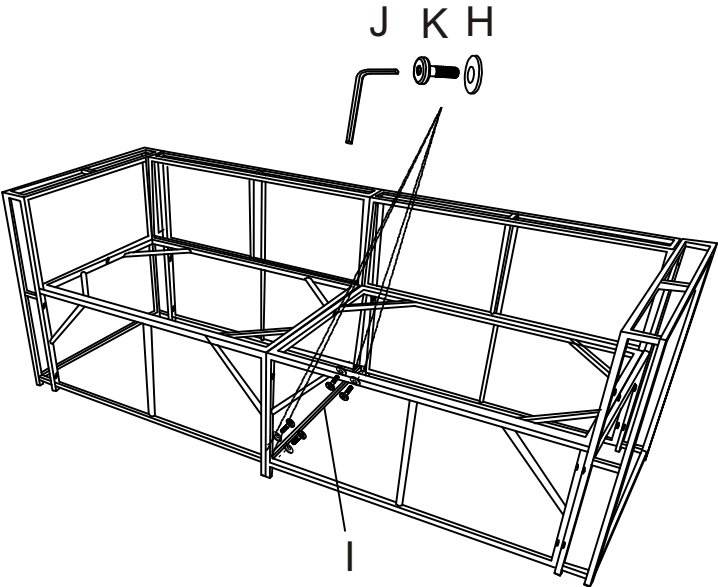


Step3

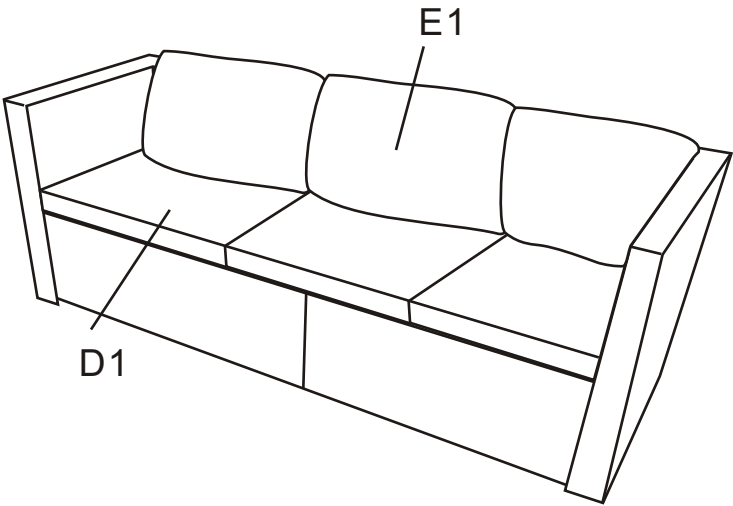


PART LIST

				 M6 x 35mm	
A3x1	B3x2	C3x2	D2x1	Fx14	Hx14


Step1

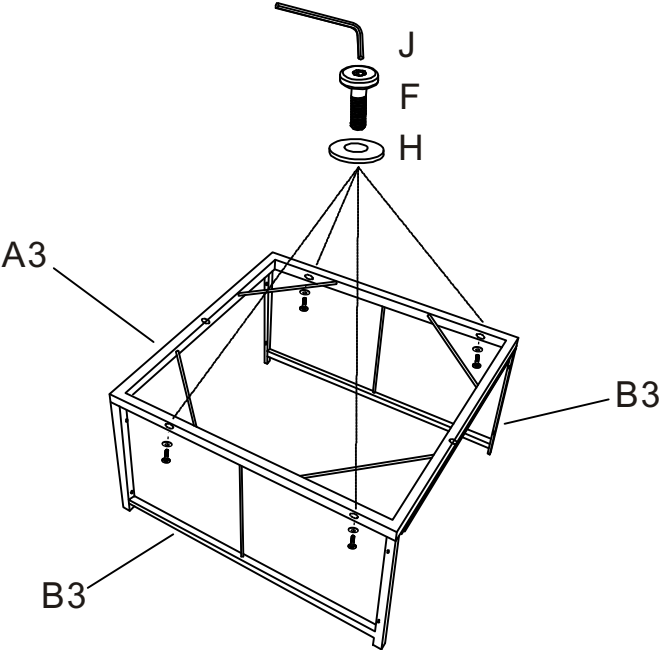


Step2

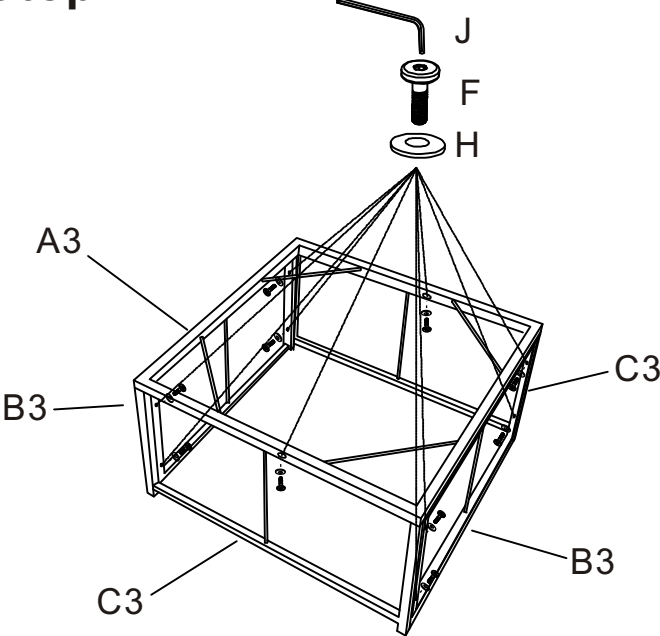


Step3

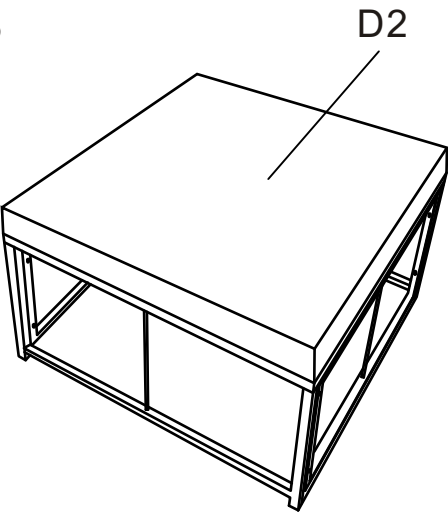

Step4

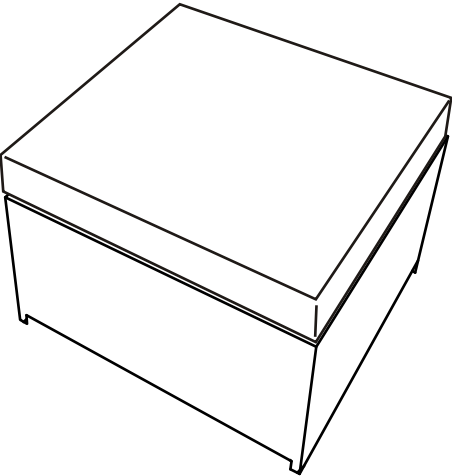


PART LIST



A4x1



B4x2



C4x2



D3x1




Fx12




Hx12


Step1

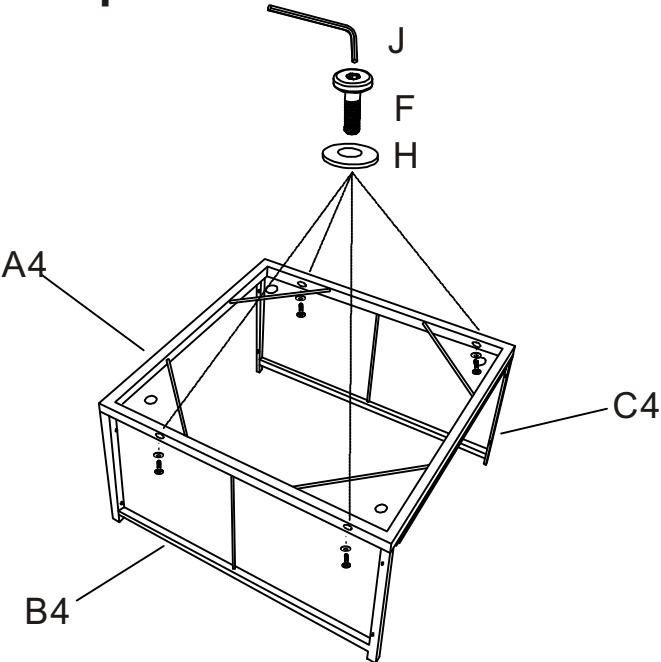

Step2

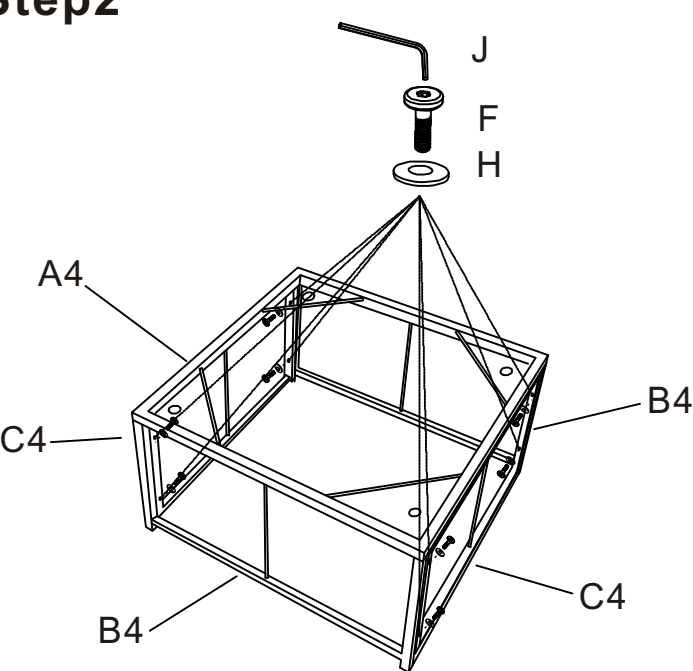

Step3

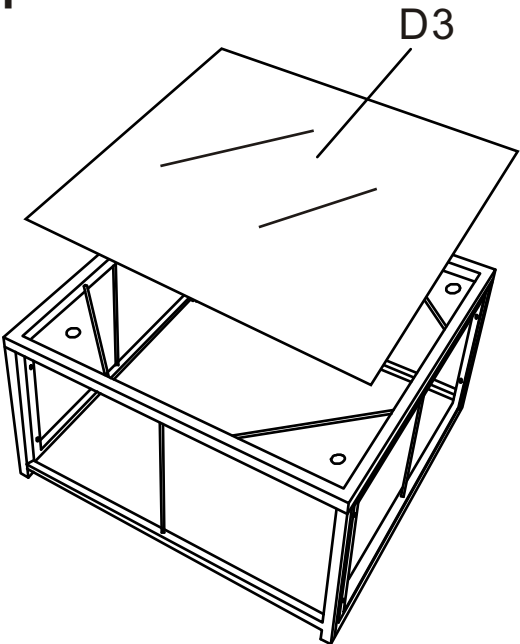

Step4

