


FIREPLACE MANTEL

ASSEMBLY INSTRUCTIONS

MT505B

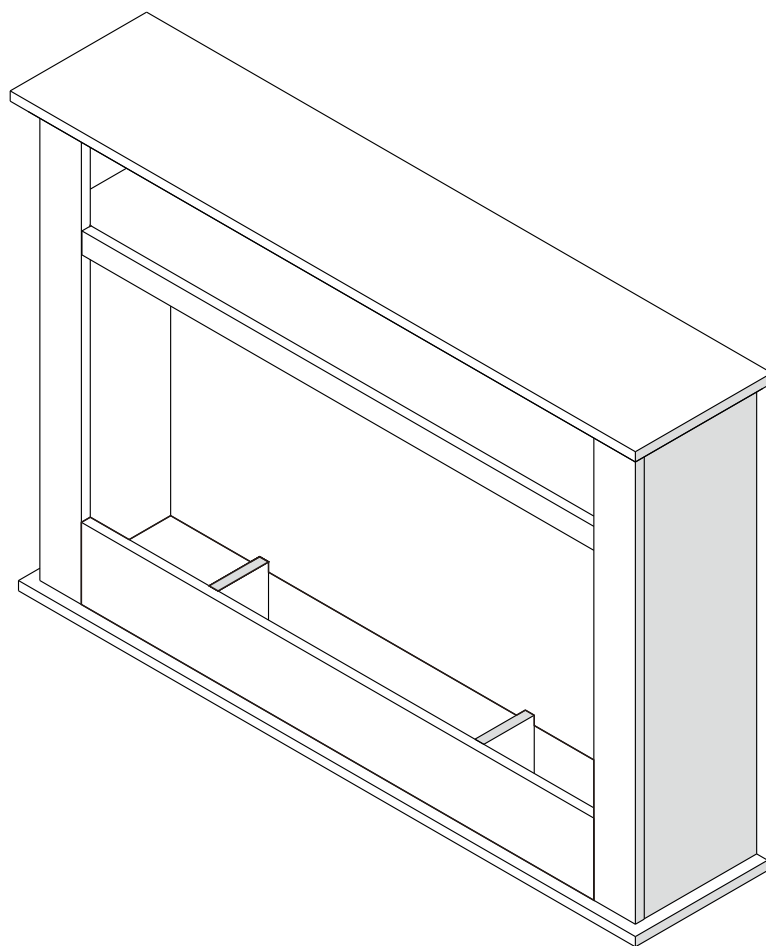


If you have a problem with this product, **DO NOT RETURN.**






Call our customer service ,Tel: 01785 719005, or

E-mail: customerservice@moddelo.co.uk

PARTS LIST

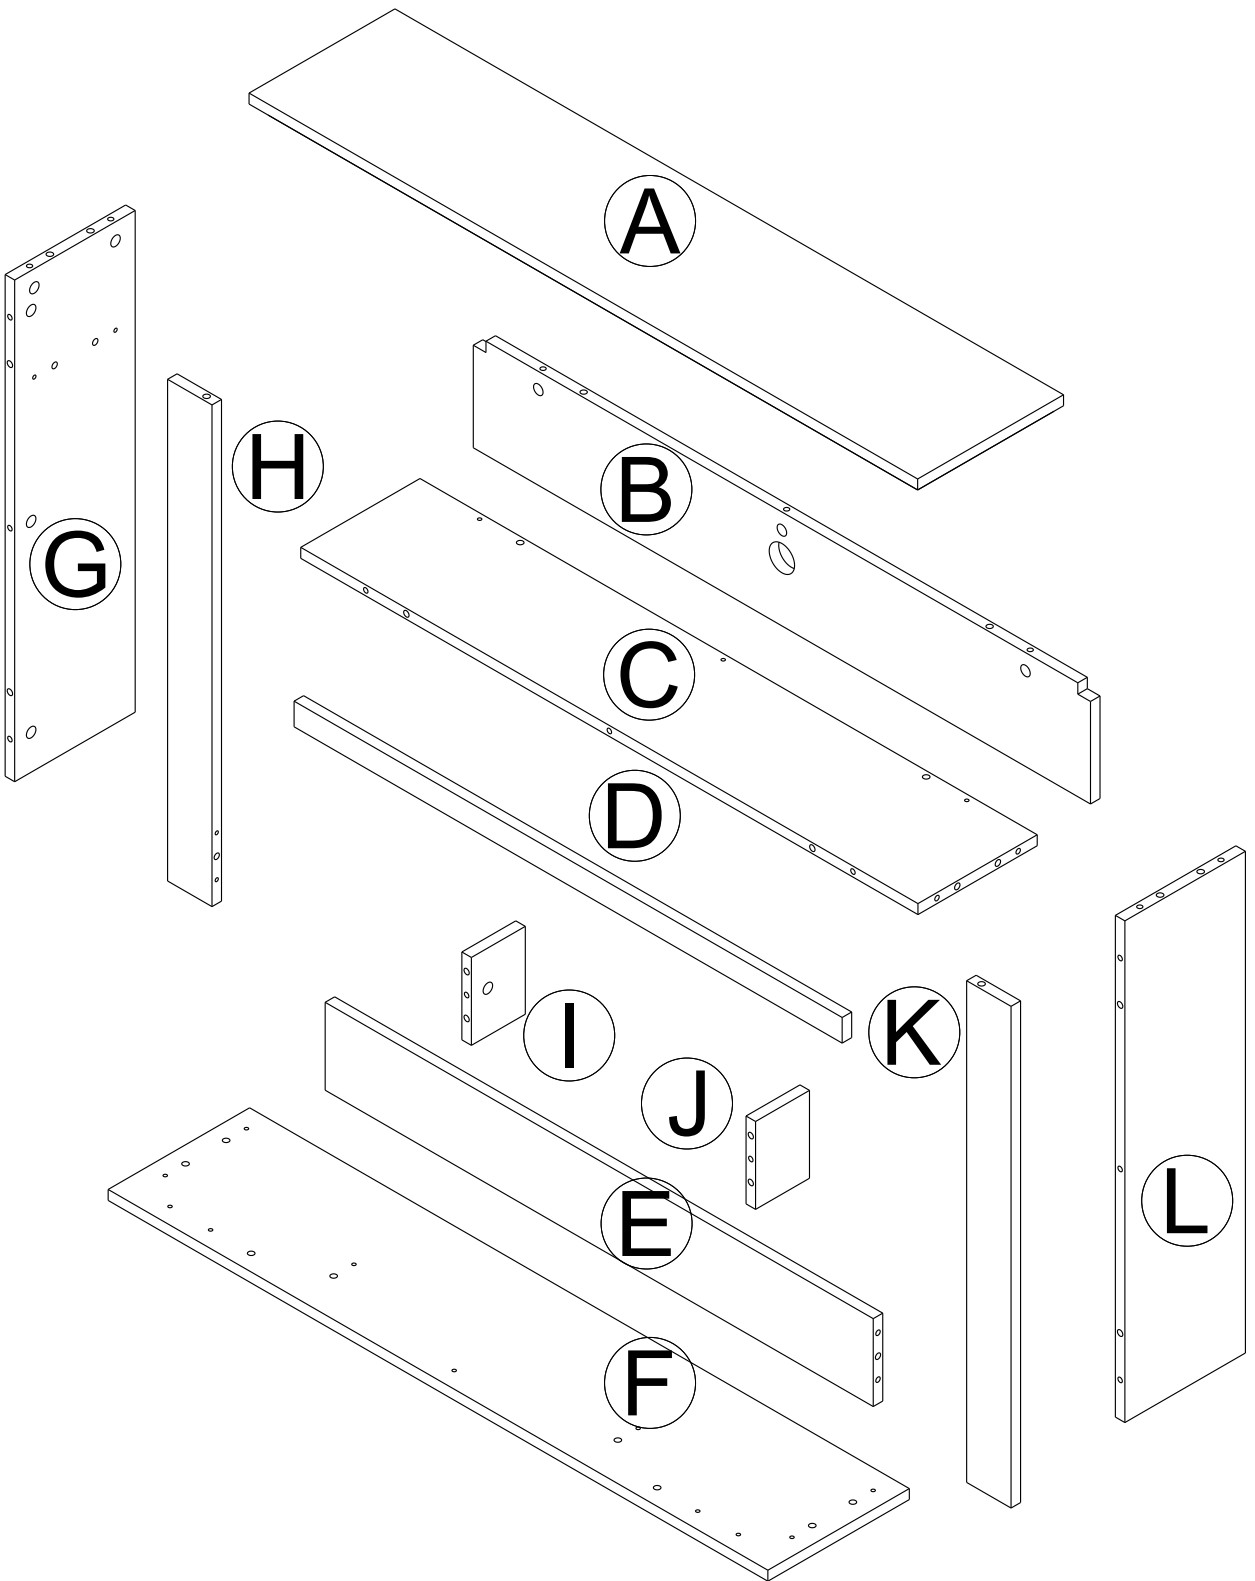


ACCESSORIES


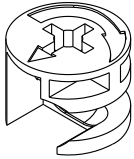
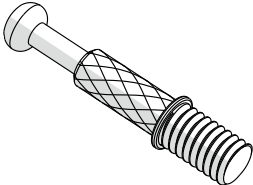
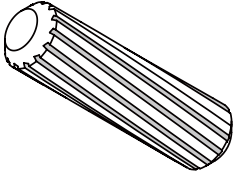
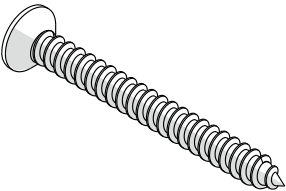
 cam lock x26+1	 cam bolt x26+1	 wood dowel x32+1
 screw ST4x40 x14+1	 pad x4+2	

TOOLS REQUIRED

A screwdriver will be needed

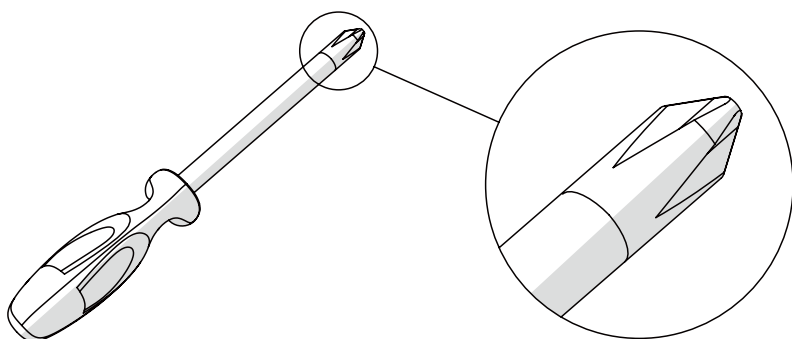

CAM LOCK FASTENING SYSTEM

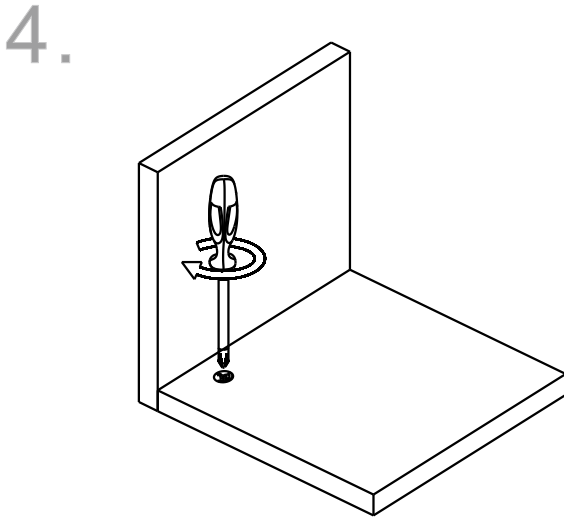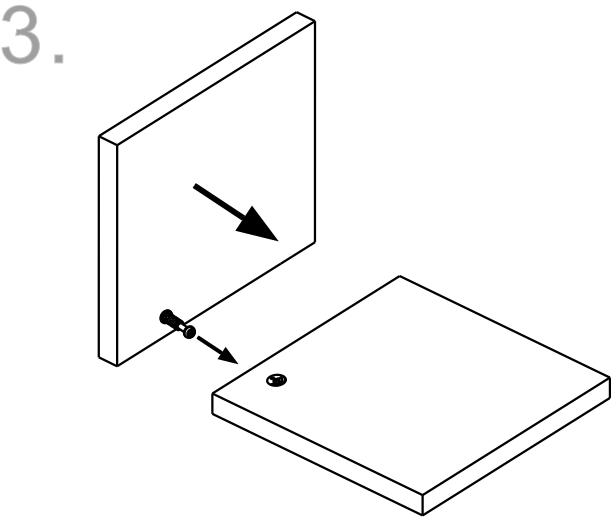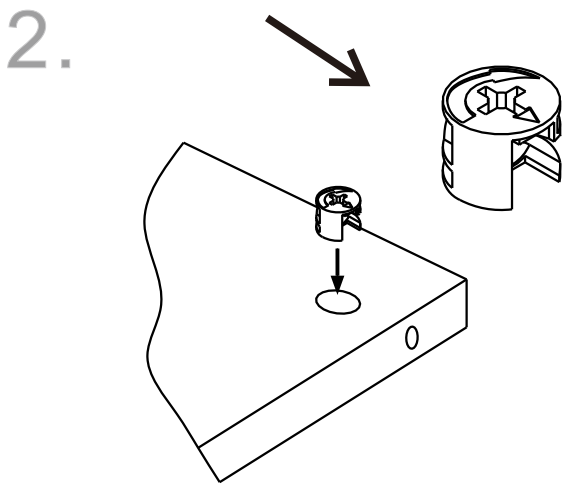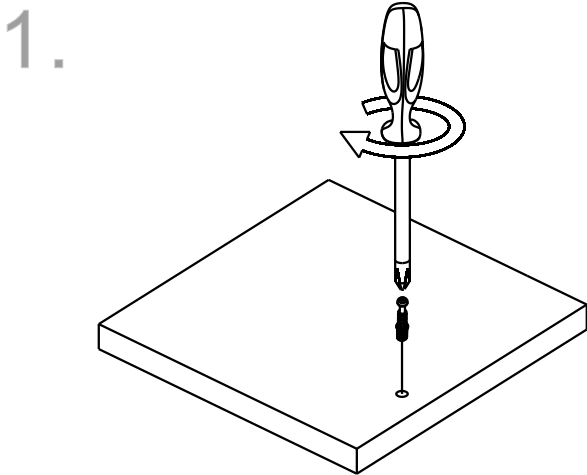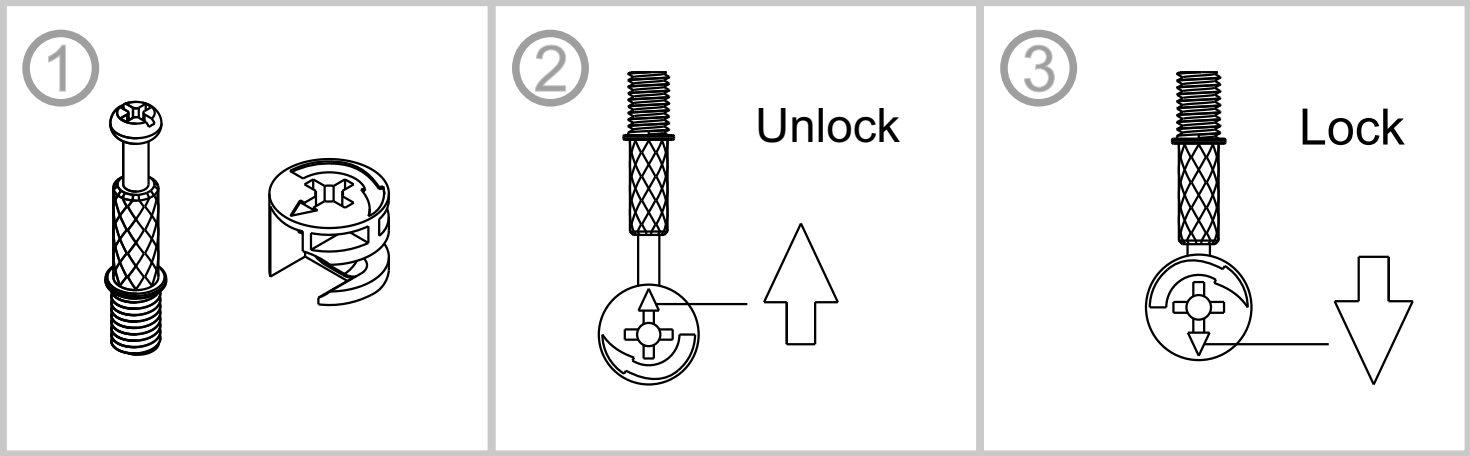


This cam lock fastening system will be used throughout the assembly process.



ASSEMBLY INSTRUCTIONS

STEP 1



Take out all the parts, as shown on the floor. Please pay attention to protect the board surface.

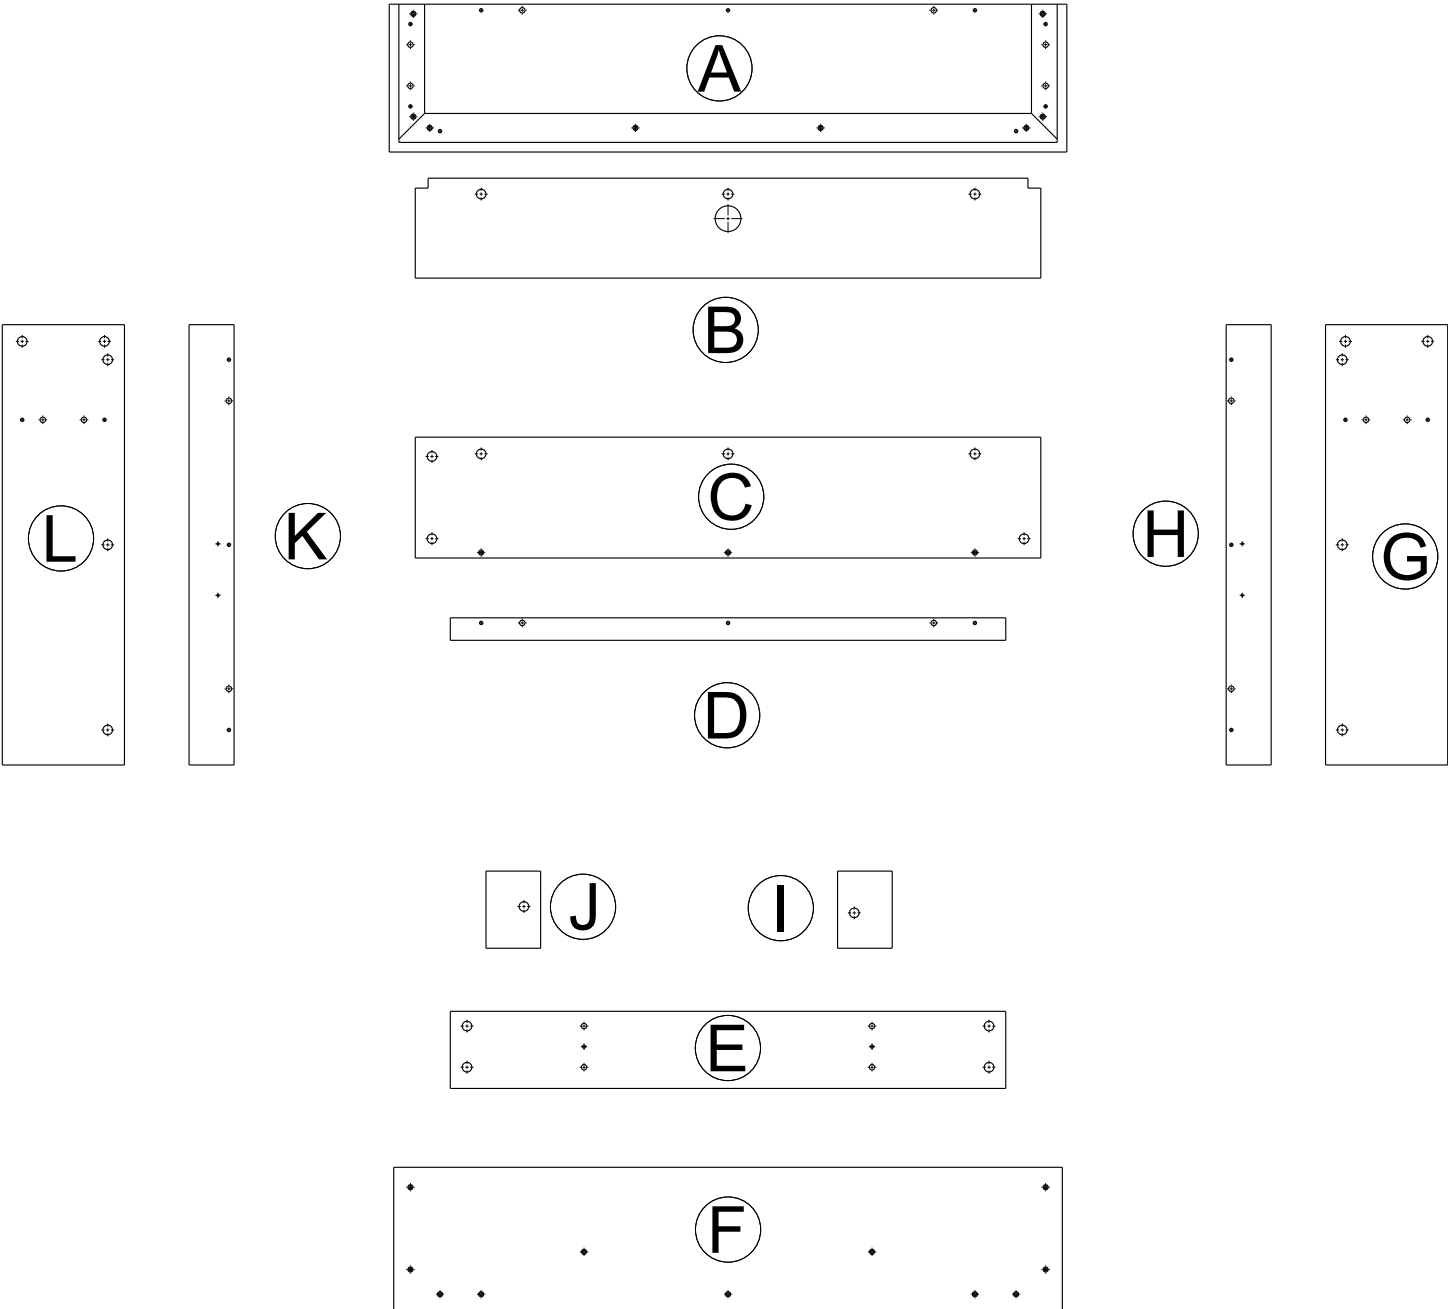


STEP 2

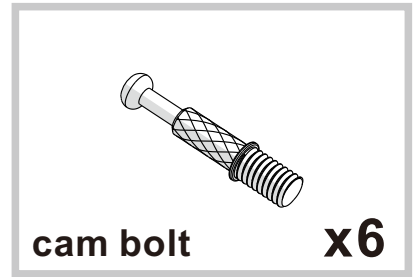
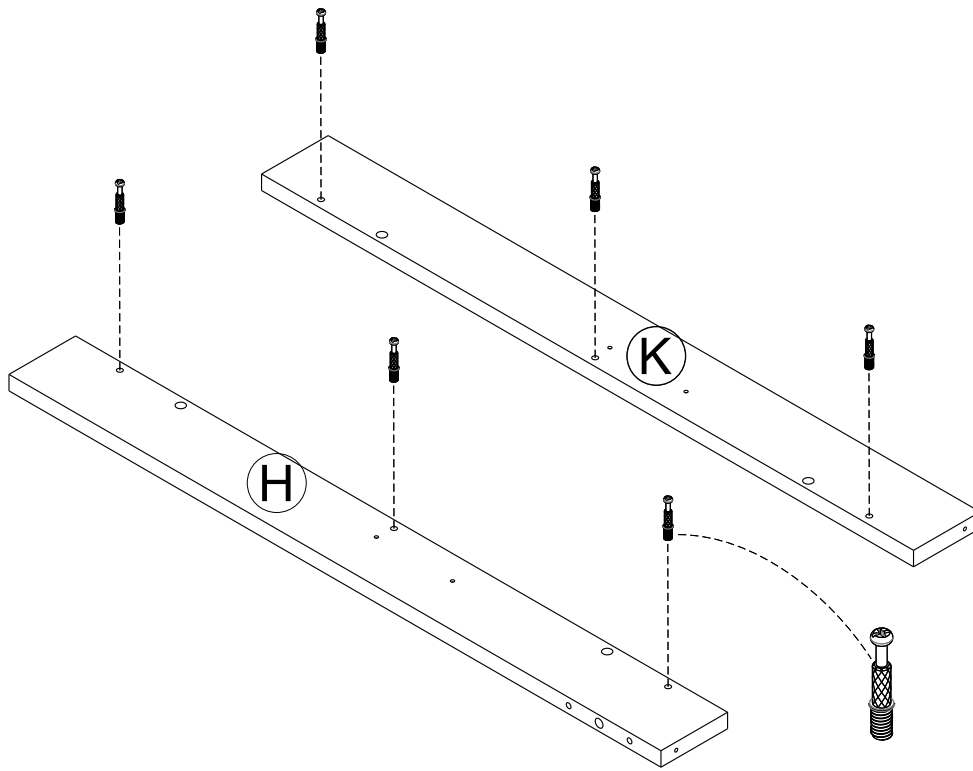


STEP 3

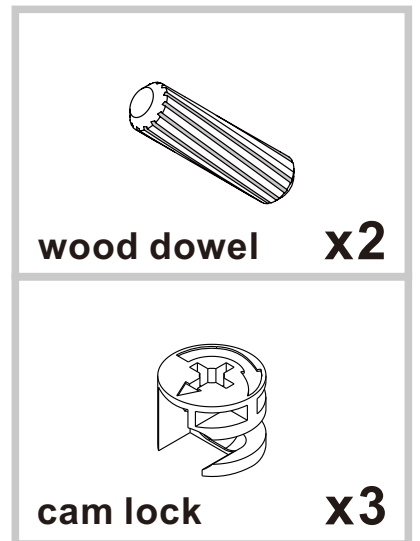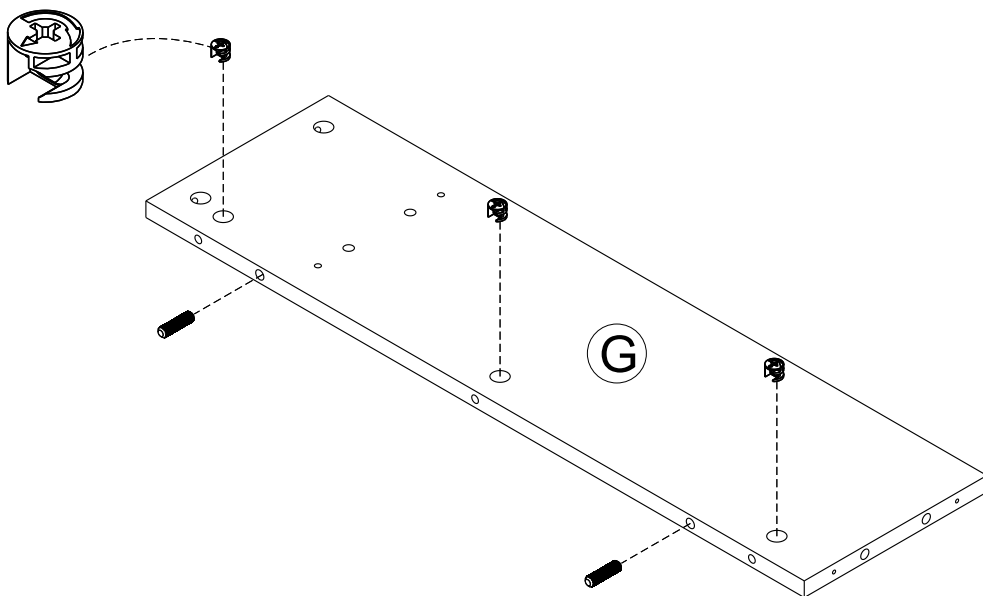


STEP 4


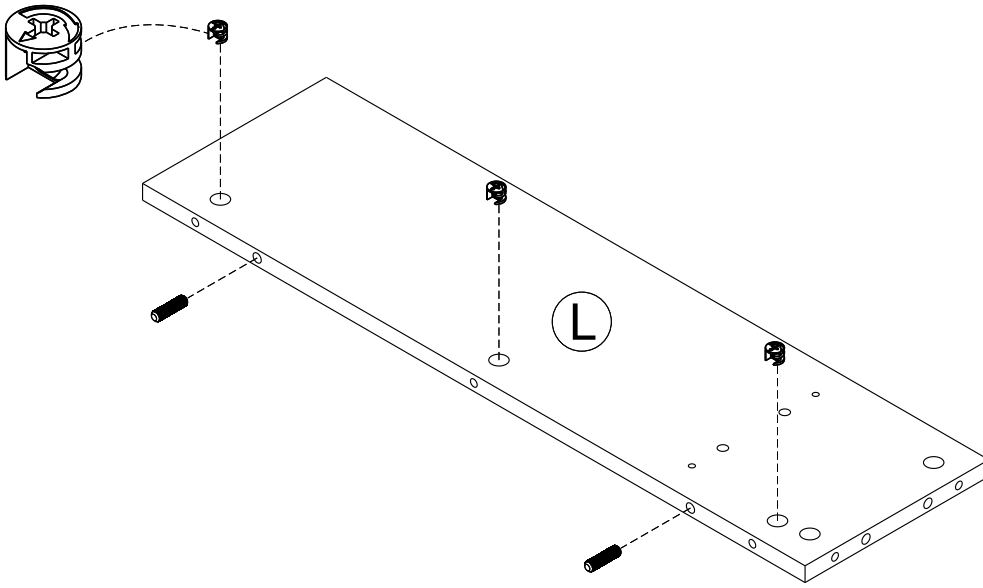


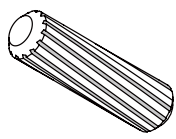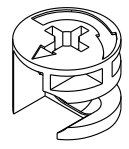	wood dowel	x2
	cam lock	x3



STEP 5

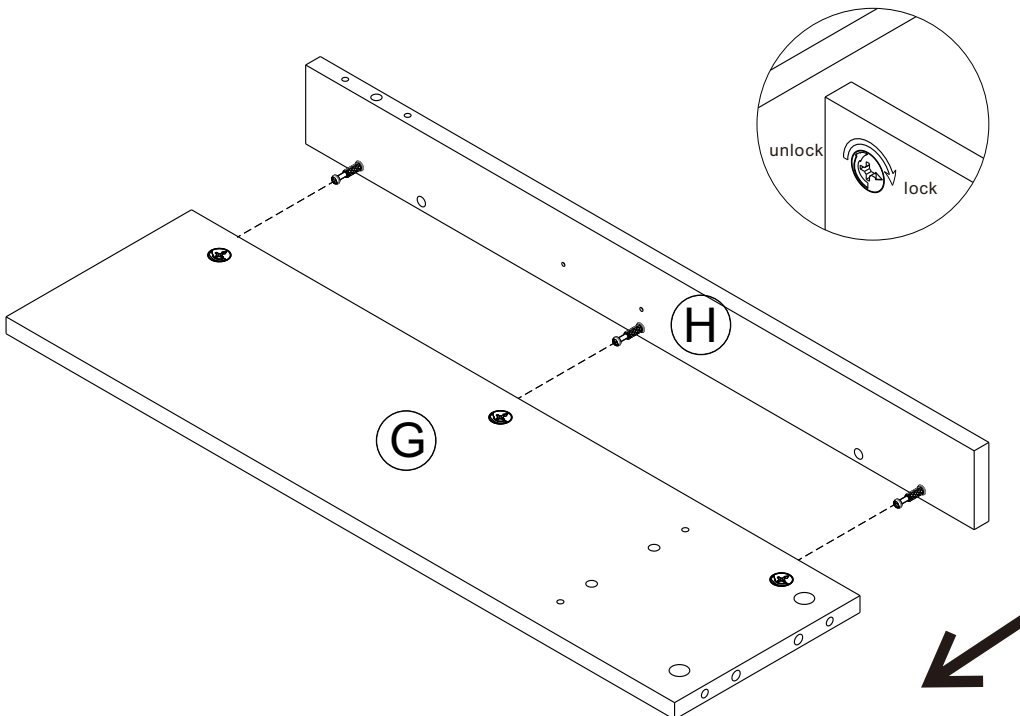



STEP 6

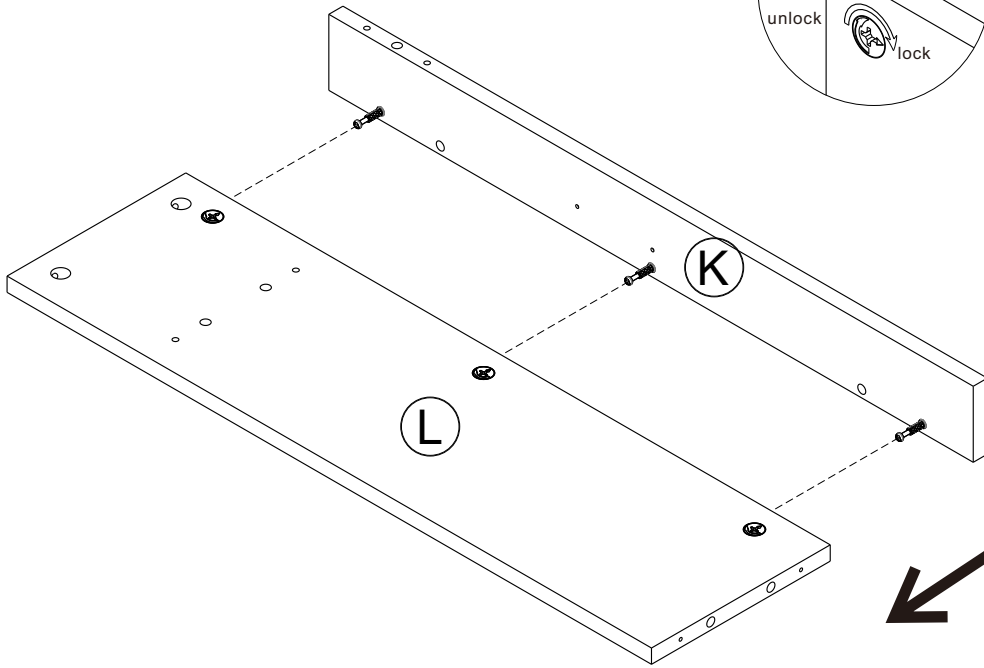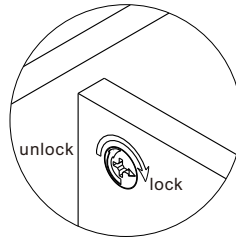


STEP 7

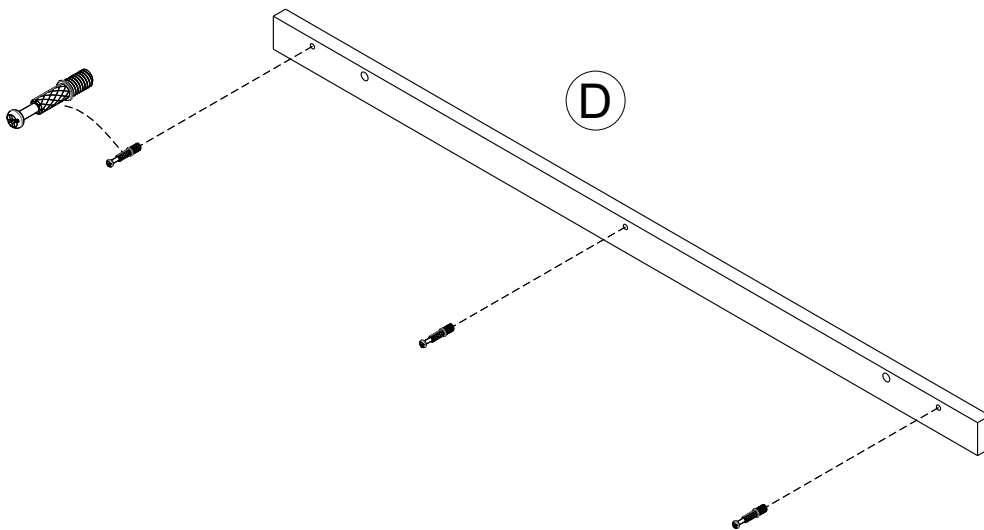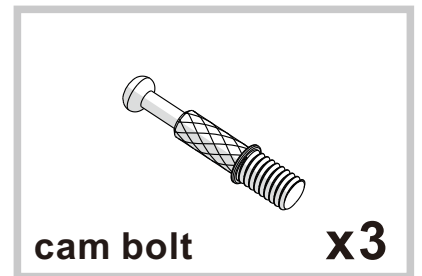



STEP 8

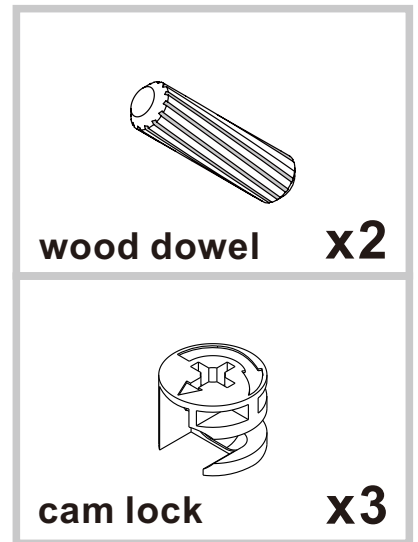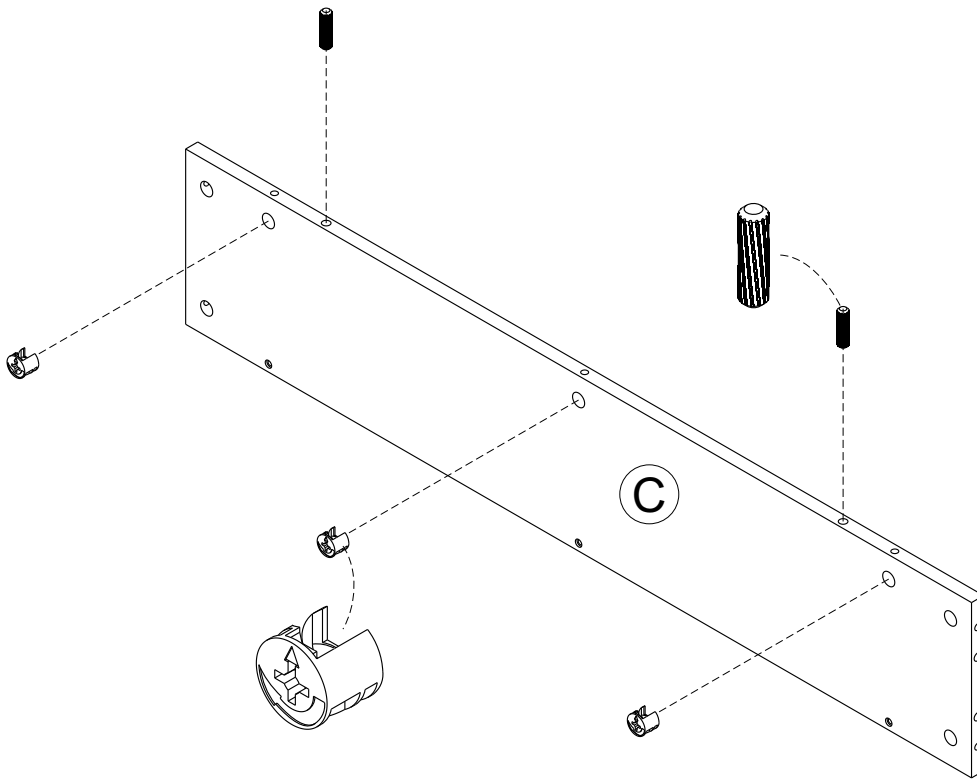



STEP 9

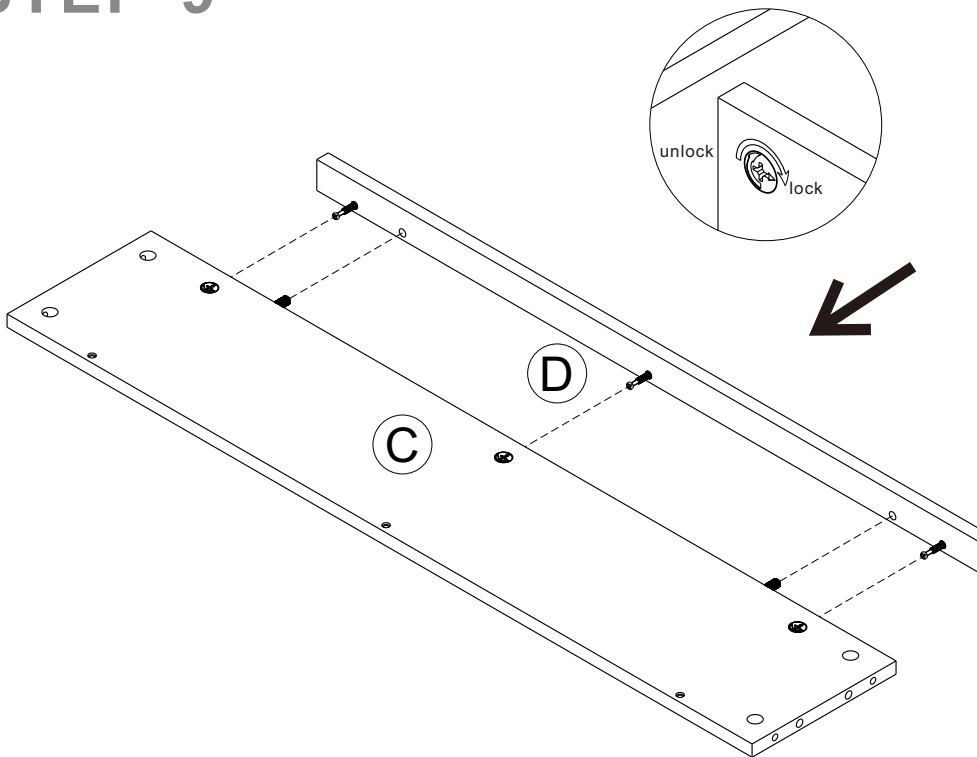


STEP 10

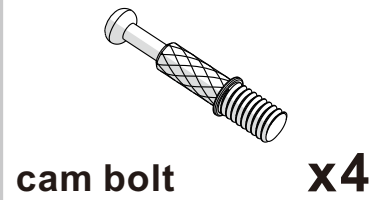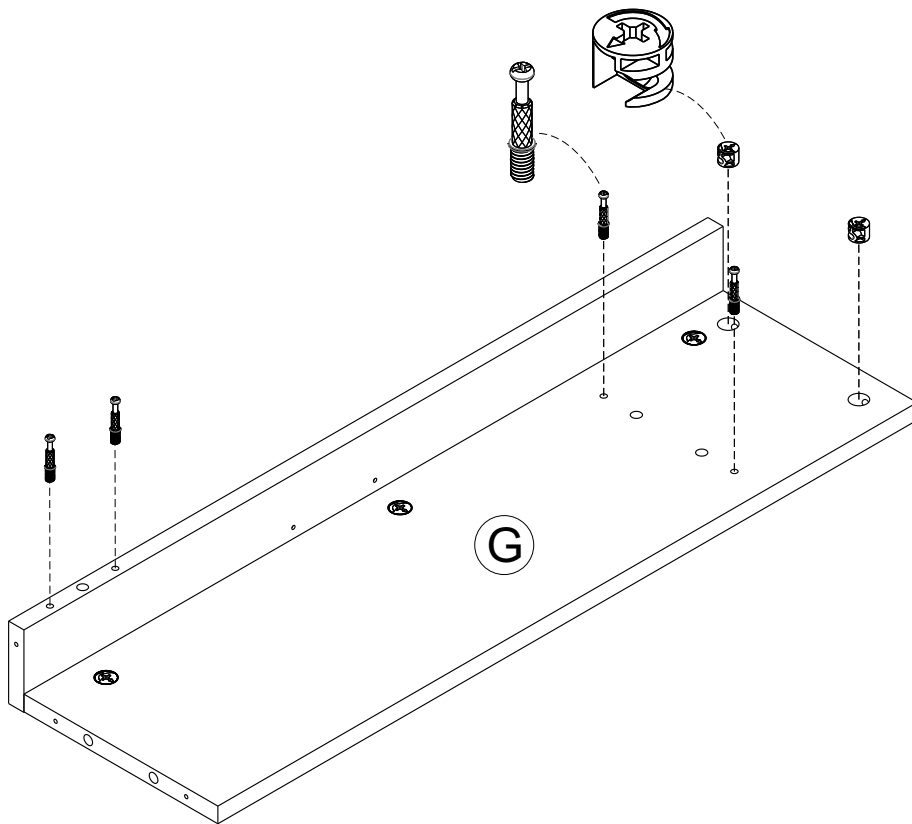


STEP 11

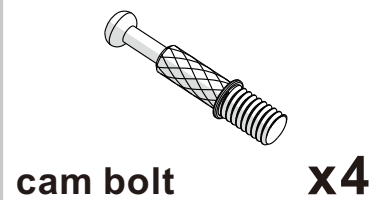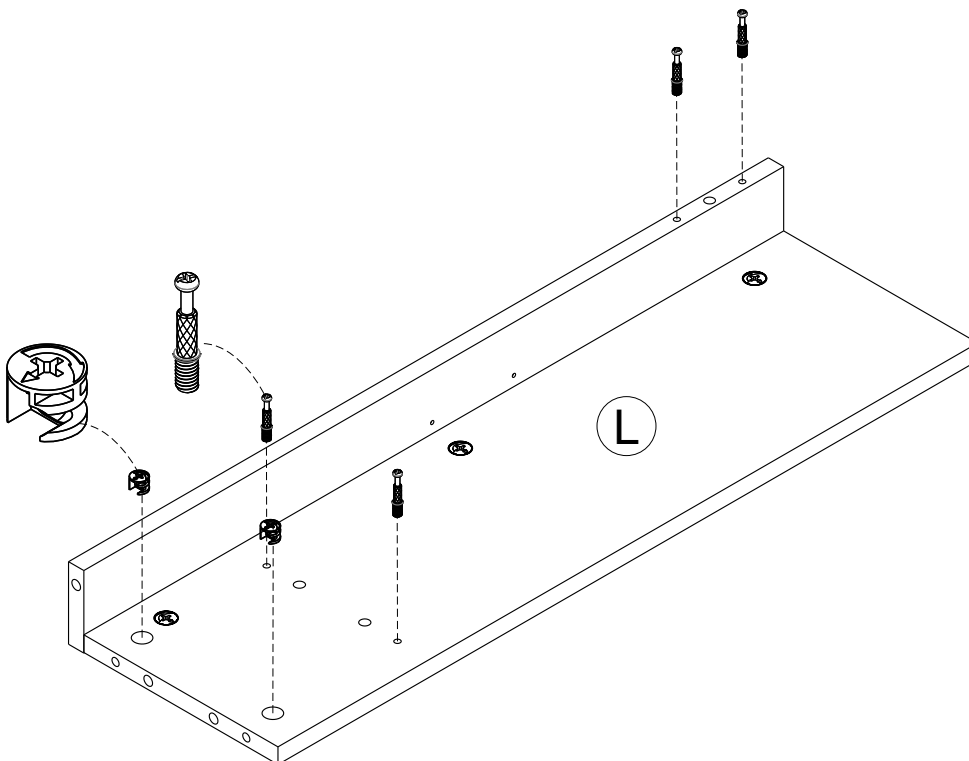



STEP 12

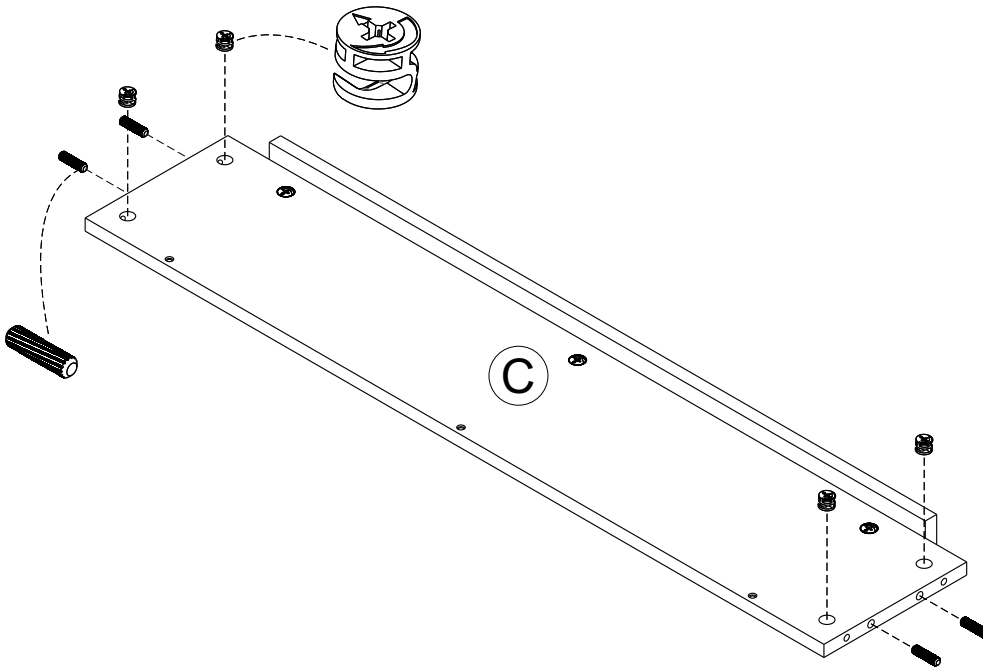


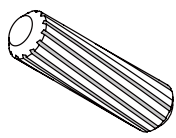
	wood dowel	x4
	cam lock	x4

STEP 13

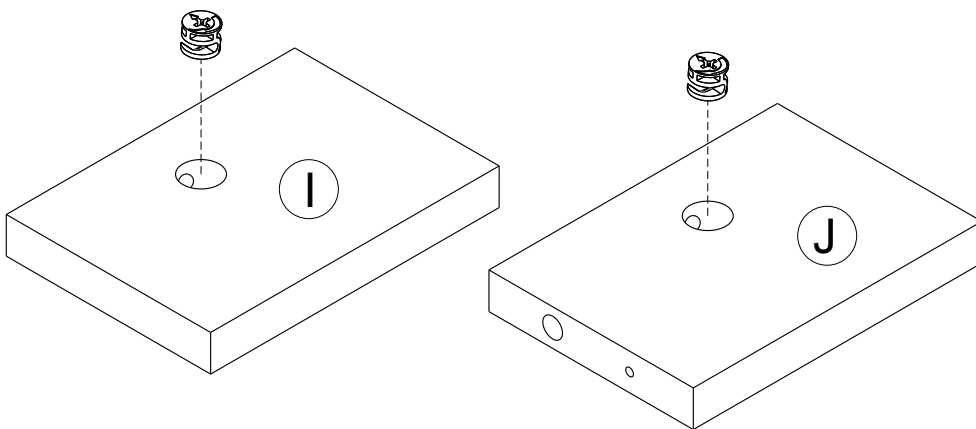


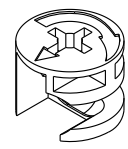	cam lock	x2
---	-----------------	-----------


STEP 14

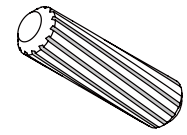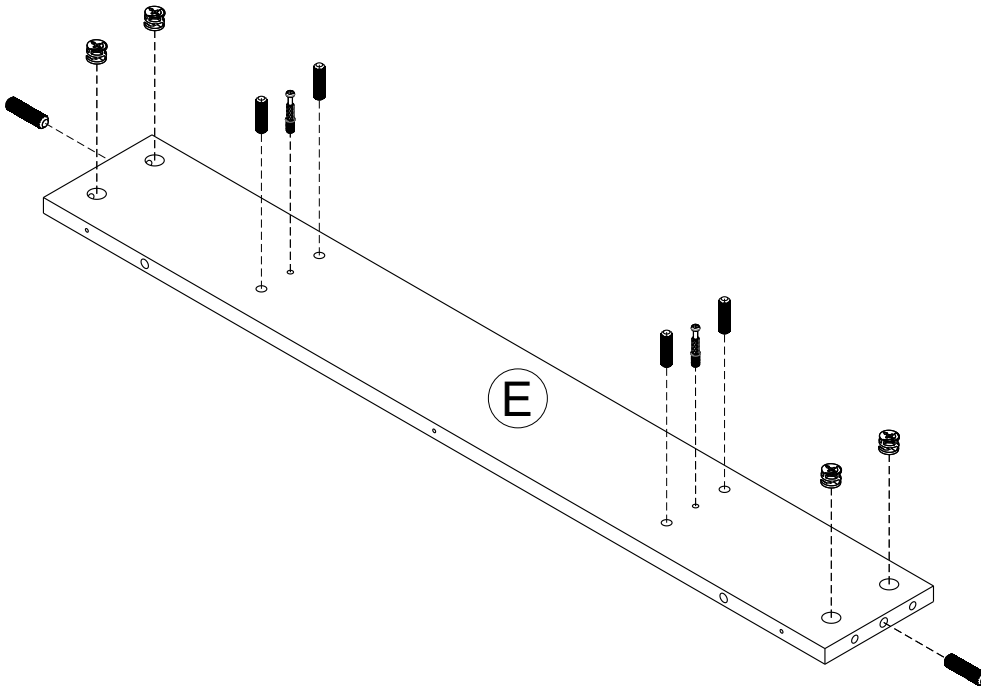

wood dowel **x6**

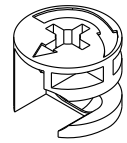


cam lock **x4**

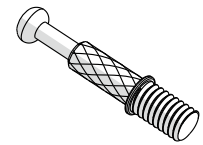


cam bolt **x2**


STEP 15


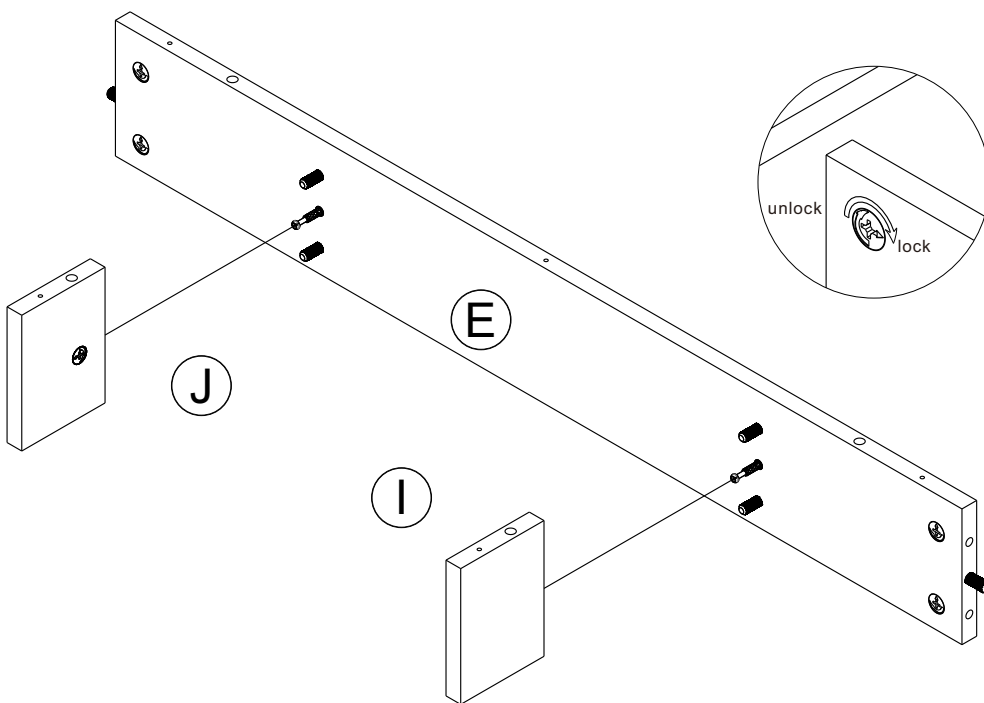


STEP 16

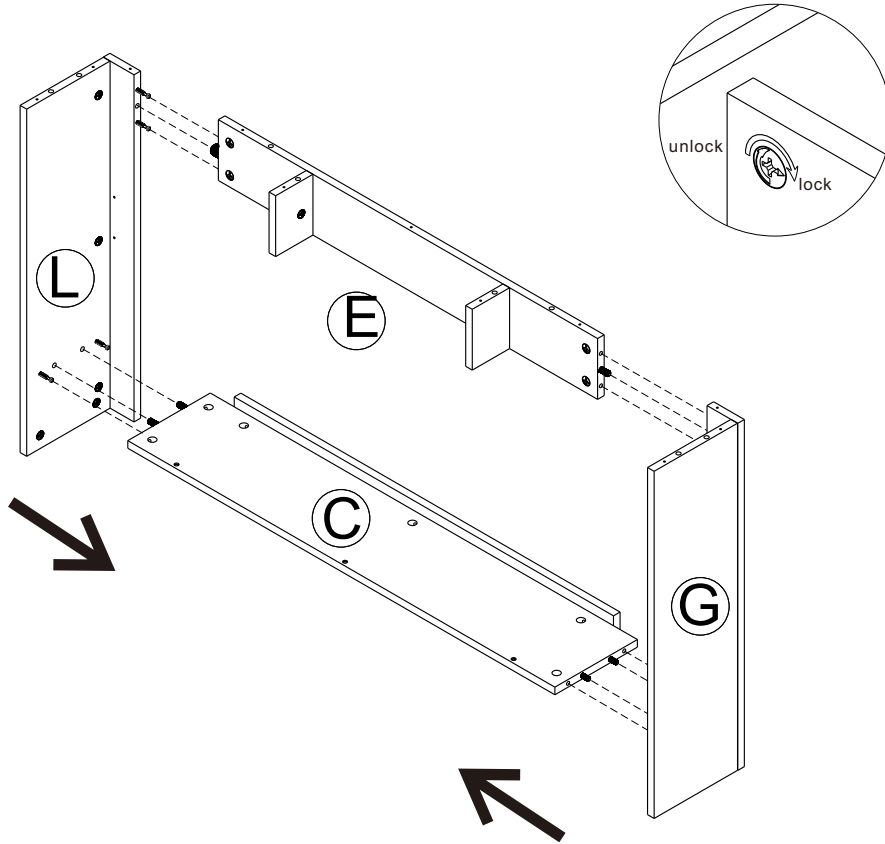


STEP 17

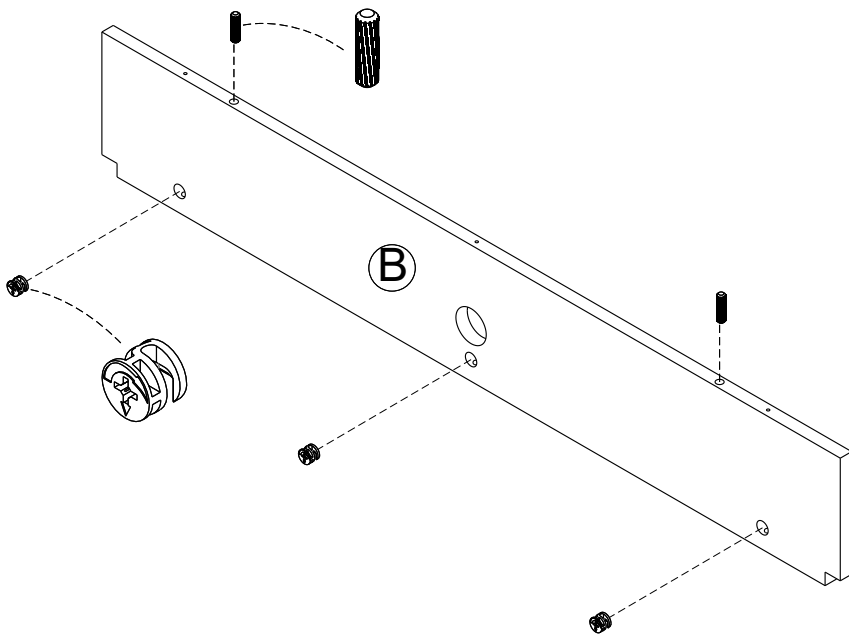


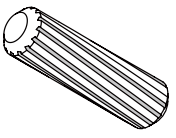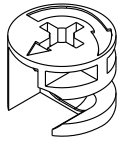	wood dowel	x2
	cam lock	x3



STEP 18

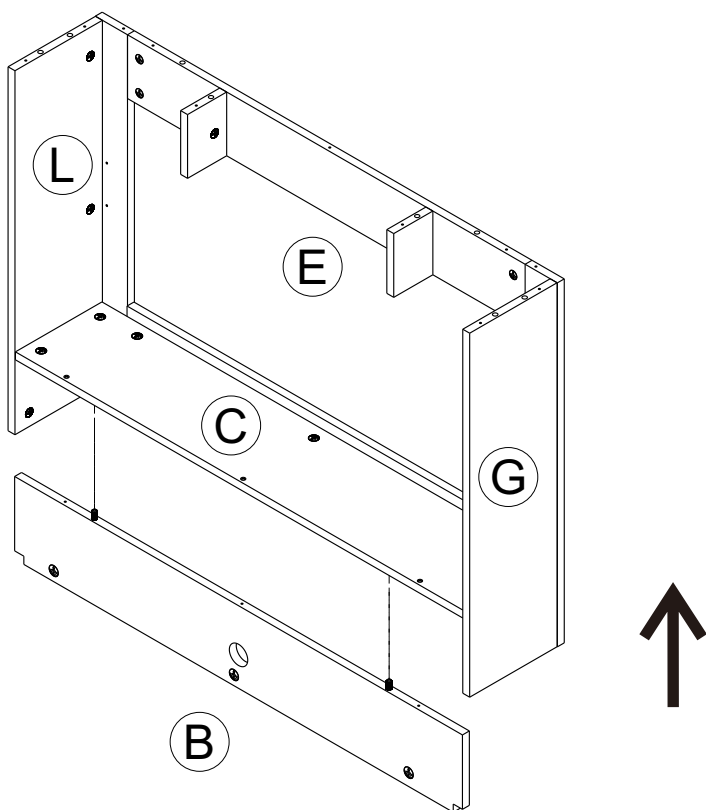


STEP 19

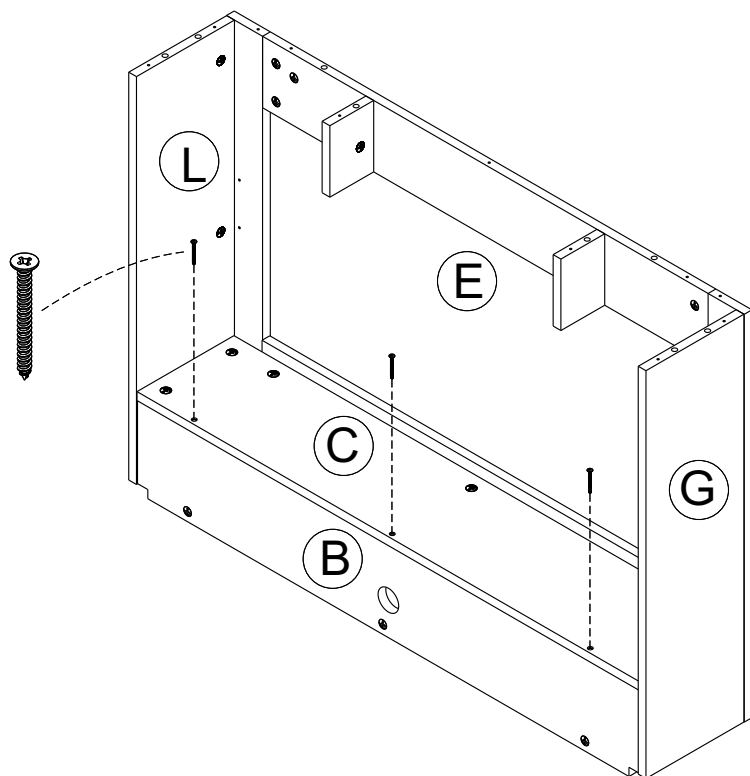



STEP 20

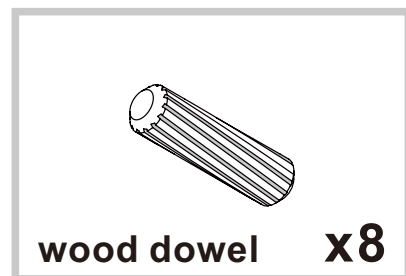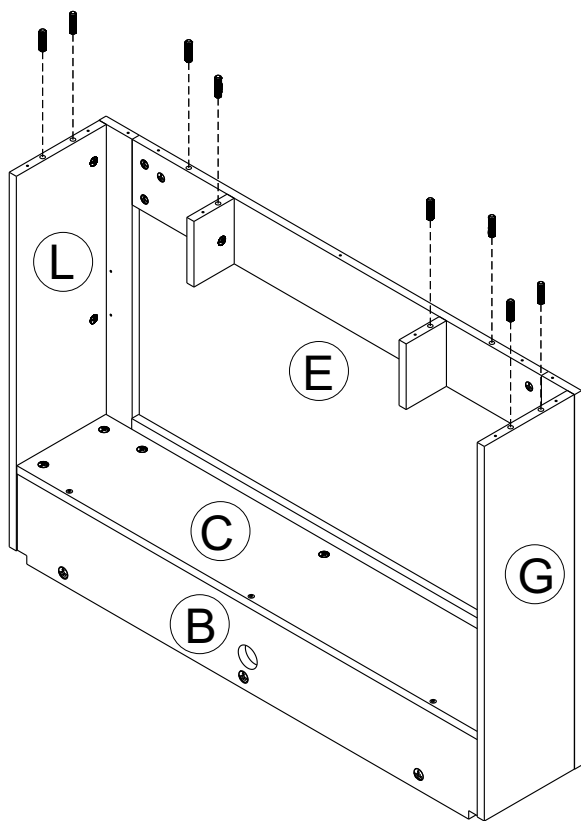



STEP 21

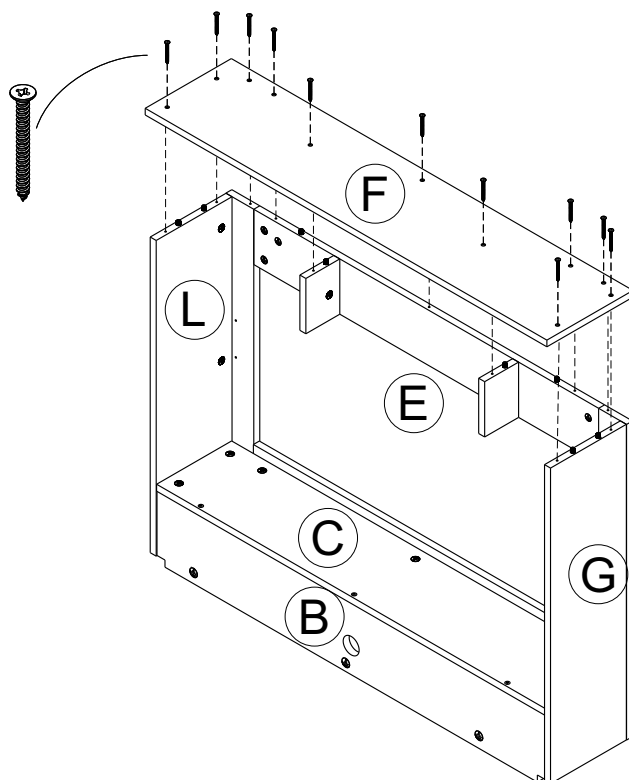



STEP 22

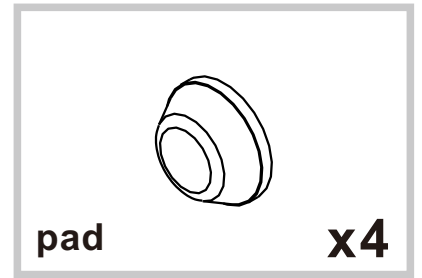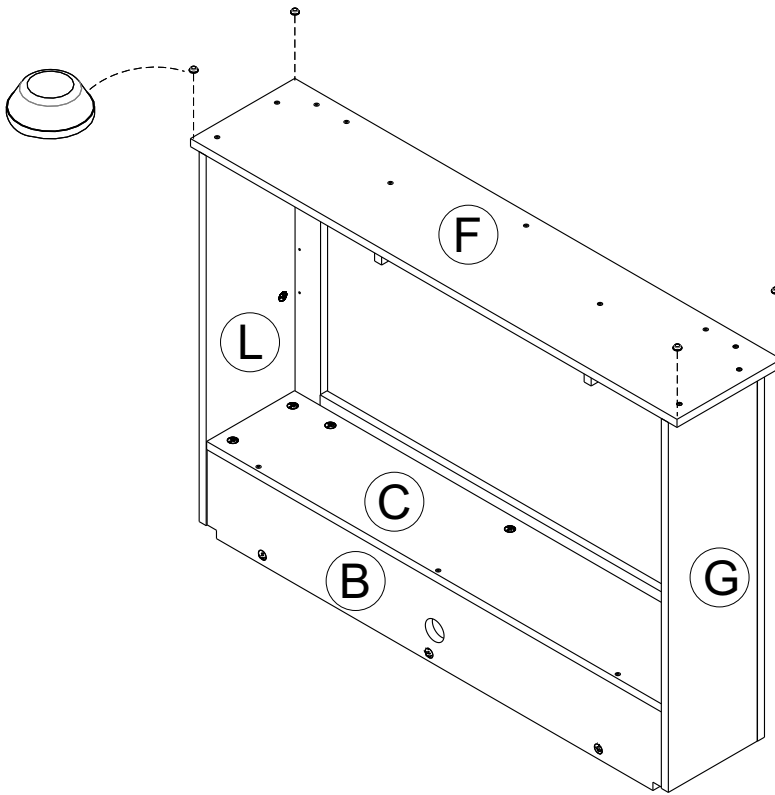


STEP 23

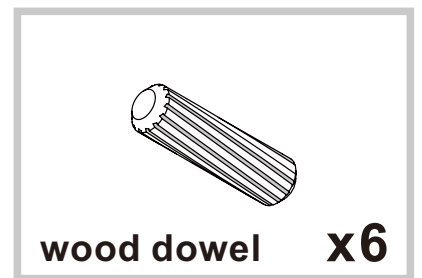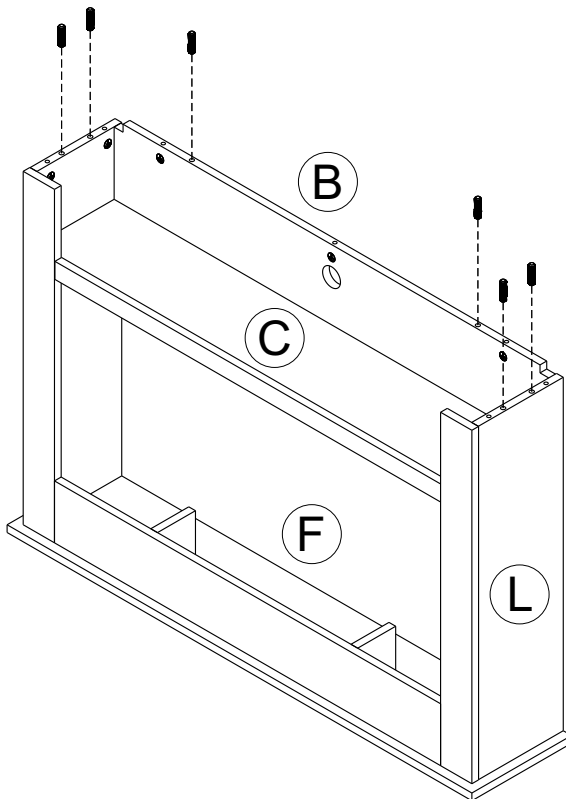


STEP 24

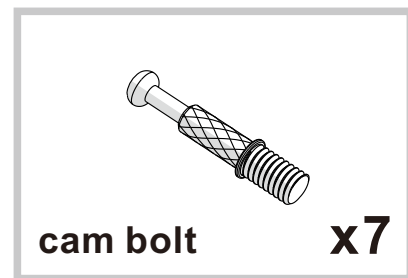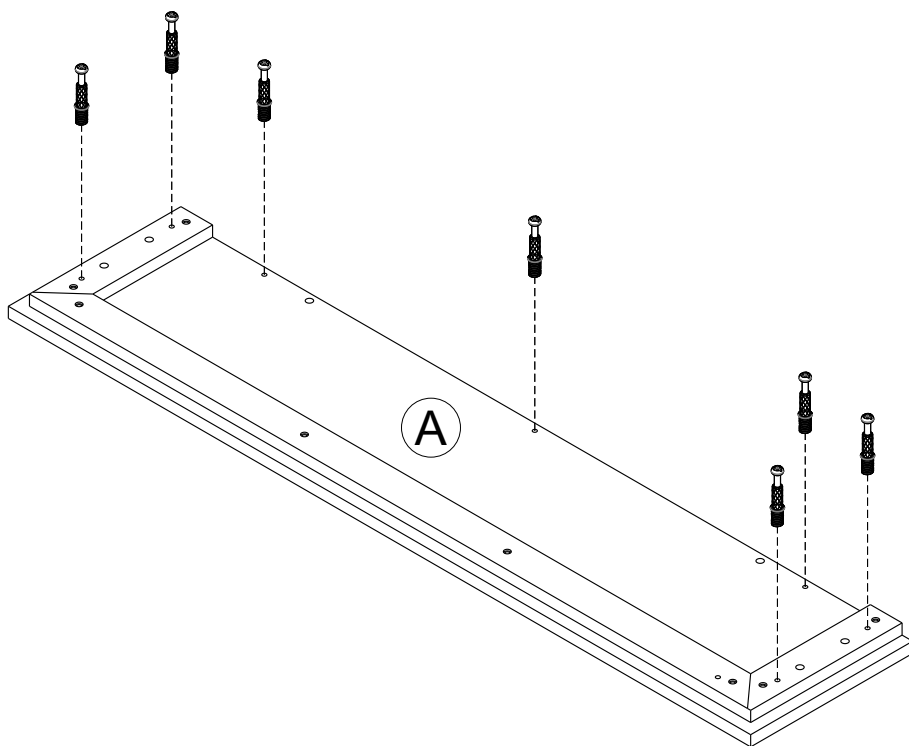

STEP 25

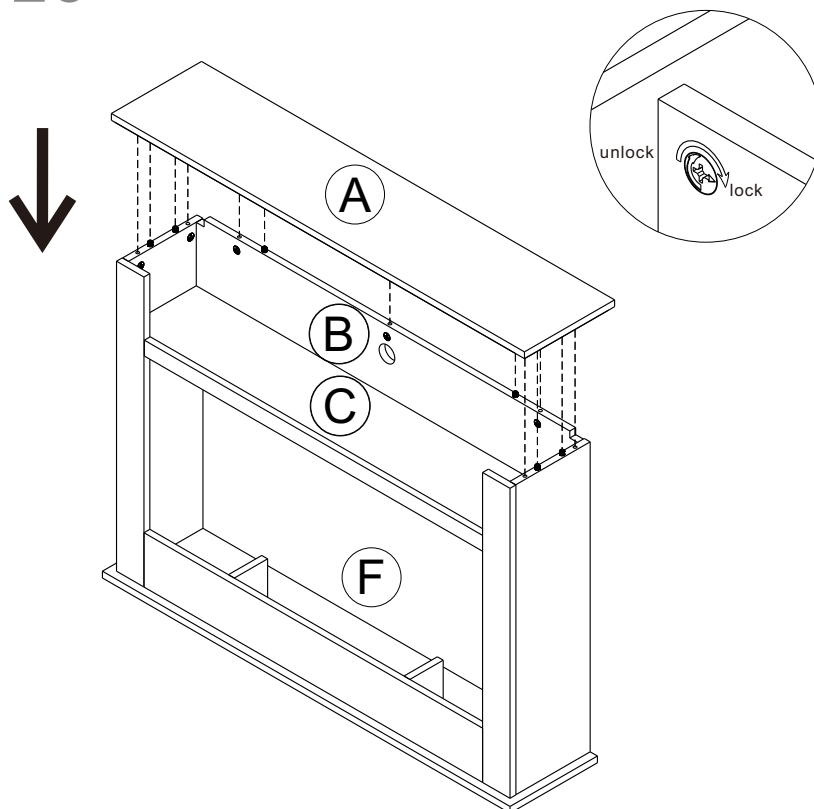


STEP 26

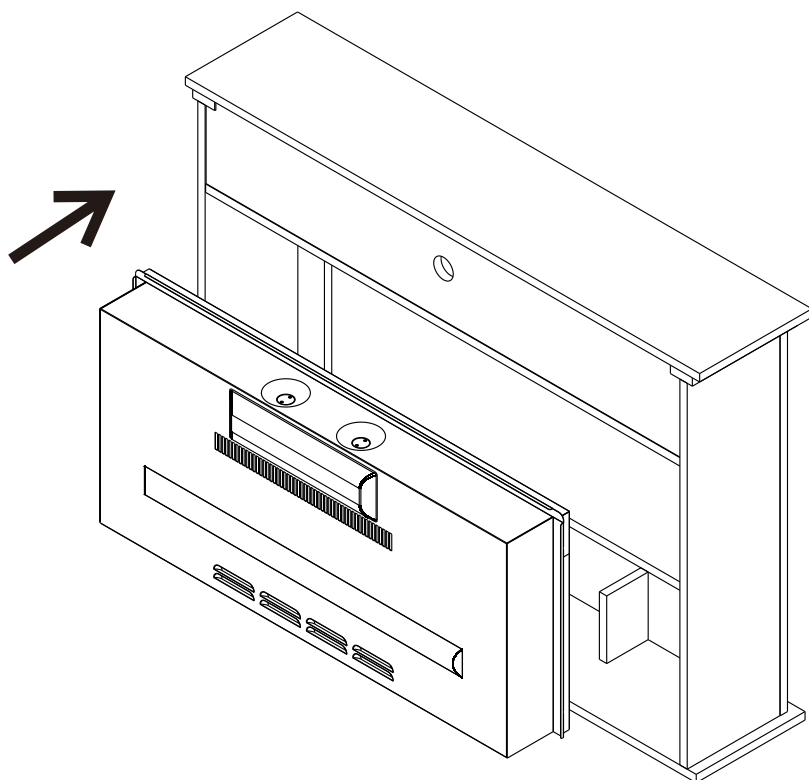


STEP 27

Fix the fireplace to the mantel with two brackets and four ST3.5x12mm screws packed with the firebox.

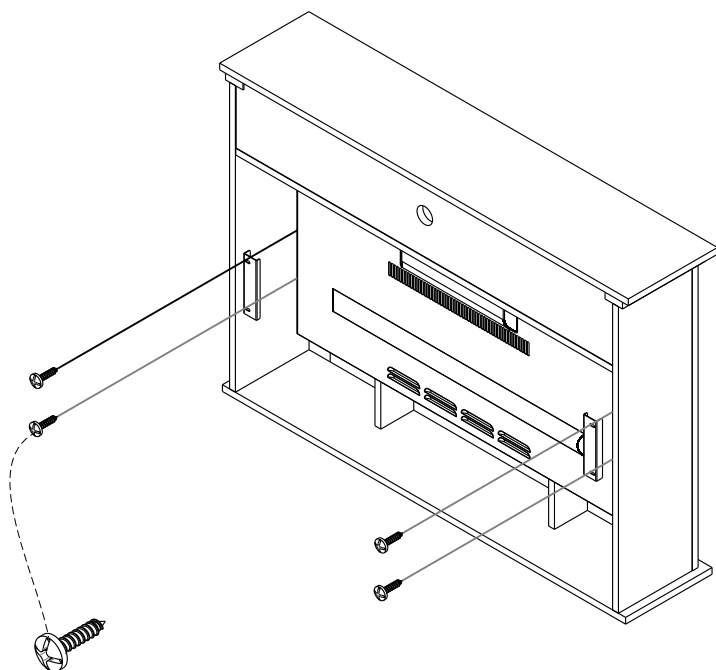

STEP 28

The assembly is completed now.

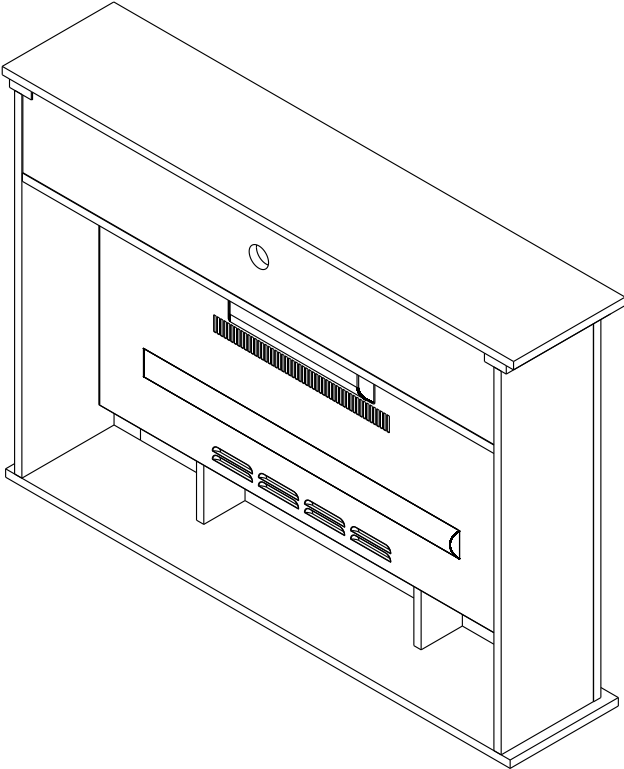

Distributor: Moddelo Ltd
Unit 6A-6E,
Airfield Industrial Estate,
Hixon, Staffordshire, ST18 0PF

Tel: 01785 719005

Email: customerservice@moddelo.co.uk