




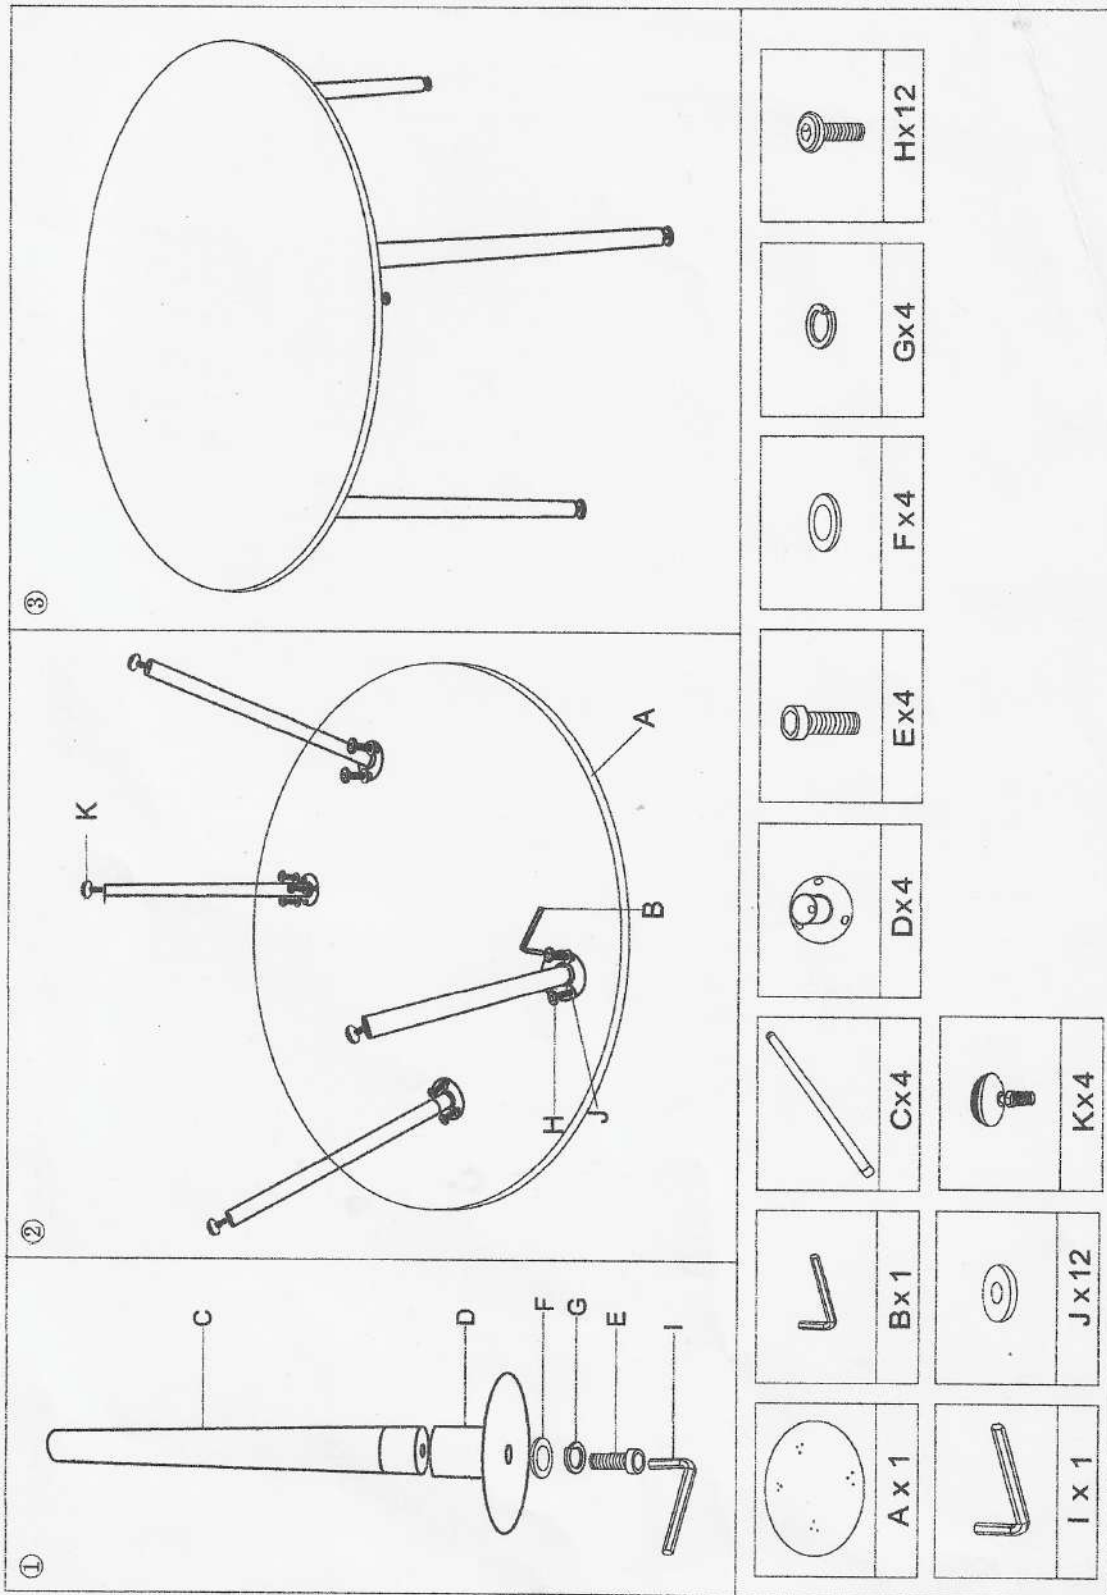


A		M6*30mm	x2
B		M6*40mm	x1
C		M6*50mm	x4
D			x4
E			x5
F		5#	x1

*** Use of power tool
will invalidate your claim .




Finish

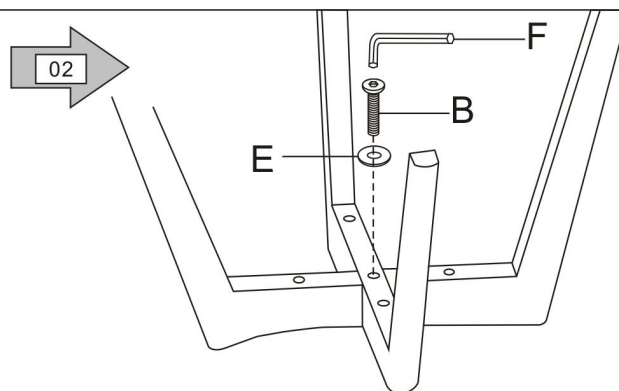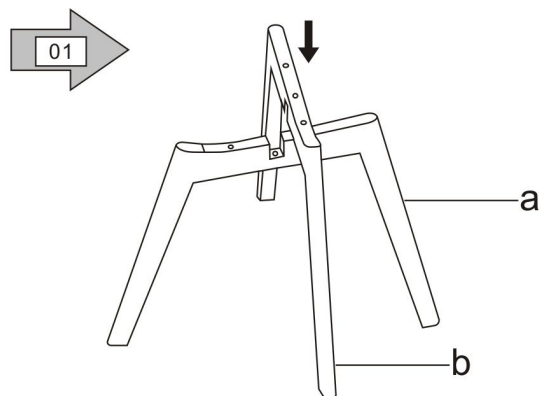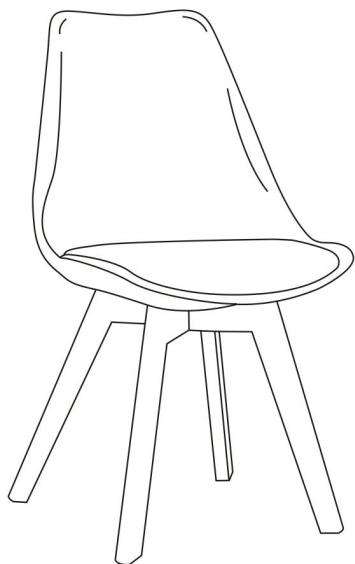

*Make the screw 90% tight.



B		x1	E		x1	F		x1
---	--	----	---	--	----	---	--	----

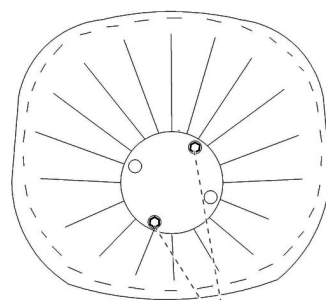

Front



2 screws for the cushion

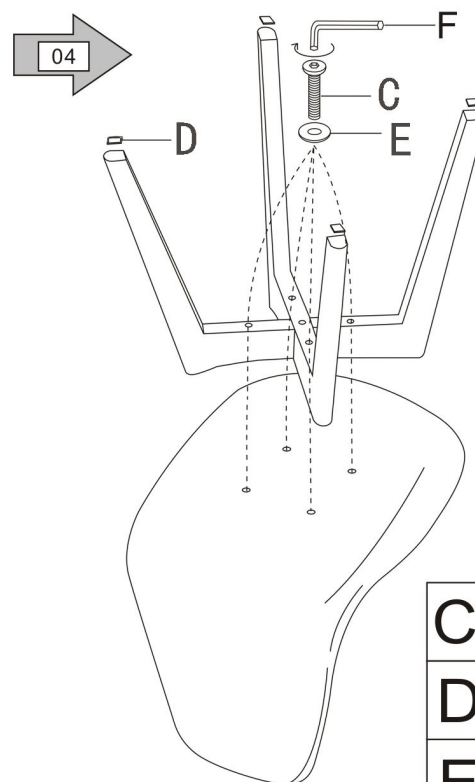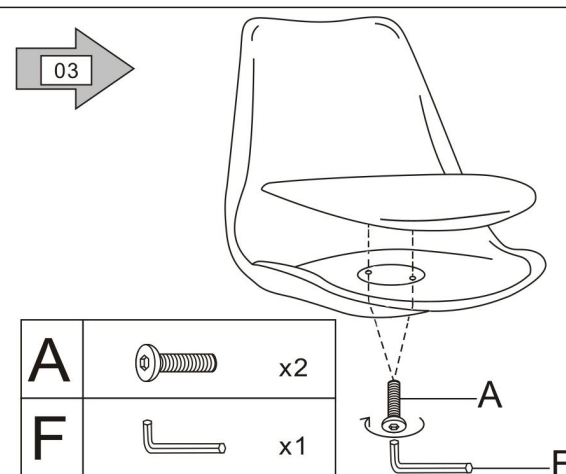

*Make all screws
100% tight.

C		x4
D		x4
E		x4
F		x1