





GENERAL INSTALLATION INSTRUCTIONS FOR LEANING THE MIRROR

PREPARING THE MIRROR

1. Decide the angle for leaning the mirror to the wall you prefer but NOT more than 25 degrees.

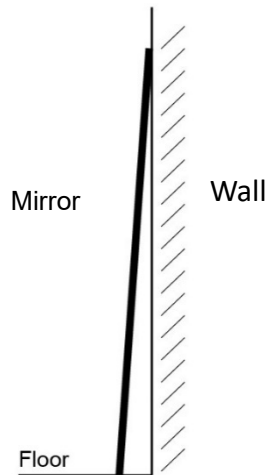


2. There's a Safety Lock Plate at the top of the back of mirror. Mark the location of the hole which for fixing this safety lock.

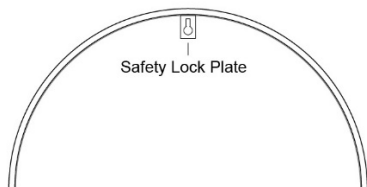


PREPARING THE WALL

3. Determine which fixing method you will need and use the correct included fixings for either Plaster, Masonry, or Timber.
 - Plaster: remove the screws from the white plaster wall plugs. Using a Phillips head screwdriver in the end of the plaster plug, gently apply pressure and rotate clockwise. The plug will bore its own hole into the plasterboard. Continue until the end of the plug is close to flush with the wall. **WARNING: DO NOT OVER-TIGHTEN.**
 - Masonry: Drill holes using a 6 mm masonry drill bit. With a hammer, gently tap each Green anchor into the holes until flush with the wall surface.
 - Timber: Drill holes using a 3 mm wood drill bit. Anchors are not necessary.

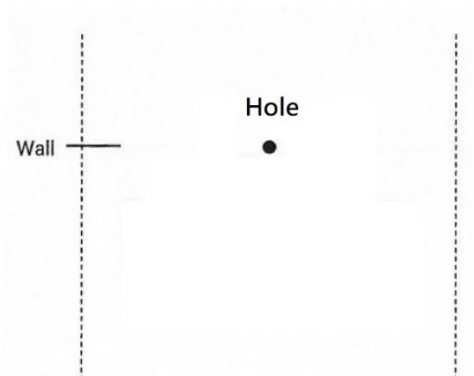

LEANING THE MIRROR

4. Install a screw into each anchor (if installing in plaster or masonry) until the head of the screw is approximately 7 mm away from the wall.
5. Test the screws by pulling outward and downward to ensure they are secure installed. The screws and anchors must remain firmly in place to ensure a safe installation.
6. Adjust the safety Lock Plate to fit the screw by bending. **WARNING: DO NOT OVER-BEND.**

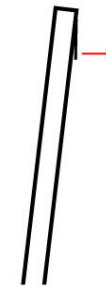

7. Hang the mirror on the screws using the Safety Lock Plate.

