

Assembly instructions – Acorn Cupboard Workbench

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarize yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the top of page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

Package contents

1x Tabletop
2x Base planks
2x Sets of legs
2x Doors
Set of drawers
2x Side supports
2x Top and Base panels
4x Middle divider panels
1x Backboard

Tools required

Electric
screwdriver (No.2 Pozi bit) or
Screwdriver



Step 1




Lay the top upside down.

Step 2




Place the legs in position as shown ensure that the legs are pushed into the corner.

Step 3

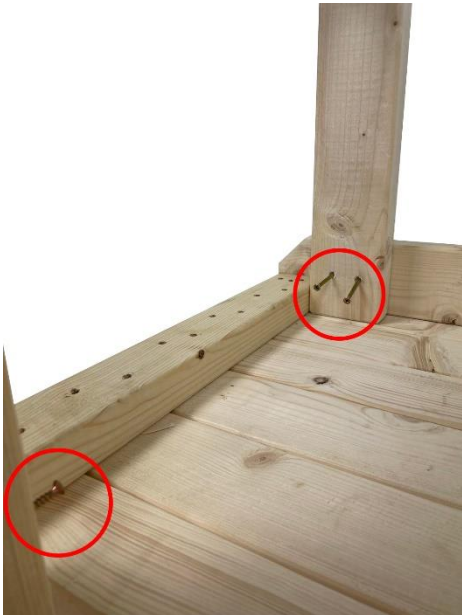

After making sure that the legs are pushed in the corners secure it with the provided screws just as shown in the picture.

Step 4

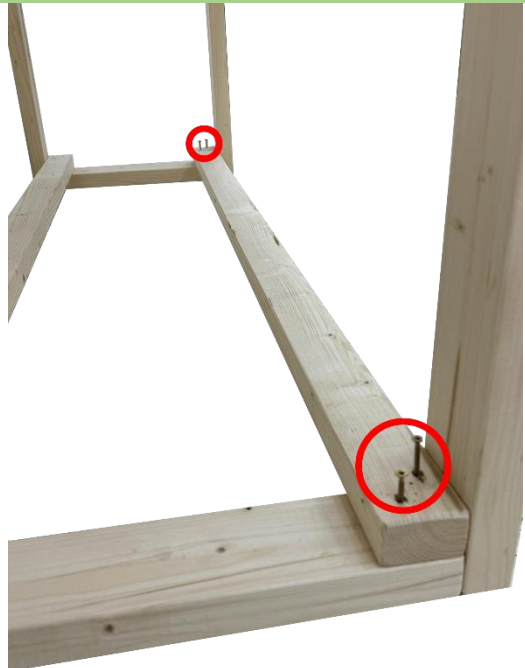

Add two of the support planks, making sure to push them in the corners and secure them with 2x woodscrews on each end.

Step 5



Now proceed to add two of the side supports and secure each of them using the provided wood screws.

Step 6



Once the table frame is finished, proceed to the cupboard assembly. Take one plain side panel without drawer runners and connect it with the bottom base panel using 2x confirmat screws.

Step 7



Take the remaining panels, space them out as shown in the image, and connect them to the base panel using the provided confirmation screws. The panel that has drawer runners from both sides goes second from the side.

Step 8



Once all the divider panels are secured, take the remaining top panel and secure it using the confirmat screws as before.

Step 9



Take the door hinges and secure them to the side panel using the predrilled pilot holes and the provided woodscrews. After installing the hinges you can go and clip on the doors.

Step 10



Place the backboard on and secure it using the provided nails.

Step 11



Slide in the cupboard to the workbench lower part.

Step 12



Proceed to the drawer assembly. Take two of the provided drawer panels and place them in the same position.

Step 13



Attach the drawer back panel so that the cut out for the board would be facing the same direction. And now secure it with the confirmat screws.

Step 14



Slide the drawer's baseboard as shown in the picture.

Step 15



Now place the drawers front panel and secure it with the cam locks from each side. Repeat steps 12 to 15 to finish assembling the drawers.

Your workbench is now completed!

We hope that you found your product quick and easy to assemble but if not and you require further assistance or have any questions you can contact us via details above.