



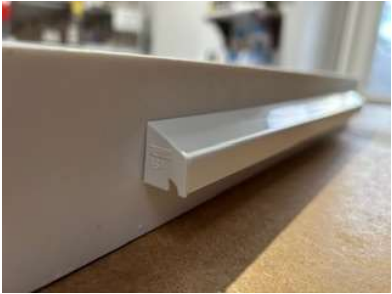


INSTALLING THE REHAU 700MM & 850MM RAIN DRIP

1		<p>Mark a straight line on the door where the rain drip will be located.</p> <p>Screw one of the supplied screws into the door on the line you have created making sure it is at least 20mm from the rain drip outer edge.</p>
2		<p>Space out the screws evenly across the length of the rain drip</p> <p>Tighten down the screws till no thread is exposed</p>
3		<p>Line up the bar with the first screw like shown, if fitted correctly this should be stiff to push into place</p>
4		<p>Keep Sliding the Drip Bar across the screws until in position</p> <p>The rain bar is now installed.</p>
5		<p>Install The End Caps As shown using a tiny amount of super glue for a secure installation and to prevent them dropping off in the future.</p>