








# Radiator Name: Flat Panel Double


This product must be fitted only by a fully qualified installer

Description	Illustration	Qty
Radiator		1
Bracket		4
Fixing Screw		4
Spacer		4
Air Vent		1
End Plug		1

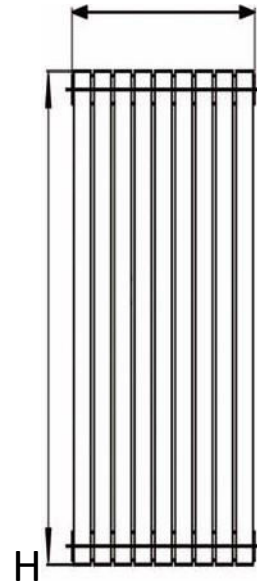


Front View

View Side

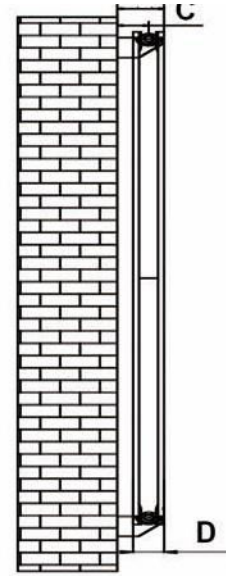

Back View

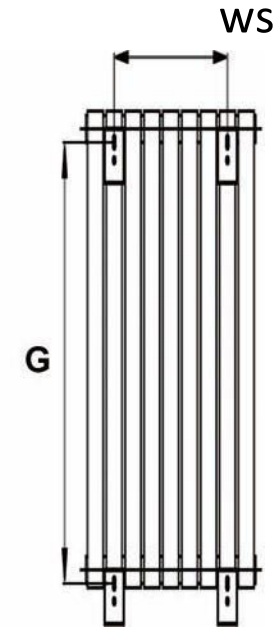

## GENERAL RECOMMENDATION


Before fitting the radiator, it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil etc..

When the system water PH is outside the 5.5 - 8.5 range and/or when the dissolved is above 0.1 mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (Silicon rubber too).

In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material. Top view If the system water exceeds 50 degrees warning mark near the radiator to avoid any accidental scald. Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemicals against during cleaning operations.

It is prohibited to climb onto the radiator.

. Maximum working temperature is 95 centigrade degree. Maximum working pressure is 6 bar.

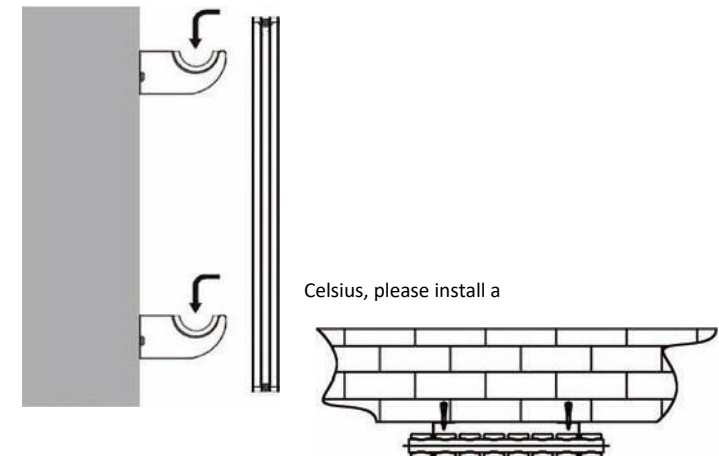

Product Code	Product Name	Pipe number	Height	Width	Thickness	Hanger Axes Horizontal	Wall to front face of the bracket	Hanger Axes vertical	Wall to pipe center distance	Empty Weight	Water volume
			H	w		s			c		
			mm	mm	mm	mm	mm	mm	mm	mm	kg
RV-HRH066AD/WD	Flat 600 X 420 DBL	6	600	420	62	210	94	555	63	10.9	4.39
RV-HRH069AD/WD	Flat 600 X 630 DBL	9	600	630	62	420	94	555	63	16.1	6.58
RV-HRH611AD/WD	Flat 600 X 770 DBL	11	600	770	62	560	94	555	63	19.6	8.04
RV-HRH614AD/WD	Flat 600 X 980 DBL	14	600	980	62	770	94	555	63	24.8	10.23
RV-HRH617AD/WD	Flat 600 X 1190 DBL	17	600	1190	62	980	94	555	63	30.0	12.43
RV-HRH621AD/WD	Flat 600 X 1470 DBL	21	600	1470	62	1260	94	555	63	36.9	15.35
RV-HRV166AD/WD	Flat 1600 X 420 DBL	6	1600	420	62	210	94	1555	63	26.5	10.64
RV-HRV167ADN\D	Flat 1600 X 490 DBL	7	1600	490	62	280	94	1555	63	32.9	12.41
RV-HRV168ADM/D	Flat 1600 X 560 DBL	8	1600	560	62	350	94	1555	63	35.1	14.18
RV-HRV185AD/WD	Flat 1800 X 350 DBL	5	1800	350	62	140	94	1755	63	24.9	9.91
RV-HRV186ADN\D	Flat 1800 X 420 DBL	6	1800	420	62	210	94	1755	63	29.5	11.89
RV-HRV187AD/WD	Flat 1800 X 490 DBL	7	1800	490	62	280	94	1755	63	34.2	13.87
RV-HRV188ADNVD	Flat 1800 X 560 DBL	8	1800	560	62	350	94	1755	63	39.7	15.85
RV-HRV189AD/WD	Flat 1800 X 630 DBL	9	1800	630	62	420	94	1755	63	44.3	17.83