

DMD
COLLECTIVE

DMD118

Soft Sherpa Spanish Grey
Fleece Electric Blanket

Thank you for choosing this item.
Please read the entire manual carefully before
first use and retain for future reference.

Health & Safety Guidelines

- Unpack the product and ensure that it has not been damaged before being opened.
- Only use the product for its intended purpose.
- This is not a toy, do not leave children unattended when using the electric blanket.
- Use the attached fixation band to fix the product to the bed. If used on an adjustable bed, ensure that the blanket and cord will not be trapped or stretched.
- Keep away from fire or flammable materials.
- Do not insert pins or sharp objects into the throw.
- Do not tuck under a mattress.
- Do not use when wet or around liquids including bathtubs and showers.
- Do not use the throw when folded or creased.
- Unplug the electrical power cord when not in use.
- Do not use power cord wet hands.
- Only operate with the supplied lead and controller.
- Not intended for hospital use.
- Product intended only for household use.
- Do not overheat the controller or trap it under a pillow, mattress or blanket.
- If the supply cord is damaged, it must be replaced by the manufacturer.
- Not suitable for infants and young children (0-3 years)
- Do not use on sofa beds or inflatable beds.
- Do not use a hot water bottle while using the electric blanket.
- When storing the throw, allow it to cool down fully before folding.

Cleaning Your Electric Blanket:

Important Note: The electric blanket can be washed. Do not dry clean.

Washing:

ALWAYS DISCONNECT THE CONTROLLER AND POWER LEAD FROM THE THROW BEFORE WASHING.

Before washing, it is essential to measure the throw to make sure it has returned to its original size after washing.

When hand washing, use warm water with mild washing powder or detergent. Soak for 5 minutes and gently wash and rinse thoroughly in clean water.

For machine washing, **wash as wool at 30°C/86°F.**

Drying:

Air-drying is recommended, NEVER wring the blanket.


Do not poke on the wired areas of the throw as this will damage the internal circuit.

Always ensure the throw is 100% dry and has returned to its original size before use.

Operating Instructions

Once the blanket is UNFOLDED, insert the power lead into the socket. Use an extension cord if necessary.

To turn on the heated blanket, press the power button, then the temperature setting button. A number corresponding to the setting will appear in the indicator panel. The throw will slowly begin to warm up.

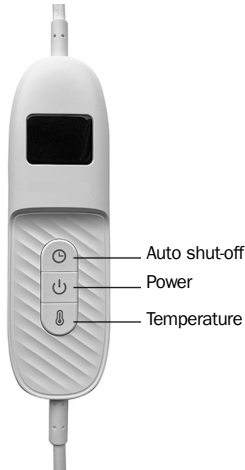

Level	Minutes/Hours
1	20
2	40
3	60 (1hr)
4	80 (1hr 20min)
5	100 (1hr 40min)
6	120 (2hr)
7	140 (2hr 20min)
8	160 (2hr 40min)
9	180 (3hr)

- There are 9 heat levels, with the default being 1. To adjust the temperature, push the temperature button and select from levels 2 to 9. This increases at one-unit intervals.
- Once you've reached 9, pressing the temperature setting button again will reset it to 1.
- If the throw becomes too warm, adjust the heating level to 1 or 2 by pressing through the temperature settings.
- Temperature settings 2 and 3 are for heating up. Setting 1 allows for continuous operation. Set the temperature to level 1 before going to sleep.
- To switch off your heated throw, press the power button. The indicator display should not show anything. Turn it off and remove the plug from the socket.

Auto Shut-Off


- If you don't set a timer on this device, the product will auto-shut off in 20 minutes.
- To alter the timer setting, push the auto shut-off button after selecting the temperature. Choose a setting between 2 and 9. Each setting extends the duration by 20 minutes.
- When you select the auto shut-off time, the panel displays a dot after the number.

Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

This device is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the device by a person responsible for their safety.

Technical Specifications

Product name

DMD Collective Soft Sherpa Spanish Grey Fleece Electric Blanket

Supplier code

DMD118

Voltage

Input: 220-240V AC~ 50/60Hz

Power

160W

Size

120cm x 160cm



The Ace Supply Co Ltd, Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

For Product Support:

E: support@dmdcollective.co.uk

T: +44 (0)161 447 8597

EU Registered. Address:

Ace Supply Co (Europe) Ltd. 25 Herbert Place,
Dublin 2, D02 A098, Republic of Ireland

www.dmdcollective.co.uk